



## Section: PRO 1800 EL. CHAIN SAW

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3218					
1	1	1911-1211-01	Motor housing			
2	1	1911-1212-01	Transmission housin			
3	1	1911-1217-01	Cover			
4	1	1911-1256-01	Cover assy		Inkl. 49	
5	1	1911-1213-01	Throwing guard arm			
6	1	1911-1214-01	Hand guard			
7	1	1911-1219-01	Handle			
8	2	1911-1220-01	Clutch grip			
14	1	1911-1215-01	Oil tank			
15	1	1911-1216-01	Tank cap			
16	1	1911-1189-01	Pump housing w. bea			
17	1	1911-1257-01	Pump wheel			
19	1	1911-1224-01	Switch lever			
20	1	1911-1225-01	Catch			
21	1	1911-1258-01	Gear wheel			
22	1	1911-1221-01	Switch arm			
23	1	1911-1222-01	Angle lever			
28	2	1911-1184-01	Brush holder			
30	1	1911-1218-01	Air guide			
31	1	1911-1226-01	Bar attachment			
32	1	1911-1232-01	Bracket			
33	1	1911-1260-01	Switch rod assy		Inkl. 18,114,115,12	
35	1	1911-1261-01	Clutch band			
37	1	1911-1228-01	Brake band			
38	1	1911-1229-01	Key			
39	1	1911-1230-01	Brake lever			
40	1	1911-1231-01	Catch			
45	1	1911-1157-01	Sprocket			
50	1	1911-1156-01	Ball bearing			
51	1	1911-1245-01	Roller			
52	1	1911-1269-01	Spacer ring			
53	1	1911-1223-01	Link roller			
54	1	1911-1174-01	Tension pin			
57	1	1911-1253-01	Armature w. ball be		Inkl. 29, 44	
58	1	1911-1254-01	Stator			
59	2	1911-1252-01	Brush holder			
60	1	1911-1251-01	Switch			
63	1	1911-1104-01	Cable connection			
64	1	1911-1179-01	Connection cord			
65	1	1911-1180-01	Grommet			
66	1	1911-1267-01	Holder			
70	1	1911-1259-01	Cable w. condensor		L = 150	
73	1	1911-1255-01	Overload guard			
74	1	1911-1190-01	Cable w. drossel		L = 235	
75	1	1911-1191-01	Cable w. drossel		L = 480	
83	1	1911-1227-01	Needle collar			
84	1	1911-1171-01	O-ring			
85	1	1911-1155-01	Chain wheel			
86	1	1911-1266-01	Bar		16" (3/8"-0.050)	
87	1	1911-1265-01	Chain		91VG (3/8")	
88	1	1911-1165-01	Seal ring			
94	3	1911-1263-01	Screw			
95	17	1911-1069-01	Screw			
96	2	1911-1268-01	Screw			
97	3	1911-1105-01	Screw			
98	1	1911-1237-01	Screw			
99	2	1911-1051-01	Screw			
100	1	1911-1233-01	Screw			
101	1	1911-1172-01	Screw			
102	2	1911-1235-01	Screw			
103	1	1911-1234-01	Screw			
104	1	1911-1244-01	Rivet			
105	1	1911-1243-01	Rivet			
106	1	1911-1242-01	Pin			
107	1	1911-1239-01	Washer			
108	1	1911-1241-01	Washer			

## Section: PRO 1800 EL. CHAIN SAW

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3218					
109	1	1911-1240-01	Washer			
110	2	1911-1236-01	Nut			
111	1	1911-1173-01	Nut			
112	1	1911-1238-01	Shaft spring			
113	1	1911-1250-01	Lock ring			
120	1	1911-1246-01	Brake spring			
121	1	1911-1249-01	Lock spring			
122	1	1911-1175-01	Pump spring			
123	1	1911-1247-01	Catch spring			
125	1	1911-1248-01	Angle spring			
126	3	1911-1192-01	Plastic pin			
127	2	1911-1193-01	Plastic pin			
128	1	1911-1262-01	Oil hose			
129	1	1911-1149-01	Bar guard			
130	1	1911-1153-01	Combi tool		Ej ill/not ill.	

test