



Section: ST 1000 EL. TRIMMER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1000					
1	4	1911-1441-01	Screw			
2	2	1911-1440-01	Screw			
3	2	1911-1439-01	Screw			
4	1	1911-1445-01	Screw			
5	1	1911-1447-01	Handle assy			
6	1	1911-1416-01	Grommet			
7	1	1911-1446-01	Cover			
8	1	1911-1456-01	Motor assy		Inkl. pos 27, 56	
9	1	1911-1471-01	..Coupling			
10	1	1911-1428-01	..Pin			
11	1	1911-1425-01	..Ring			
12	1	1911-1430-01	..Ball bearing			
13	1	1911-1418-01	..Fan			
14	1	1911-1424-01	..Ring			
15	1	1911-1417-01	..Ring			
16	1	1911-1429-01	..Ball bearing			
17	4	1911-1442-01	Screw			
18	1	1911-1470-01	Cover			
19	4	1911-1444-01	Screw			
20	2	1911-1420-01	Spring			
21	2	1911-1421-01	Brush holder			
22	2	1911-1419-01	Brushes			
23	1	1911-1423-01	..Housing			
24	1	1911-1422-01	..Cover			
25	2	1911-1443-01	..Screw			
26	1	1911-1458-01	Connection cable			
27	1	1911-1468-01	..Armature w. housin		Inkl. pos 23 - 25	
28	2	1911-1435-01	Nut			
29	1	1911-1463-01	Spring			
30	1	1911-1455-01	Catch button			
31	1	1911-1426-01	Overload guard			
32	1	1911-1427-01	Switch			
33	1	1911-1466-01	Wire			
34	1	1911-1453-01	Lever			
35	1	1911-1434-01	..Screw			
36	1	1911-1448-01	Handle front assy		Inkl. pos 35, 37 -	
37	1	1911-1437-01	..Nut			
38	1	1911-1438-01	..Washer			
39	1	1911-1432-01	Screw			
40	1	1911-1465-01	Drive shaft housing			
41	1	1911-1461-01	Flex shaft			
42	1	1911-1459-01	Bearing box assy		Inkl. pos 43	
43	1	1911-1460-01	..Flange			
44	1	1911-1450-01	..Insert			
45	2	1911-1436-01	..Washer			
46	2	1911-1433-01	..Washer			
47	2	1911-1431-01	..Screw			
48	1	1911-1449-01	..Blade			
49	1	1911-1462-01	Guard assy		Inkl. pos 2, 45 - 4	
50	1	1911-1467-01	Cutterhead assy		Inkl. pos 44, 51 -	
51	2	1911-1454-01	..Eyelet			
52	1	1911-1451-01	..Cover			
53	1	1911-1464-01	..Spool w. line			
53A	1	1911-9007-04	Cutting line (2.0 m)		0.45 kg (130 m)	
53A	1	1911-9007-08	Cutting line (2.0 m)		15 m	
54	1	1911-1452-01	..Spring			
55	1	1911-1457-01	Condensor			
56	1	1911-1469-01	..Rotor assy		Inkl. pos 9 - 16	