



## Section: 1333 AUGER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2861					
480	1	1812-1261-01	Auger pulley			
482	1	1812-1609-01	Key			
483	1	9699-0038-02	Flat washer			
484	1	9743-5421-32	Nut			
485	1	1812-1397-01	Spacer			
490	1	1812-1250-01	Retainer bearing			
491	1	1812-1383-01	Ball bearing			
493	3	9988-3619-16	Screw			
499	3	9795-3631-02	Nut			
500	1	1812-1602-01	Auger housing			
509	2	1812-1430-01	Plug			
510	1	1812-1598-01	Scraper blade			
511	3	9899-3622-16	Screw			
514	5	9795-3631-02	Nut			
520	1	1812-1596-01	Auger-LH			
521	1	1812-1595-01	Auger-RH			
522	1	1812-9006-01	Shear bolt kit			
524	3	1812-0811-01	.Locking nut			
525	2	1812-0347-01	Bearing			
527	4	1133-0057-01	Screw			
536	2	9899-3622-16	Screw			
540	2	1812-1603-01	Height adjust skid			
541	4	9899-3622-16	Screw			
544	4	9795-3631-02	Nut			

test