



Section: 928-928T GEAR CASE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2837	2838				
300	1	1	1812-0228-01	Gear case-RH		
301	1	1	1812-0227-01	Gear case-LH		
303	7	7	9987-5125-16	Screw		
304	8	8	9743-5121-02	Nut		
305	1	1	9987-5145-12	Screw		
306	1	1	1812-0346-01	Oil plug		
310	2	2	1812-0344-01	Ring		
311	2	2	1812-0343-01	Bearing		
312	2	2	1812-0345-01	Washer		
313	1	1	1812-1442-01	Auger shaft		
314	1	1	1812-0226-01	Gasket		
315	1	1	1812-0335-01	Worm gear		
316	1	1	1812-0409-01	Woodruffkey		
320	1	1	1812-0341-01	Ring		
321	1	1	1812-1259-01	Flange bearing		
322	1	1	1812-0857-01	Thrust washer		
323	1	1	1812-0285-01	Needle bearing		
324	1	1	1812-0857-01	Thrust washer		
326	1	1	1812-0307-01	Key		
327	1	1	1812-0336-01	Gear		
330	1	1	1812-0297-01	Bearing		
340	1	1	1812-1523-01	Impeller shaft		

test