



## Section: KANZAKI TRANSAXLE K46G TRANSAXLE CASE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
------	----------	---------------	-------------	-----	-------	-----

K46G

2	1	1139-1268-01	Transaxle case set		Inkl. pos 3 - 7	
3	1	1139-1239-01	.Upper housing assy		Inkl. pos 4 - 6	
7	1	1139-1271-01	.Lower housing			
8	2	1139-1236-01	Hose clamp			
9	1	1139-1237-01	Tube			
10	1	1139-1238-01	Breather collar			
11	1	1139-1100-01	Vent valve assy		Inkl. pos 12 - 13	
14	1	1139-1150-01	Magnet			
15	1	1139-1240-01	Holder-magnet			
16	1	1139-1241-01	Oil seal			
17	1	1139-1028-01	Spring			
18	1	1139-1251-01	Shaft-bypass			
19	1	1139-1189-01	Lever-bypass			
20	1	1139-1161-01	Ring			
21	1	1139-1275-01	Bore plug			
22	1	1139-1104-01	Snap ring			
23	1	1139-1279-01	Pin			
24	1	1139-1280-01	Pin			
25	2	1139-1117-01	O-ring			
26	1	1139-1119-01	Seal			
27	14	1139-0244-01	Tapping screw			
28	2	1139-1295-01	Tapping screw			
29	2	1139-1103-01	Seal washer			
30	2	1139-1123-01	Bolt			

test