



Section: PRO 1800 EL. CHAIN SAW

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3218	3218				
	-11	-12				
1	1	1	1911-1211-01			
2	1	1	1911-1212-01			
3	1	1	1911-1217-01			
4	1	1	1911-1256-01		Inkl. 49	
5	1	1	1911-1213-01			
6	1	1	1911-1214-01			
7	1	1	1911-1219-01			
8	2	2	1911-1220-01			
14	1	1	1911-1215-01			
15	1	1	1911-1216-01			
16	1	1	1911-1189-01			
17	1	1	1911-1257-01			
19	1	1	1911-1224-01			
20	1	1	1911-1225-01			
21		1	1911-1483-01			
21	1		1911-1258-01			
22	1	1	1911-1221-01			
23	1	1	1911-1222-01			
28	2	2	1911-1184-01			
30	1	1	1911-1218-01			
31	1	1	1911-1226-01			
32	1	1	1911-1232-01			
33	1	1	1911-1260-01		Inkl. 18,114,115,12	
35	1	1	1911-1261-01			
37	1	1	1911-1228-01			
38	1	1	1911-1229-01			
39	1	1	1911-1230-01			
40	1	1	1911-1231-01			
45	1	1	1911-1157-01			
50	1	1	1911-1156-01			
51	1	1	1911-1245-01			
52	1	1	1911-1269-01			
53	1	1	1911-1223-01			
54	1		1911-1174-01			
57	1	1	1911-1253-01		Inkl. 29, 44	
58	1	1	1911-1254-01			
59	2	2	1911-1252-01			
60	1	1	1911-1251-01			
63	1	1	1911-1104-01			
64	1	1	1911-1179-01			
65	1	1	1911-1180-01			
66	1	1	1911-1267-01			
70	1	1	1911-1259-01		L = 150	
73		1	1911-1181-01			
73	1		1911-1255-01			
74	1	1	1911-1190-01		L = 235	
75	1	1	1911-1191-01		L = 480	
83	1	1	1911-1227-01			
84	1	1	1911-1171-01			
85	1	1	1911-1155-01			
86	1		1911-1266-01		16" (3/8"-0.050)	
86		1	1911-1486-01		16"	
87		1	1911-1485-01			
87	1		1911-1265-01		91VG (3/8")	
88	1	1	1911-1165-01			
94	3	3	1911-1263-01			
95	17	17	1911-1069-01			
96	2	2	1911-1268-01			
97	3	3	1911-1105-01			
98	1	1	1911-1237-01			
99	2	2	1911-1051-01			
100	1	1	1911-1233-01			
101	1		1911-1172-01			
102	2	2	1911-1235-01			
103	1	1	1911-1234-01			
104	1	1	1911-1244-01			

Section: PRO 1800 EL. CHAIN SAW

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3218	3218				
	-11	-12				
105	1	1	1911-1243-01	Rivet		
106	1	1	1911-1242-01	Pin		
107	1	1	1911-1239-01	Washer		
108	1	1	1911-1241-01	Washer		
109	1	1	1911-1240-01	Washer		
110	2	2	1911-1236-01	Nut		
111	1	1	1911-1173-01	Nut		
112	1	1	1911-1238-01	Shaft spring		
113	1	1	1911-1250-01	Lock ring		
120	1	1	1911-1246-01	Brake spring		
121	1	1	1911-1249-01	Lock spring		
122	1	1	1911-1175-01	Pump spring		
123	1	1	1911-1247-01	Catch spring		
125	1	1	1911-1248-01	Angle spring		
126	3	3	1911-1192-01	Plastic pin		
127	2	2	1911-1193-01	Plastic pin		
128	1	1	1911-1262-01	Oil hose		
129	1	1	1911-1149-01	Bar guard		
130	1		1911-1153-01	Combi tool	Ej ill/not ill.	
130		1	1911-1484-01	Tool	Ej ill/not ill.	

test