



Section: SB 31 BRUSH CUTTER DRIVE SHAFT STRINGHEAD

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3100					
1	1	1911-1335-01	Throttle housing as		Inkl. 2, 3	
2	1	1911-1404-01	.Screw			
3	1	1911-1405-01	.Nut			
4	2	1911-1349-01	Wire clips			
5	1	1911-1402-01	Drive shaft housing			
6	1	1911-1406-01	Handle bar assy		Inkl. 7, 8	
7	1	1911-1302-01	.Grip			
8	1	1911-1301-01	.Tube closure			
9	1	1911-1303-01	Handle bracket assy		Inkl. 10-15	
10	4	1911-1360-01	.Screw			
11	1	1911-1361-01	.Handle clamp-upper			
12	1	1911-1362-01	.Handle clamp-middl			
13	1	1911-1363-01	.Handle clamp-lower			
14	4	1911-1364-01	.Nut			
15	1	1911-1294-01	.Screw			
16	1	1911-1355-01	Click-link coupling		Inkl. 17-20	
17	1	1911-1379-01	.Screw			
18	1	1911-1356-01	.Screw			
19	1	1911-1357-01	.Adjustment knob as		Inkl. 20	
20	1	1911-1374-01	..Nut			
21	1	1911-1341-01	Drive shaft housing			
22	1	1911-1340-01	Flex drive shaft			
23	1	1911-1304-01	Screw set			
24	1	1911-1336-01	Shield and blade		Inkl. 25	
25	1	1911-1293-01	.Blade			
26a	1	1911-1314-01	Screw set			
26b	1	1911-1397-01	Screw set			
27a	1	1911-1324-01	.Screw set			
27b	1	1911-1392-01	.Screw set			
28	1	1911-1294-01	.Screw			
29a	1	1911-1312-01	Gearbox assy		Inkl. 27a, 31a, 41	
29b	1	1911-1390-01	Gearbox assy		Inkl. 27b, 28, 45-5	
30	1	1911-1321-01	Blade shield			
31a	1	1911-1313-01	.Blade driver			
31b	1	1911-1393-01	Blade driver			
32	1	1911-1316-01	Retaining washer			
33	1	1911-1305-01	Spool shaft			
34	1	1911-1306-01	.Outer spool assy		Inkl. 35	
35	1	1911-1307-01	..Retainer			
36	1	1911-1308-01	.Spring			
37	1	1911-1273-01	.Reel and line			
37A	1	1911-9008-08	Cutting line (2.4 m		15 m	
37A	1	1911-9008-04	Cutting line (2.4 m		0.45 kg (90 m)	
38	1	1911-1309-01	.Bump head knob			
39	1	1911-1276-01	4-tooth blade		Inkl. 40	
40	1	1911-1323-01	.Blade cover			
41	1	1911-1315-01	.Nut			
42	1	1911-1334-01	Shoulder harness		Inkl. 43	
43	1	1911-1339-01	.Harness clip			
44	1	1911-1348-01	Foam pad			
45	1	1911-1388-01	.Housing-left			
46	1	1911-1389-01	.Housing-right			
47	1	1911-1391-01	.Pinion gear			
48	1	1911-1396-01	..Bushing			
49	1	1911-1395-01	..Output gear			
50	1	1911-1394-01	.Output shaft assy		Inkl. 48, 49	
51	1	1911-1274-01	Bump head assy		Inkl. 34-38	