



Section: ST 311 TRIMMER DRIVE SHAFT STRINGHEAD

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	3625					
1	1	1911-1376-01	Throttle housing as		Inkl. 2, 3	
2	1	1911-1412-01	.Trigger spring			
3	1	1911-1365-01	.Throttle trigger			
4	1	1911-1387-01	Throttle cable			
5	1	1911-1275-01	Handle			
6	1	1911-1327-01	Handle hardware			
7	1	1911-1338-01	Drive housing			
8	1	1911-1278-01	Clamp			
9	1	1911-1414-01	Flexshaft			
10	1	1911-1366-01	Screw set			
11	1	1911-1326-01	Bushing housing ass			
12	1	1911-1294-01	Screw			
13	1	1911-1344-01	Shield and blade as		Inkl. 14	
14	1	1911-1293-01	.Blade			
15	1	1911-1328-01	.Outer spool		Inkl. 16	
16	1	1911-1413-01	..Retainer			
17	1	1911-1295-01	.Spring			
18	1	1911-1270-01	.Reel and line			
18A	1	1911-9007-04	Cutting line (2.0 m		0.45 kg (130 m)	
18A	1	1911-9007-08	Cutting line (2.0 m		15 m	
19	1	1911-1296-01	.Bump head knob			
20	1	1911-1325-01	Grip			
21	1	1911-1343-01	Switch			
22	1	1911-1403-01	Limiter sleeve			
23	1	1911-1294-01	Screw			
24	1	1911-1271-01	Bump head assy		Inkl. 15-19	
99	1	1911-1272-01	Sh. strap (accessor		Ej ill/not ill.	

TEST