



Section: 928-928T AUGER HOUSING

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2837	2838				
480	1	1	1812-1261-01	Auger pulley		
484	1	1	1812-1673-01	Nut		
490	1	1	1812-1690-01	Ball bearing retain		
491	1	1	1812-1383-01	Ball bearing		
492	1	1	1812-1609-01	Key		
493	3	3	9988-3613-16	Screw		
495	1	1	1812-1739-01	Spacer		
499	3	3	9795-3631-02	Nut		
500	1	1	1812-1732-01	Auger housing		
509	2	2	1812-1430-01	Plug		
510	1	1	1812-1449-01	Scraper blade		
511	5	5	9899-3622-16	Screw		
514	5	5	9795-3631-02	Nut		
520	1	1	1812-1445-01	Auger-LH		
521	1	1	1812-1454-01	Auger-RH		
522	1	1	1812-9005-01	Shear bolt kit		
523	3	3	1812-0531-01	.Spacer		
524	3	3	1812-0812-01	.Locking nut		
525	2	2	1812-0347-01	Bearing		
527	4	4	1133-0057-01	Screw		
540	2	2	1812-1603-01	Height adjust skid		
541	4	4	9899-3622-16	Screw		
544	4	4	9795-3631-02	Nut		

test