



Section: VILLA STEERING

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	2855	2858	2855	2858			
	ALT1	ALT1	ALT2	ALT2			
1	4	4	4	4	1134-0041-01	Bushing	
2	1	1	1	1	1134-3022-01	Cable holder	
3	3	3	3	3	1134-3022-01	Cable holder	
4	2	2	2	2	1134-9025-01	Steering pulley-kit	Sats 2 st/kit of 2
5	4	4	4	4	9942-1030-16	Screw	
6	1	1	1	1	1134-9023-01	Steering wire	
7	1	1	1	1	1134-1310-01	Compression spring	
8	1	1	1	1	9699-0090-02	Flat washer	
9	1	1	1	1	9747-0831-02	Lock nut	
10	1	1	1	1	9959-0816-16	Screw	
11	1		1		1134-2390-01	Steering wheel	
11		1		1	1134-3754-01	Steering wheel w.kn	
12		1		1	1134-3769-01	.Steering wheel but	
13		1		1	1134-3752-01	..Knob holder	
14		1		1	9997-0865-12	..Screw	
15		1		1	1134-1565-06	..Spacer	
16		2		2	9699-0090-02	..Flat washer	
17		1		1	9747-0831-02	..Lock nut	
18		1		1	9403-0043-70	..Plug	
19		1		1	9403-0113-00	..Nut cap	
20	1	1	1	1	1134-1424-01	Steering column	
21	1	1	1	1	1134-1933-01	Steering pulley	
22	1	1	1	1	9595-0262-00	Locating pin	
23	2	2	2	2	1134-1901-01	Bearing	
40	1	1	1	1	1134-0341-01	Washer	
41	2	2			1134-3247-02	Tie rod	
41			2	2	1134-3247-05	Tie rod	
42			1	1	1134-5009-02	Spindle-LH	
42	1	1			1134-1428-01	Spindle-L.H.	
43	1	1			1134-1428-02	Spindle-R.H.	
43			1	1	1134-5009-01	Spindle-RH	
44	1	1	1	1	1134-1500-03	Steering pulley	
45	1	1	1	1	1134-9024-01	Bearing	Sats 4 st/kit of 4
46	1	1	1	1	1134-1583-01	Shaft-steering pull	
47			1	1	1134-5012-01	Rear axle	
47	1	1			1134-1634-01	Rear axle	
48	2	2	2	2	9501-0500-00	Grease joint	
49	3	3	3	3	9650-0020-04	Circlip	
50	2	2	2	2	9699-0088-02	Flat washer	
51	4	4	3	3	9747-0831-02	Lock nut	
52	2	2	2	2	9699-0028-02	Flat washer	
53A	4	4	2	2	9997-0825-16	Screw	
53B			1	1	9997-0835-12	Screw	
54	1	1	1	1	9501-0500-00	Grease joint	
55	1	1	1	1	9650-0020-04	Circlip	
56	1	1	1	1	9699-0088-02	Flat washer	
57			2	2	1134-4706-01	Rim	
57	2	2			1134-4342-01	Rim	
58	1	1	1	1	1134-9026-01	Bearing bush kit	Sats 4 st/kit of 4
59	2	2	2	2	9545-0117-00	Tyre	13 x 5.00-6
59A					9545-0204-00	Inner tube	Reservdel/spare par
60	2	2	2	2	9545-0500-00	Valve	
61	2	2	2	2	1134-0341-01	Washer	
62	2	2	2	2	9650-0020-04	Circlip	
63	2	2	2	2	1134-4344-01	Hub cap	
64			1	1	1134-5030-01	Spacer	
70	1	1	1	1	9595-0262-00	Locating pin	
71	1	1	1	1	9699-0103-02	Flat washer	0.5 mm
71	1	1	1	1	9699-0114-02	Flat washer	1.0 mm