



Section: SB 28 BRUSH CUTTER DRIVE SHAFT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
6111						
1	1	1911-3830-01	Handle assy		Inkl. pos 2 - 11	
2	4	1911-3001-01	.Screw			
3	2	1911-3002-01	.Screw			
4	1	1911-3697-01	.Safety lever			
5	1	1911-3687-01	.Spring			
6	1	1911-3696-01	.Throttle lever			
7	1	1911-3089-01	.Spring			
8	1	1911-3681-01	.Stop plate			
9	1	1911-3656-01	.Screw			
10	1	1911-3699-01	.Stop knob			
11	1	1911-3700-01	.Reduction			
12	1	1911-3717-01	Throttle cable			
13	1	1911-3703-01	Wire sheath			
14	1	1911-3674-01	Switch cable			
15	1	1911-3669-01	Earth cable			
16	1	1911-3831-01	Handle-front assy		Inkl. pos 17 - 19	
17	4	1911-3008-01	.Screw			
18	4	1911-3015-01	.Washer			
19	4	1911-3278-01	.Nut			
20	1	1911-3820-01	Transmission tube			
21	1	1911-3712-01	Transmission shaft		Inkl. pos 22 - 23	
22	1	1911-3684-01	.Bearing hub			
23	1	1911-3707-01	.Clutch drum			
24	1	1911-3828-01	Transm.support assy		Inkl. pos 25 - 28	
25	1	1911-3066-01	.Lock ring			
26	1	1911-3035-01	.Ball bearing			
27	2	1911-3251-01	.Screw			
28	1	1911-3657-01	.Screw			
29	4	1911-3012-01	Screw			
32	2	1911-3216-01	Washer			
33	2	1911-3009-01	Screw			
34	1	1911-3006-01	.Screw			
35	1	1911-3077-01	.Line cutter			
36	1	1911-3022-01	.Nut			
37	1	1911-3216-01	.Washer			
38	1	1911-3201-01	Safety cover assy		Inkl. pos 34 - 37	
39	1	1911-3724-01	Harness			