



Section: SB 30 BRUSH CUTTER DRIVE SHAFT

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
6112						
1	1	1911-3203-01	Handle assy		Inkl. pos 2 - 9	
2	1	1911-3001-01	.Screw			
3	1	1911-3008-01	.Screw			
4	1	1911-3217-01	.Nut			
5	1	1911-3053-01	.Stop switch			
6	1	1911-3108-01	.Throttle lever			
7	1	1911-3109-01	.Safety lever			
8	1	1911-3089-01	.Spring			
9	1	1911-3090-01	.Spring			
10	1	1911-3720-01	Throttle wire			
11	1	1911-3704-01	Wire sheath			
12	1	1911-3675-01	Switch cable			
13	1	1911-3676-01	Earth cable			
14	1	1911-3719-01	Handle assy		Inkl. pos 15 - 23	
15	1	1911-3114-01	.Knob-left			
16	1	1911-3818-01	.Handgrip support a		Inkl. pos 17 - 21	
17	4	1911-3263-01	..Screw			
18	4	1911-3015-01	..Washer			
19	4	1911-3217-01	..Nut			
20	1	1911-3691-01	..Rubber facing			
21	4	1911-3003-01	..Screw			
22	2	1911-3688-01	.Handle lock			
23	2	1911-3698-01	.Vibration grommet			
24	1	1911-3820-01	Transmission tube			
25	1	1911-3712-01	Transmission shaft		Inkl. pos 26 - 27	
26	1	1911-3684-01	.Bearing hub			
27	1	1911-3707-01	.Clutch drum			
28	1	1911-3828-01	Transm.support assy		Inkl. pos 29 - 32	
29	1	1911-3035-01	.Ball bearing			
30	1	1911-3066-01	.Lock ring			
31	2	1911-3251-01	.Screw			
32	1	1911-3657-01	.Screw			
33	4	1911-3012-01	Screw			
34	1	1911-3829-01	Support assy-harnes		Inkl. pos 35, 37	
35	4	1911-3251-01	.Screw			
36	1	1911-3685-01	Pin			
37	2	1911-3691-01	.Rubber facing			
38	2	1911-3216-01	Washer			
39	2	1911-3009-01	Screw			
40	1	1911-3006-01	.Screw			
41	1	1911-3077-01	.Line cutter			
42	1	1911-3022-01	.Nut			
43	1	1911-3216-01	.Washer			
44	1	1911-3201-01	Safety cover assy		Inkl. pos 40 - 43	
45	1	1911-3724-01	Harness			