



Section: HERKULES MB432 WHEEL SUSPENSION (aluminium wheels)

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	1586	1686				
1	2	2	1111-0817-03	Wheel w/o bearing		
2	4	4	9549-0015-00	Ball bearing		
3	2	2	9943-0620-16	Screw		
4	2	2	9699-0100-02	Washer		
5	4	2	1111-0466-00	Seal grease		
6	2	2	1111-1138-01	Spring		
7	1	1	1111-2805-03	Front axle		
8	2	2	1111-1504-01	Retainer		
9	2	2	9947-0616-16	Screw		
10	1	1	1111-3114-01	Rear axle		
11	2	2	1111-2814-01	Bushing		
12	4	4	9947-0616-16	Screw		
14	1		1111-2924-02	Axle		
15	2		9675-0017-02	Lock washer		
16		2	1111-3229-01	Cover plate		
19	2	2	1111-3060-01	Spring		
20A	2		1111-0817-04	Wheel w/o bearing		
20B		2	1111-2346-01	Wheel w/o bearing		
21A	4		9549-0015-00	Ball bearing		
21B		4	9549-0001-00	Ball bearing		
22	2	2	9943-0620-16	Screw		
23	2		9699-0100-02	Washer		
24	1	1	1111-2816-01	Height adj.lever		
25	1	1	1111-2817-01	Lever knob		
26	2	2	9943-0612-16	Screw		
27	1	1	1111-2818-02	Height adjusting ro		
28	2	2	9675-0011-00	Starlock		
29	1	1	1111-2819-01	Spring		
30	4	2	1111-1506-01	Hub cap		
31		2	1111-2077-01	Hub cap		
32		2	1111-2109-01	Gear ring		
33		8	9841-0410-16	Screw		
34		2	1111-2423-01	Spacer		
35		2	9699-0037-02	Washer		