



Section: 1174 HST AUGER HOUSING

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2846					
480	1	1812-1261-01	Auger pulley			
484	1	1812-1673-01	Nut			
490	1	1812-1690-01	Ball bearing retain			
491	1	1812-1383-01	Ball bearing			
492	1	1812-1609-01	Key			
493	3	9988-3613-16	Screw			
495	1	1812-1739-01	Spacer			
499	3	9795-3631-02	Nut			
500	1	1812-1732-01	Auger housing			
509	2	1812-1430-01	Plug			
510	1	1812-1449-01	Scraper blade			
511	5	9899-3622-16	Screw			
514	5	9795-3631-02	Nut			
520	1	1812-1445-01	Auger-LH			
521	1	1812-1454-01	Auger-RH			
522	1	1812-9005-01	Shear bolt kit			
523	3	1812-0531-01	.Spacer			
524	3	1812-0812-01	.Locking nut			
525	2	1812-0347-01	Bearing			
527	4	1133-0057-01	Screw			
540	2	1812-1603-01	Height adjust skid			
541	4	9899-3622-16	Screw			
544	4	9795-3631-02	Nut			

test