

Section: 1384 DRIVE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2862					
200	1	1812-1713-01	Axle-swing plate			
201	1	1812-1686-01	Chain			
203	2	1812-1200-01	Bearing retainer		Utan lager, w/o bea	
204	2	1812-1207-01	Ball bearing			
206	4	1812-0385-01	Screw			
207	1	1812-1714-01	Hex shaft			
208	1	1812-1688-01	Chain			
209	1	1812-1712-01	Sprocket			
210	1	1812-1313-01	Trunion bearing			
211	1	1812-1790-01	Axle			
212	1	1812-1817-01	Friction disc wheel			
213	3	9988-3516-16	Screw			
214	1	1812-1755-01	Screw			
215	3	9795-3531-02	Nut			
216	1	1812-1760-01	Nut			
217	1	1812-1687-01	Retext ring			
218	2	1812-1207-01	Ball bearing			
220	2	1812-1200-01	Bearing retainer		Utan lager, w/o bea	
221	2	1812-0385-01	Screw			
223	1	1812-1725-01	Friction pulley			
225	1	1812-1701-01	Swing plate			
226	1	1812-1739-01	Spacer			
227	1	1812-1674-01	Flange lock nut			
229	2	1812-1672-01	Retainer ring			
230	1	1812-1718-01	Spring link			
232	2	1812-1672-01	Retainer ring			
234	3	1812-1675-01	Spring			
236	1	1812-1715-01	Intermed. sprocket		33T/7T	
238	2	9699-0038-02	Flat washer			