



Section: SH 46 HEDGE CUTTER

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	5110					
1	1	1911-1586-01	Housing			
2	1	1911-1582-01	Handle lever			
3	1	1911-1583-01	Switch lever			
4	2	1911-1587-01	Bearing adapter			
5	1	1911-1584-01	Switch slide			
6	1	1911-1585-01	Rocker switch			
7	2	1911-1074-01	Isolation washer			
8	1	1911-1073-01	Fan			
9	1	1911-1593-01	Motor w.condensor			
10	1	1911-1068-01	Connection cable			
11	1	1911-1066-01	Grommet			
16	1	1911-1502-01	Cable			
18	2	1911-1487-01	Snap switch			
19	1	1911-1104-01	Cable connection			
22	1	1911-1087-01	Gear wheel			
23	1	1911-1086-01	Shaft			
24	2	1911-1088-01	Carrier washer			
25	1	1911-1089-01	Separate washer			
26	2	1911-1092-01	Eccentric washer			
27	1	1911-1091-01	End washer			
30	2	1911-1082-01	Bearing bush			
31	1	1911-1099-01	Support blade			
33	2	1911-1083-01	Spring			
35	1	1911-1081-01	Disc spring			
37	12	1911-1105-01	Screw			
40	1	1911-1080-01	Nut			
41	1	1911-1592-01	Blade system assy		Inkl. pos 42 - 51	
42	1	1911-1588-01	.Blade-upper			
43	1	1911-1589-01	.Blade-lower			
44	1	1911-1591-01	.Blade rail-bended			
45	1	1911-1590-01	.Blade holder			
46	4	1911-1084-01	.Spacer			
47	1	1911-1109-01	.Spacer			
48	4	1911-1070-01	.Screw			
49	1	1911-1085-01	.Screw			
50	4	1911-1107-01	.Nut			
51	1	1911-1108-01	.Nut			
53	1	1911-1581-01	Blade cover			