



Section: TORNADO 51S-51SE TRANSMISSION

Pos.	Quantity		Spare part No	Description	Kit	Notes	New
	4281	4298	4286				
1	1	1	1	1111-2580-01		Front axle	
2	2	2	2	1111-2595-02		Bushing	
3	2	2	2	9699-0115-02		Washer	
5			2	1111-2108-01		Cover plate	
6			4	9943-0610-16		Screw	
7			2	1111-2083-01		Gear wheel	
8	2	2	2	1111-3060-01		Spring	
9	6	6	4	9699-0100-02		Washer	
10	6	6	4	9943-0612-16		Screw	
11			8	9841-0410-16		Screw	
15			2	1111-2109-01		Gear ring	
16			2	1111-2346-01		Wheel w/o bearing	
17			4	9549-0001-00		Ball bearing	
18			2	1111-2077-01		Hub cap	
20	2	2		1111-3085-01		Hub cap-yellow	
22	2	2		1111-2665-01		Wheel assy	
23	2	2		1111-3296-01		.Ball bearing	
25	2	2		1111-2600-02		Gear wheel	
26	2	2		1111-3395-01		Cover plate	
28	2	2	2	9836-9512-12		Screw	
29	2	2	2	1111-2922-01		Front support	
30	1	1	1	1111-2568-01		Transm.cover-yellow	
31	2	2	2	9849-8013-16		Screw	
35	1	1	1	1111-3056-01		Transmission assy	
35A	1	1	1	1111-3446-01		.Spring	Ej ill/not ill.
36	1	1	1	1111-3047-01		.Belt pulley	För d:o
36	1	1	1	9594-0055-00		.Locating pin	Ej ill/not ill.
38	2	2	2	1111-2382-01		Pin	
40	1	1	1	1111-9063-01		V-belt	
43	1	1	1	1111-3060-01		Spring	
45	1	1	1	1111-2915-01		Engine belt pulley	
46	1	1	1	9910-0612-16		Set screw	
49	1	1	1	9403-0115-70		Cover plug	
50		1		9403-0116-70		Grommet	
51	1	2	1	9579-0008-00		Cable holder	
52		2		9747-0531-02		Nut	
53		2		9693-0004-02		Washer	
54		1		9400-0291-01		Battery	
55		1		1111-2669-01		Battery clamp	
56		1		9400-0219-00		Charger	
57		1		1111-2018-01		Cable holder	
58		1		9836-9216-12		Screw	
59	1	1	1	1111-2954-01		Control handle	
60	1	1	1	1111-2967-04		Clutch cable	
61	1	1	1	1111-2969-01		Cable attachment	
62	1	1	1	9948-0640-16		Screw	
63	1	1	1	9747-0631-02		Lock nut	
65		2		9838-9540-12		Screw	
66		1		1111-2020-01		Housing	
67		1		1111-2021-01		Cover	
68		1		9838-9216-12		Screw	
69		1		1111-3359-01		Harness	
70		1		9400-0186-00		Starting switch ass	
71		1		1134-2848-01		.Ignition key	
72		1		1111-3380-01		Battery cable	