



## Section: 1174 HST HANDLE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2846					
720	1	1812-1813-01	Handle-upper			
723	1	9988-3532-12	Screw			
724	4	9988-3764-12	Screw			
725	7	9699-0035-02	Flat washer			
726	4	9683-0035-02	Lock washer			
727	4	9795-3731-02	Nut			
728	2	1812-0830-01	Plastic stop			
739	2	1812-0520-01	Protection			
740	1	1812-1804-01	Drive cable			
741	1	1812-1819-01	Auger cable			
744	1	1812-0254-01	Spring			
745	1	1812-1757-01	Nut			
750	1	1812-1818-01	Handle-lower			
751	4	1133-0057-01	Screw			
752	5	9683-0030-02	Lock washer			
753	1	1812-1823-01	Drive rod			
756	1	1133-0968-01	Clutch spring boot			
759	1	1812-1205-01	Spool			
760	1	9794-5131-02	Nut			
762	2	9988-3516-16	Screw			
764	1	1812-1807-01	Control bracket			
770	1	1812-1811-01	Shift bracket			
771	1	9988-3764-12	Screw			
772	2	1812-0304-01	Spring			
773	1	9699-0035-02	Flat washer			
774	1	9743-3721-32	Nut			
785	1	9743-3721-32	Nut			
787	1	1133-0650-01	Handle			
790	1	1812-1414-01	Bail rod-LH			
791	1	1812-1413-01	Bail rod-RH			
795	1	1812-1593-01	Cam retainer bracke			
796	1	1812-1765-01	Screw			
798	1	9743-3621-32	Nut			
799	1	1812-0834-01	Cam lock spring			
800	1	1812-1280-01	Pin latch			
801	2	1812-1483-01	Retainer			
802	1	9599-0036-02	Split pin			
803	1	9699-0029-02	Flat washer			
804	1	9743-3621-32	Nut			