



Section: ESTATE TORNADO HST TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2522					
1	1	1136-0287-01	Engine belt pulley			
2	1	9987-5351-12	Screw			
3	1	9683-0045-02	Washer			
5	1	1136-0432-01	V-belt			
6	1	1136-0489-01	Tension arm			
7	1	9997-0630-12	Screw			
8	2	1136-0123-01	Bushing			
9	1	9747-0831-02	Lock nut			
10	1	1136-0166-01	Spacer			
11	1	1136-0289-01	Idler pulley			
12	1	9699-0056-02	Flat washer			
13	1	9747-0831-02	Lock nut			
14	1	1136-0235-01	Pivot bolt			
15	2	1136-0309-01	Washer			
16	1	9747-0831-02	Lock nut			
17	1	1136-0348-01	Tie rod			
18	2	9799-0831-02	Nut			
19	1	1136-0208-01	Spring			
20	1	1136-0162-01	Spacer			
21	1	9997-0880-16	Screw			
22	1	9739-0831-22	Nut			
23	1	9747-0831-02	Lock nut			
24	1	1136-0290-01	Belt roller			
25	1	1136-0234-01	Stud bolt			
26	1	9699-0056-02	Flat washer			
27	2	9747-0831-02	Lock nut			
28	2	1136-0915-01	Belt roller			
29	1	1136-0174-01	Spacer-LH			
30	1	1136-0170-01	Spacer-RH			
31	1	9997-0840-16	Screw			
32	1	9997-0850-16	Screw			
33	2	9699-0056-02	Flat washer			
34	2	9747-0831-02	Lock nut			
35	2	1136-0868-01	Cover			
41	1	1136-0053-01	Transaxle		Kanzaki K46S	
42	4	9997-0860-16	Screw			
44	4	9739-0831-22	Nut			
45	1	1136-1056-01	Support			
46	1	9997-0845-12	Screw			
47	2	9699-0090-02	Flat washer			
48	1	9747-0831-02	Lock nut			
50	1	9997-0816-16	Screw			
52	1	1136-0190-01	Lever			
53	1	9997-0820-16	Screw			
54	1	1136-0006-01	Elastic washer			
55	1	1136-0309-01	Washer			
56	1	9747-0831-02	Lock nut			
57	1	1136-0114-01	Rod			
58	1	9675-0009-02	Starlock			
61	1	1136-0918-01	Reinforcement			
62	2	1136-0821-01	Screw			
63	2	9699-0090-02	Flat washer			
64	4	9739-0831-22	Nut			
65	1	1136-0822-01	Screw			
72	2	1136-0455-01	Rim			
73	2	1136-0270-01	Tire (Turf Saver)			
73	2	1136-0272-01	Tire (Deli)			
74	2	9545-0500-00	Valve			
75	4	1136-0305-01	Washer			
76	2	1136-0175-01	Spacer			
77	2	1136-0312-01	Washer			
78	2	9652-0015-04	Retaining ring			
79	2	1136-0081-01	Hub cap			