



Section: ESTATE TORNADO TRANSMISSION

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
	2521					
1	1	1136-0286-01	Engine belt pulley			
2	1	9987-5351-12	Screw			
3	1	9683-0045-02	Washer			
5	1	1136-0433-01	V-belt			
6	1	1136-0489-01	Tension arm			
7	1	9997-0630-12	Screw			
8	2	1136-0123-01	Bushing			
9	1	9747-0831-02	Lock nut			
10	1	1136-0166-01	Spacer			
11	1	1136-0289-01	Idler pulley			
12	1	9699-0056-02	Flat washer			
13	1	9747-0831-02	Lock nut			
14	1	1136-0235-01	Pivot bolt			
15	2	1136-0309-01	Washer			
16	1	9747-0831-02	Lock nut			
17	1	1136-0348-01	Tie rod			
18	2	9799-0831-02	Nut			
19	1	1136-0208-01	Spring			
20	1	1136-0162-01	Spacer			
21	1	9997-0880-16	Screw			
22	1	9739-0831-22	Nut			
23	1	9747-0831-02	Lock nut			
24	1	1136-0346-01	Tie rod			
25	1	1136-0093-01	Ball joint			
26	1	9683-0030-02	Lock washer			
27	1	9799-0831-02	Nut			
28	1	9699-0090-02	Flat washer			
29	1	9675-0012-02	Locking washer			
30	1	1136-0290-01	Belt roller			
31	1	1136-0234-01	Stud bolt			
32	1	9699-0056-02	Flat washer			
33	2	9747-0831-02	Lock nut			
34	2	1136-0915-01	Belt roller			
35	1	1136-0167-01	Spacer-LH			
36	1	1136-0164-01	Spacer-RH			
37	1	9997-0835-12	Screw			
38	1	9997-0845-12	Screw			
39	2	9699-0056-02	Flat washer			
40	2	9747-0831-02	Lock nut			
41	1	1136-0520-01	Belt pulley			
42	1	9600-0050-00	Key			
43	1	9650-0016-04	Lock ring			
44	1	1136-0050-01	Transaxle		Peerless MST 205-53	
45	4	9997-0860-16	Screw			
47	4	9739-0831-22	Nut			
48	2	1136-0325-01	Stay			
49	2	1136-0017-01	Screw			
50	2	9997-0816-16	Screw			
51	2	9739-0831-22	Nut			
52	1	1136-0181-01	Belt guide			
53	4	9699-0035-02	Flat washer			
54	2	9747-0831-02	Lock nut			
55	2	1136-0868-01	Cover			
72	2	1136-0455-01	Rim			
73	2	1136-0272-01	Tire (Deli)			
73	2	1136-0270-01	Tire (Turf Saver)			
74	2-4	9699-0119-02	Washer			
75	2	1136-0305-01	Washer			
76	2	9652-0015-04	Retaining ring			
77	2	1136-0081-01	Hub cap			
78	2	9545-0500-00	Valve			