



## Section: KANZAKI TRANSAXLE K46F-K46S TRANSAXLE CASE

Pos.	Quantity	Spare part No	Description	Kit	Notes	New
------	----------	---------------	-------------	-----	-------	-----

K46F K46S

3	1	1	1139-1302-01	Upper housing assy	Inkl. pos 4 - 5	
7	1	1	1139-1297-01	Lower housing		
8	1	1	1139-1304-01	Reservoir tank		
9	1	1	1139-1298-01	Tube		
10	2	2	1139-1300-01	Hose clamp		
11	1	1	1139-1100-01	Vent valve assy	Inkl. pos 12 - 13	
14	1	1	1139-1150-01	Magnet		
15	1	1	1139-1240-01	Holder-magnet		
16	1	1	1139-1303-01	Oil seal		
17	1	1	1139-1028-01	Spring		
18	1	1	1139-1324-01	Shaft-bypass		
19	1	1	1139-1189-01	Lever-bypass		
20	1	1	1139-1161-01	Ring		
21	1	1	1139-1275-01	Bore plug		
22	1	1	1139-1104-01	Snap ring		
23	1	1	1139-1279-01	Pin		
24	1	1	1139-1280-01	Pin		
25	2	2	1139-1117-01	O-ring		
26	1	1	1139-1119-01	Seal		
27	14	14	1139-0244-01	Tapping screw		
28	2	2	1139-1295-01	Tapping screw		
29	1	1	1139-1305-01	Tank support		

test