


# Genuine Spare Parts


---

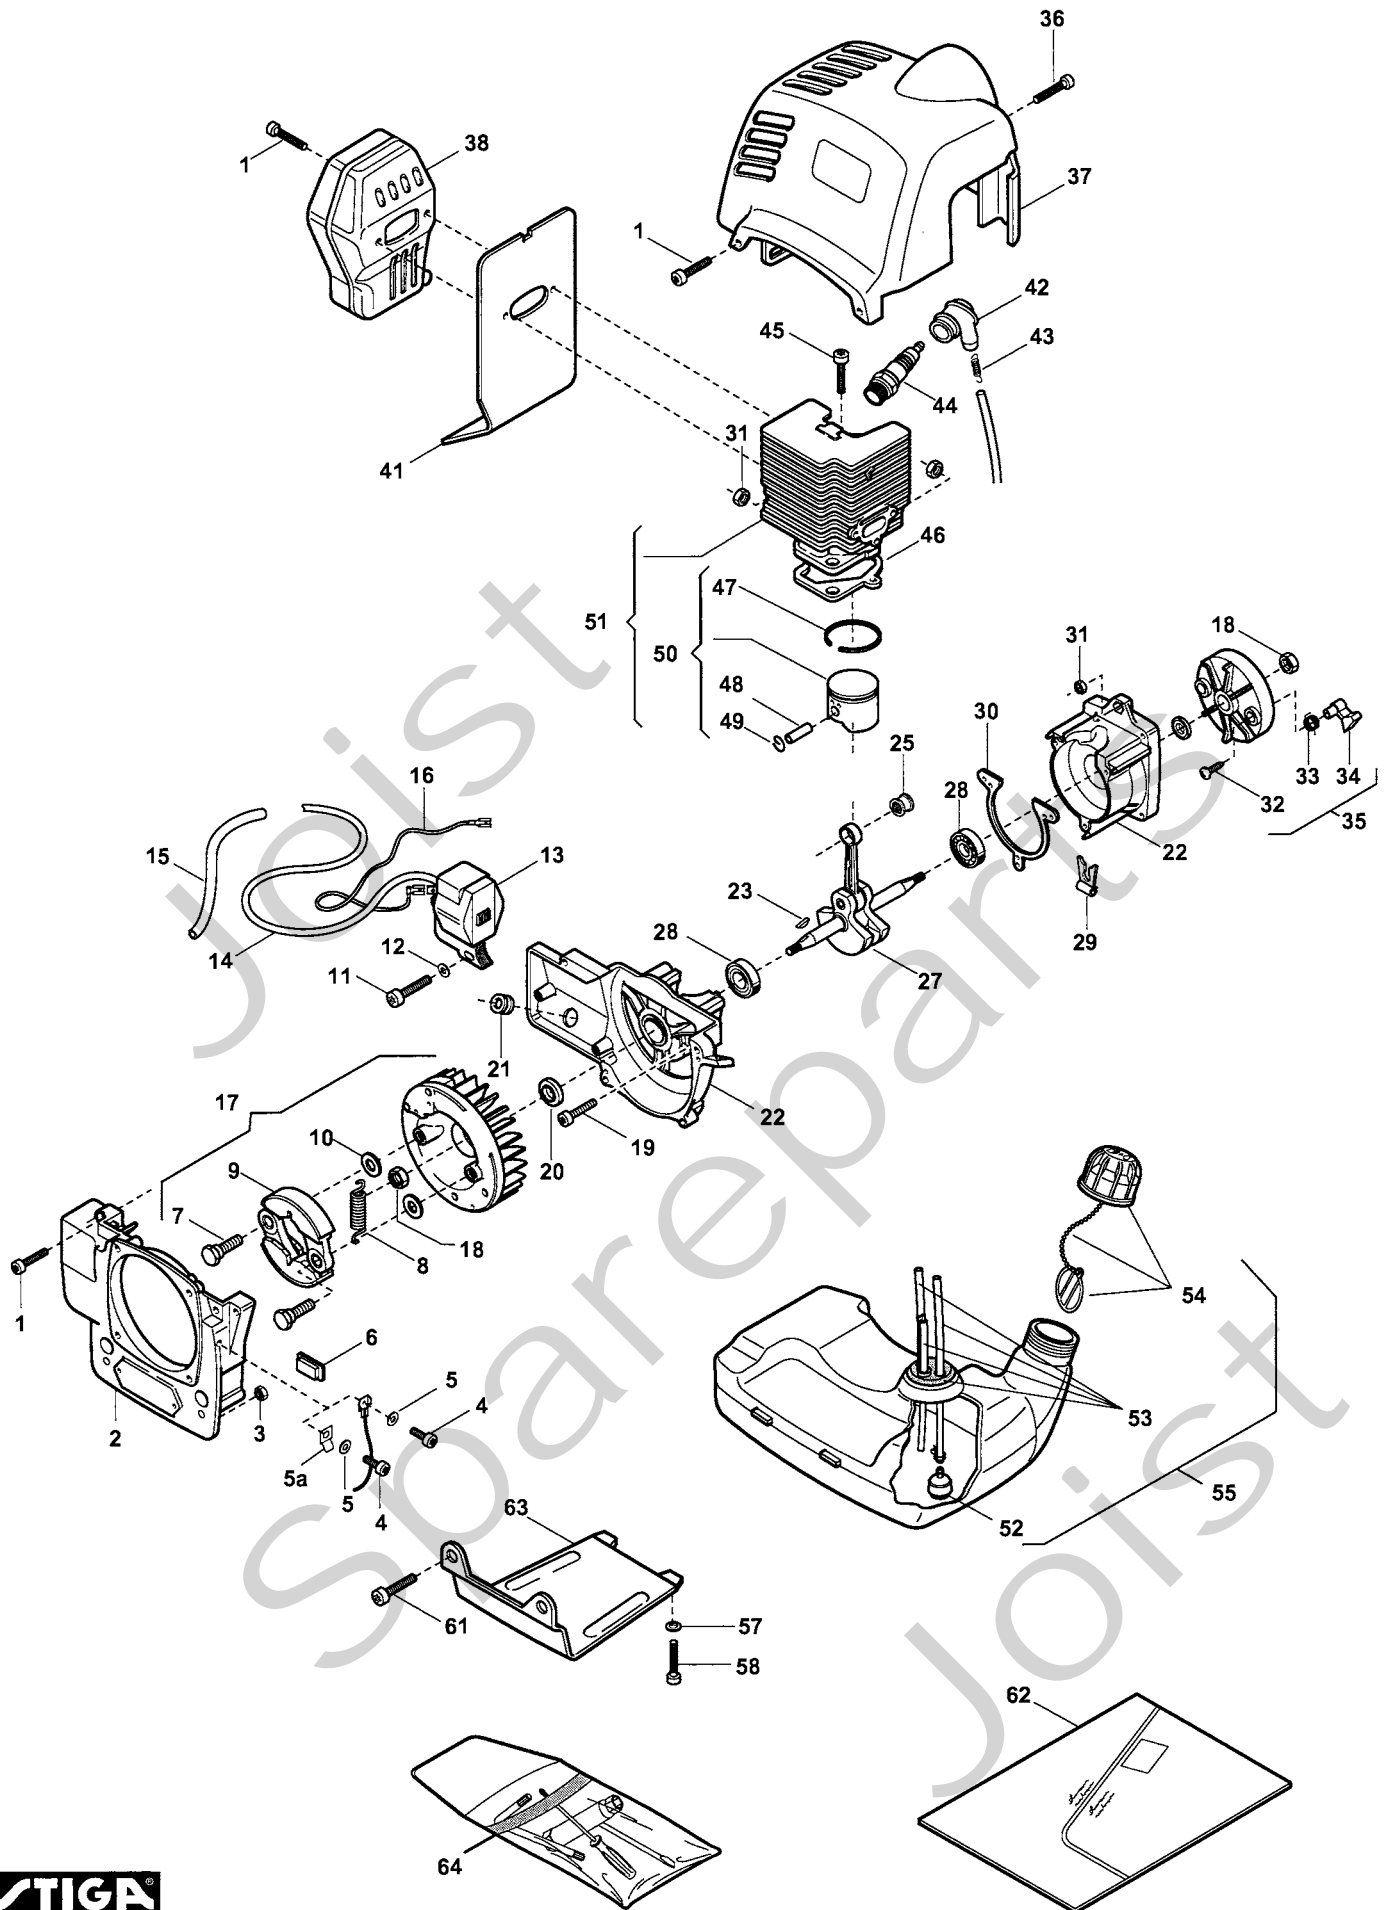

Spareparts  
Joist




Utgåva Issue		Bildnr Picture No		SB 39- SB 40 RÖJARE MOTOR		SB 39- SB 40 BRUSH CUTTER ENGINE		Sida Page	
2006- 12		1286B						298	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	6118 -11 4629 -13								
1	12			1911-3007-01	Skruv .....	Screw .....			
2	1			1911-3730-01	Transm.stödhus .....	Transm.support case .....			
3	2			1911-3021-01	Mutter .....	Nut .....			
4	1			1911-3005-01	Skruv .....	Screw .....			
5	1			1911-3016-01	Bricka .....	Washer .....			
5A	1			1911-3874-01	Flatstiftskontakt .....	Connector .....			
6	4			1911-3117-01	Gummikudde .....	Grommet .....			
7	2			1911-3027-01	• Skruv .....	• Screw .....			
8	1			1911-3086-01	Fjäder .....	Spring .....			
9	2			1911-3094-01	• Koppling .....	• Clutch unit .....			
10	2			1911-3018-01	• Bricka .....	• Washer .....			
11	2			1911-3009-01	Skruv .....	Screw .....			
12	2			1911-3017-01	Bricka .....	Washer .....			
13	1			1911-3668-01	Elektronikspole .....	Electronic coil .....			
14	1			1911-3055-01	Tändstiftskabel .....	Spark plug cable .....			
15	1			1911-4248-01	Kabelhölje .....	Wire sheath .....			
16	1			1911-3673-01	Jordkabel .....	Earth cable .....			
17	1			1911-3141-01	Svänghjul kpl .....	Flywheel assy .....		Inkl. pos 7, 9, 10	
18	2			1911-3030-01	Mutter .....	Nut .....			
19	3			1911-3008-01	Skruv .....	Screw .....			
20	2			1911-3043-01	Tätningssring .....	Seal ring .....			
21	1			1911-3116-01	Gummihylsa .....	Grommet .....			
22	1			1911-3190-01	Vevhus kpl .....	Crankcase assy .....			
23	1			1911-3048-01	Svänghjulskil .....	Flywheel key .....			
25	1			1911-3042-01	• Nållager .....	• Needle bearing .....			
27	1			1911-3819-01	Vevaxel kpl .....	Crankshaft assy .....		Inkl. pos 25	
28	2			1911-3039-01	Kullager .....	Ball bearing .....			
29	1			1911-3121-01	Kabelhållare .....	Cable guide .....			
30	1			1911-3097-01	• Packning .....	• Gasket .....			
31	5			1911-3022-01	Mutter .....	Nut .....			
32	3			1911-3002-01	• Skruv .....	• Screw .....			
33	2			1911-3087-01	• Fjäder .....	• Spring .....			
34	2			1911-3118-01	• Startspärr .....	• Starter hook .....			
35	1			1911-3822-01	Startkopp kpl .....	Starter cup assy .....		Inkl. pos 32 - 34	
36	1			1911-3013-01	Skruv .....	Screw .....			
37	1			1911-3169-01	Cylinderkåpa .....	Cylinder cover .....			
38	1			1911-3135-01	Ljuddämpare .....	Muffler .....			
41	1			1911-3103-01	• Ljuddämparpackning .....	• Muffler gasket .....			
42	1			1911-3113-01	Tändstiftshylsa .....	Spark plug cover .....			
43	1			1911-3093-01	Tändstiftsfjäder .....	Spark plug spring .....			
44	1			9400-0258-00	Tändstift .....	Spark plug .....		Champion CJ7Y	
45	2			1911-3011-01	Skruv .....	Screw .....			
46	1			1911-3101-01	• Cylinderpackning .....	• Cylinder gasket .....			
47	1			1911-3047-01	•• Kolvring .....	•• Piston ring .....			
48	1			1911-3051-01	•• Kolvbult .....	•• Piston pin .....			
49	2			1911-3069-01	•• Låsring .....	•• Lock ring .....			
50	1			1911-3198-01	• Kolv kpl .....	• Piston assy .....		Inkl. pos 47 - 49	
51	1			1911-3197-01	Cylinder kpl m.kolv .....	Cylinder assy w.pisto .....		Inkl. pos 50	
52	1			1911-3150-01	• Bränslefilter .....	• Intake filter .....			
53	1			1911-3208-01	• Slangtätning kpl .....	• Hose grommet assy .....			
54	1			1911-3207-01	• Tanklock .....	• Fuel cap .....			
55	1			1911-3145-01	Bränsletank kpl .....	Fuel tank assy .....		Inkl. pos 52 - 54	
57	2			1911-3274-01	Bricka .....	Washer .....			
58	2			1911-3260-01	Skruv .....	Screw .....			
61	2			1911-3655-01	Skruv .....	Screw .....			
62	1			1911-3205-01	Packningssats .....	Gasket set .....		Inkl. pos 30, 41, 46	
63	1			1911-3742-01	Fläns .....	Flange .....			
64	1			1911-3723-01	Påse m.verktyg .....	Bag w.tools .....			

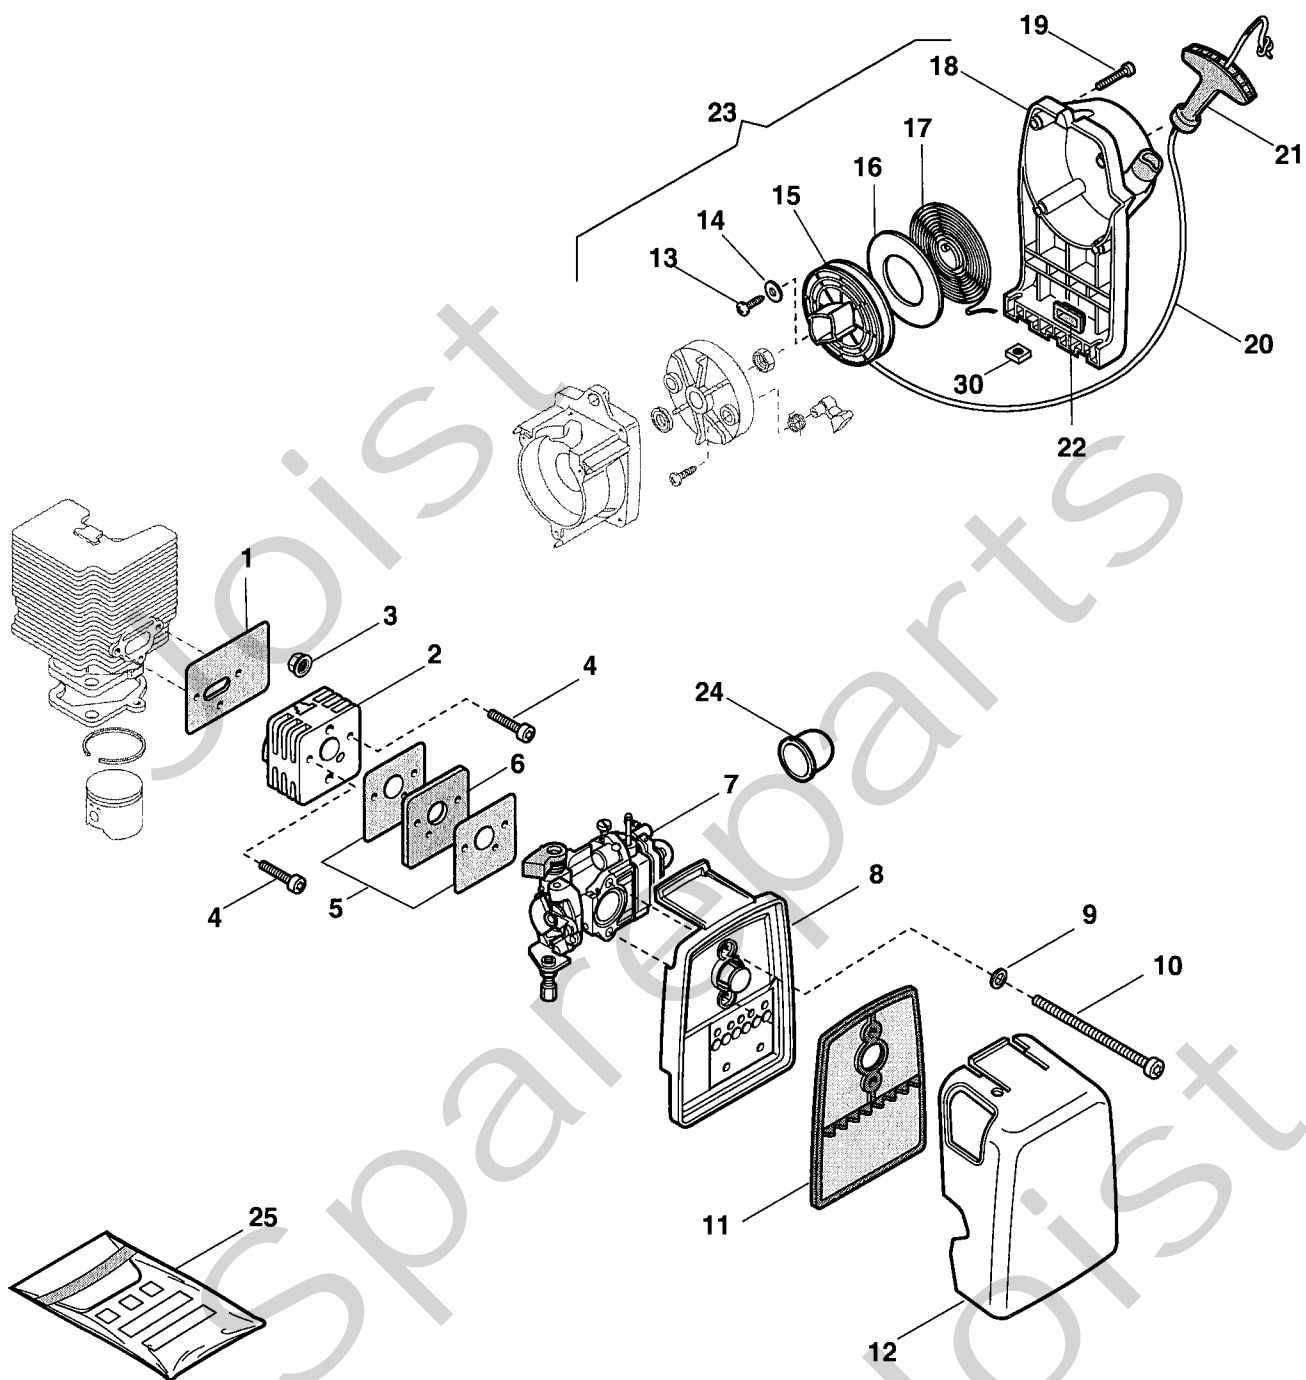


Utgåva Issue 2006-12	Bildnr Picture No 1287B	SB 39- SB 40 RÖJARE FÖRGASARE	SB 39- SB 40 BRUSH CUTTER CARBURETTOR	Sida Page 300
----------------------------	-------------------------------	-------------------------------------	---	---------------------

Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6118 -11 4629 -13							
1	1			1911-3104-01	Packning.....	Gasket.....		
2	1			1911-3122-01	Insugningsrör.....	Intake manifold.....		
3	2			1911-3031-01	Mutter.....	Nut.....		
4	2			1911-3008-01	Skruv.....	Screw.....		
5	2			1911-3107-01	Packning.....	Gasket.....		
6	1			1911-3132-01	Värmedistans.....	Heat block.....		
7	1			1911-4256-01	Förgasare kpl.....	Carburettor assy.....		WYJ317
8	1			1911-3210-01	Luftfilterfäste.....	Air filter holder.....		
9	2			1911-3015-01	Bricka.....	Washer.....		
10	2			1911-3014-01	Skruv.....	Screw.....		
11	1			1911-3126-01	Luftfilter.....	Air filter.....		
12	1			1911-3170-01	Luftfilterkåpa.....	Air filter cover.....		
13	1			1911-3002-01	• Skruv.....	• Screw.....		
14	1			1911-3071-01	• Bricka.....	• Washer.....		
15	1			1911-3164-01	• Línhjul.....	• Starter pulley.....		
16	1			1911-3096-01	• Skiva.....	• Disc.....		
17	1			1911-3176-01	• Startfjäder.....	• Starter spring.....		
18	1			1911-3202-01	• Starthus.....	• Starter recoil case.....		
19	4			1911-3007-01	• Skruv.....	• Screw.....		
20	1			1911-3130-01	• Startsnöre.....	• Starter cord.....		
21	1			1911-3479-01	• Starthandtag.....	• Starter handle.....		
22	4			1911-3117-01	• Gummikudde.....	• Grommet.....		
23	1			1911-3148-01	Start kpl.....	Starter assy.....		Inkl. pos 13 - 22
24	1			1911-3115-01	Primer.....	Primer bulb.....		
25	1			1911-3157-01	Packning- membransats.....	Gasket- diaphragm set.....		
30	2			1911-3023-01	Mutter.....	Nut.....		

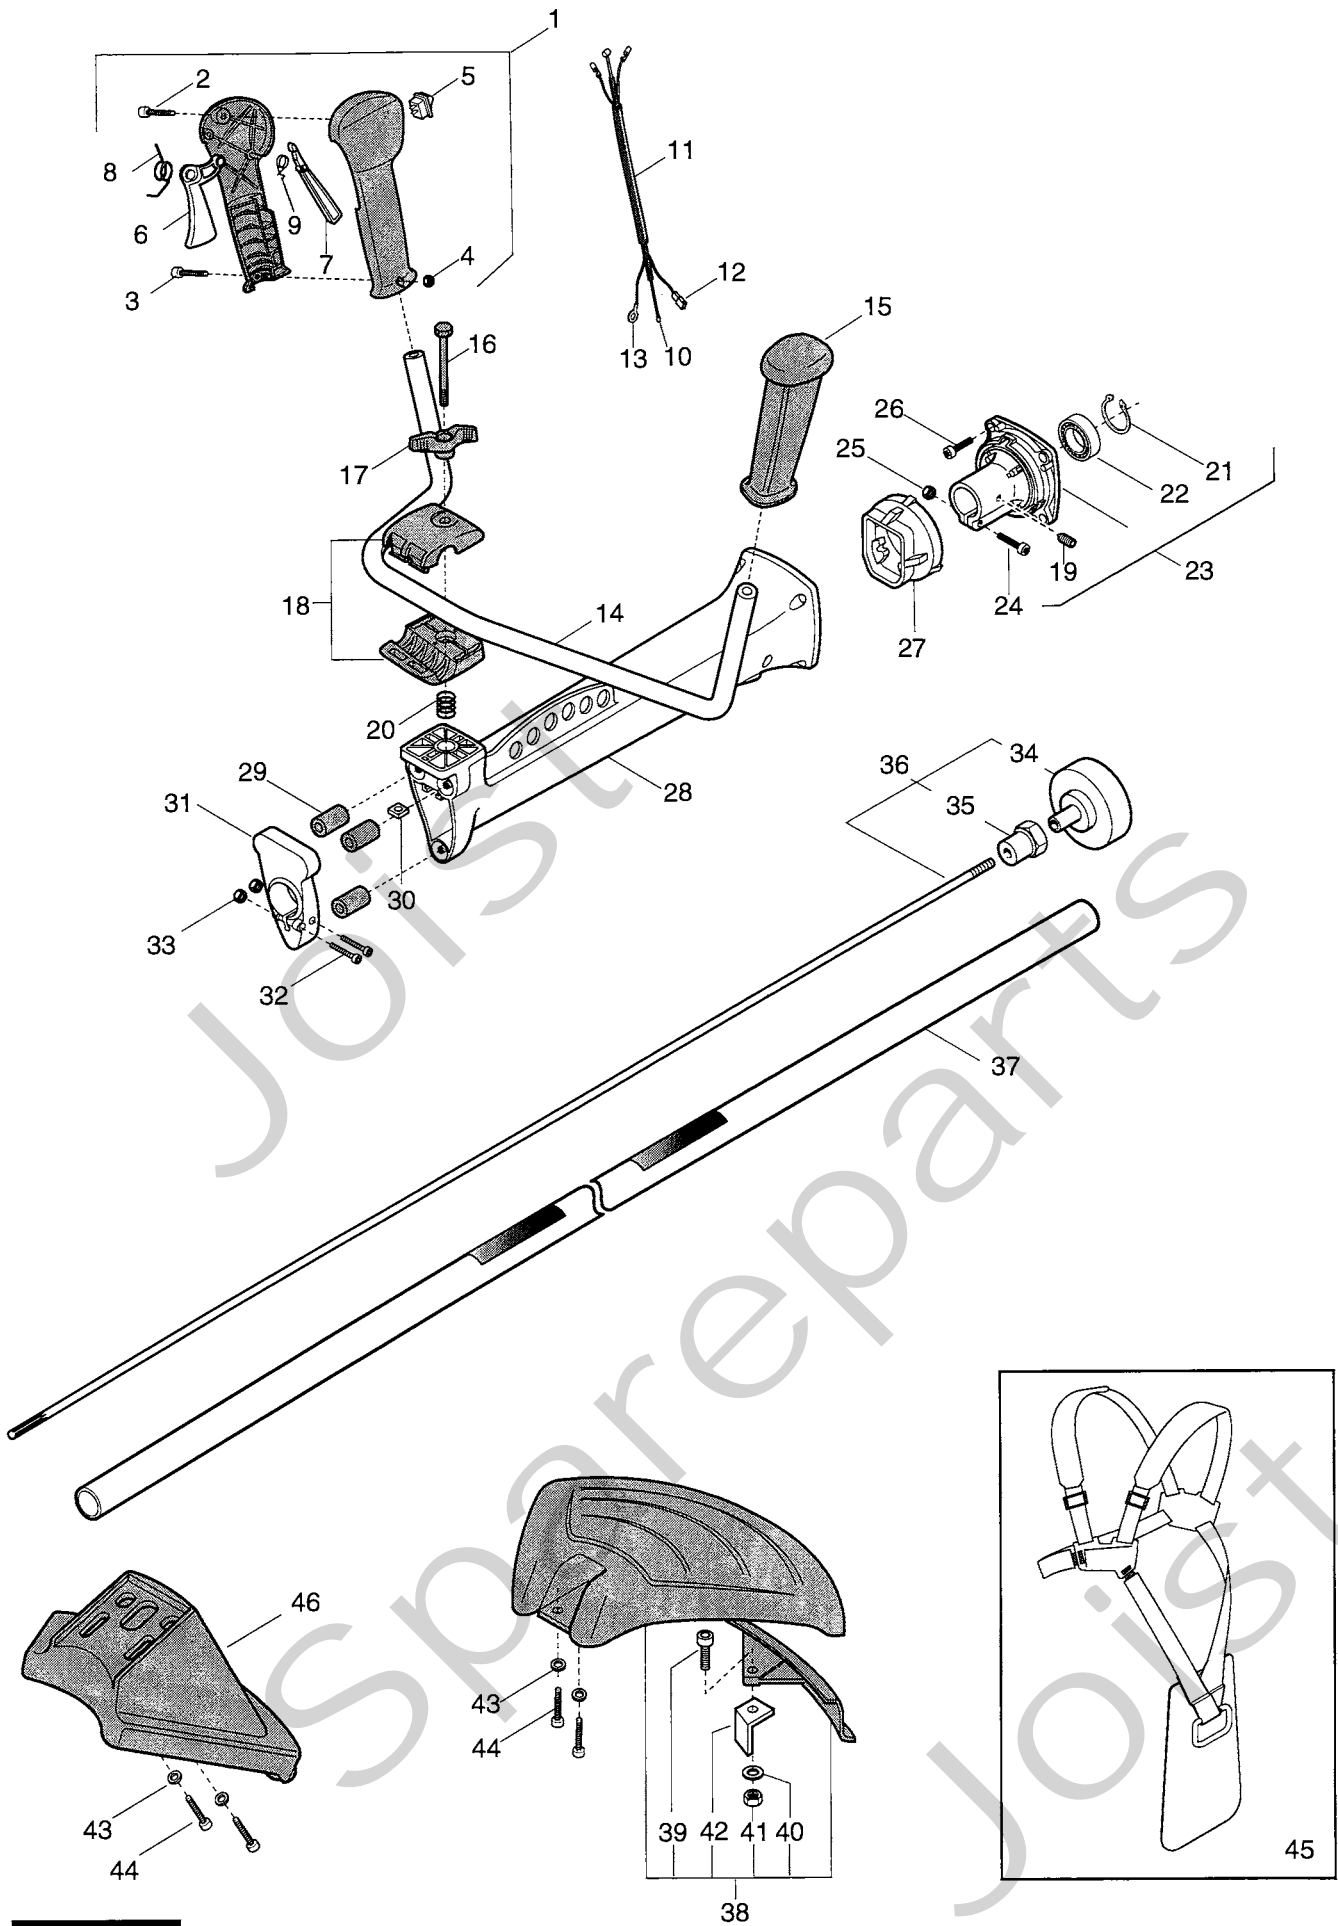

Utgåva Issue		Bildnr Picture No		SB 40- SB 44P SB 52P PRO RÖJARE RIGG	SB 40- SB 44P SB 52P PRO BRUSH CUTTER DRIVE SHAFT	Sida Page		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4629 -13	6115 -12 4630 -14						
1	1	1		1911-3203-01	Handtag kpl .....	Handle assy.....		Inkl. pos 2 - 9
2	1	1		1911-3001-01	• Skruv .....	• Screw .....		
3	1	1		1911-3008-01	• Skruv .....	• Screw .....		
4	1	1		9747-0531-02	• Mutter .....	• Nut .....		
5	1	1		1911-3053-01	• Stoppkontakt .....	• Stop switch .....		
6	1	1		1911-3108-01	• Gasreglage.....	• Throttle lever .....		
7	1	1		1911-3109-01	• Säkerhetsspärr .....	• Safety lever .....		
8	1	1		1911-3089-01	• Fjäder.....	• Spring .....		
9	1	1		1911-3090-01	• Fjäder.....	• Spring .....		
10	1			1911-3146-01	Gaswire .....	Throttle wire.....		
X 10		1		1911-4453-01	Gaswire .....	Throttle cable .....		
11	1	1		1911-3133-01	Kabelskydd .....	Wire sheath.....		
12	1	1		1911-3061-01	Kabel- röd .....	Cable- red .....		
13	1	1		1911-3062-01	Jordkabel- svart .....	Earth cable- black .....		
14	1	1		1911-3722-01	Styre.....	Handle.....		
15	1	1		1911-3114-01	Handtag- vä .....	Knob- left .....		
16	1	1		1911-3000-01	Skruv .....	Screw .....		
17	1	1		1911-3123-01	Vingmutter.....	Wing nut .....		
18	1	1		1911-3192-01	Styrinfästning kpl .....	Handle support assy .....		
19	1	1		1911-3658-01	• Skruv .....	• Screw .....		
20	1	1		1911-3091-01	Fjäder.....	Spring .....		
21	1	1		1911-3066-01	• Låsring .....	• Lock ring .....		
22	1	1		1911-3035-01	• Kullager .....	• Ball bearing .....		
23	1			1911-3188-01	Transmissionsnav kpl .....	Transmission hub assy .....		Inkl. pos 19, 21 - 22
23		1		1911-3189-01	Transmissionsnav kpl .....	Transmission hub assy .....		Inkl. pos 19, 21 - 22
24	1	1		1911-3011-01	Skruv .....	Screw .....		
25	1	1		1911-3021-01	Mutter .....	Nut .....		
26	4	4		1911-3012-01	Skruv .....	Screw .....		
27	1	1		1911-3111-01	Vibrationsdämpare- bak.....	Shock absorber- rear.....		
28	1	1		1911-3171-01	Transmissionshus .....	Transmission housing .....		
29	3	3		1911-3110-01	Vibrationsdämpare- fra.....	Shock absorber- front .....		
30	1	1		1911-3080-01	Handtagsfästmutter .....	Handle fixing plate .....		
31	1			1911-3172-01	Stöd- främre .....	Housing support- front.....		
31		1		1911-3173-01	Stöd- främre .....	Housing support- front.....		
32	2	2		1911-3009-01	Skruv .....	Screw .....		
33	2	2		9747-0531-02	Mutter.....	Nut .....		
34	1	1		1911-3134-01	• Kopplingstrumma.....	• Clutch.....		
35	1	1		1911-3083-01	• Lagernav.....	• Bearing hub.....		
36	1	1		1911-3140-01	Drivaxel kpl.....	Transm. shaft assy .....		Inkl. pos 34 - 35
37	1			1911-3139-01	Drivaxelrör .....	Transmission pipe .....		D = 26 mm
37		1		1911-3142-01	Drivaxelrör .....	Transmission pipe .....		D = 28 mm
38	1	1		1911-3201-01	Säkerhetsskydd kpl.....	Safety cover assy .....		Inkl. pos 39 - 42
39	1	1		1911-3006-01	• Skruv .....	• Screw .....		
40	1	1		1911-3216-01	• Bricka .....	• Washer .....		
41	1	1		1911-3022-01	• Mutter .....	• Nut .....		
42	1	1		1911-3077-01	• Kniv .....	• Line cutter .....		
43	2	2		1911-3216-01	Bricka .....	Washer.....		
44	2	2		1911-3009-01	Skruv .....	Screw .....		
45	1	1		1911-3152-01	Sele .....	Harness.....		
46	1	1		1911-3166-01	Stenskydd (sågklinga) .....	Stone shield (saw) .....		
99	1	1		1911-3212-01	Skyddsglasögon .....	Protective goggles .....		Tillbehör/accessory

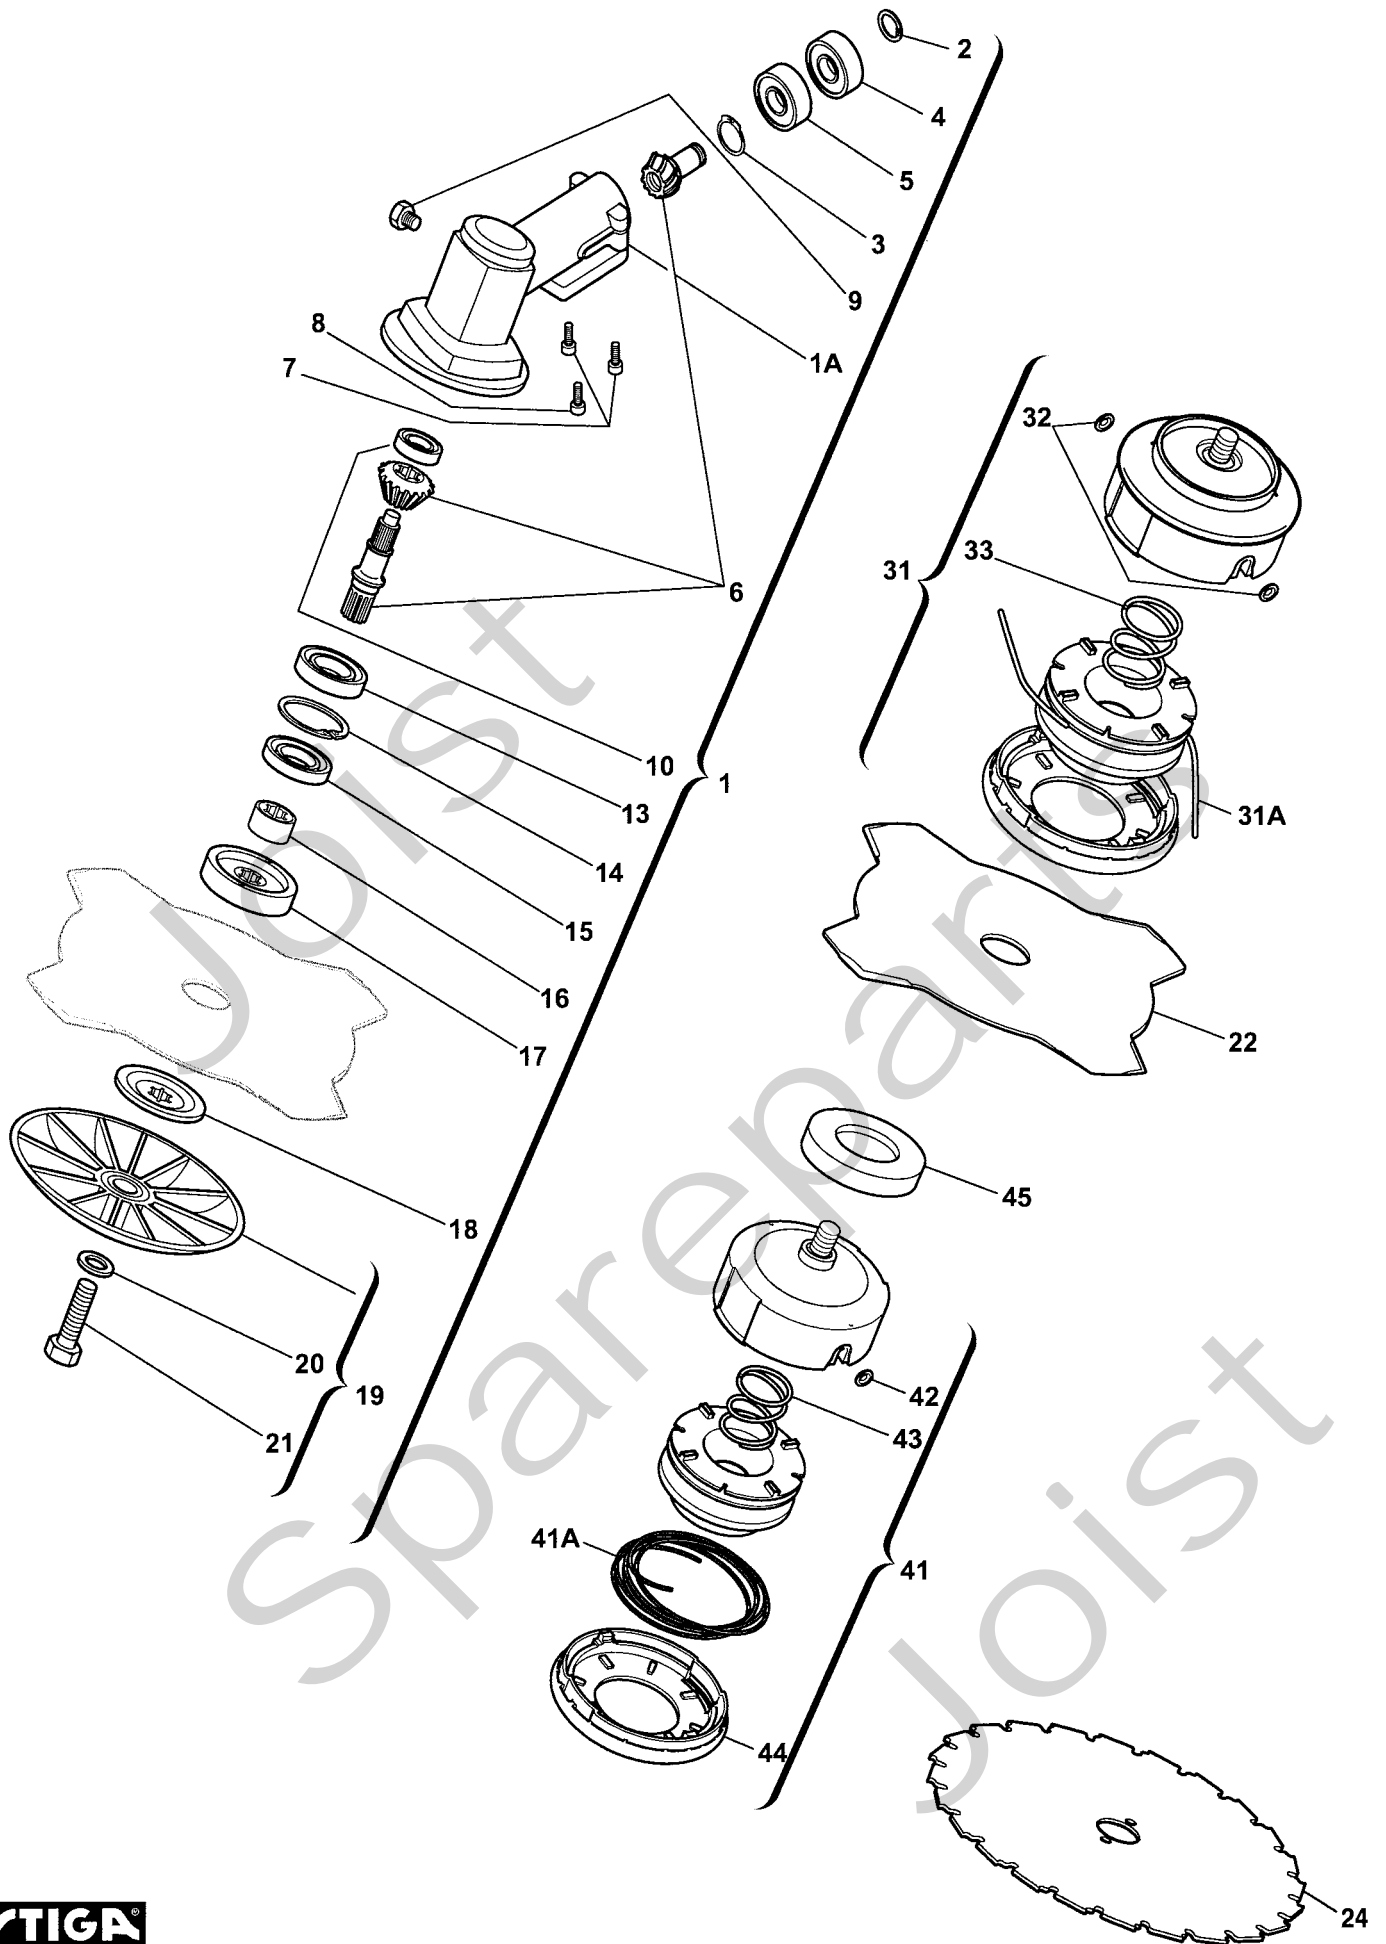



Utgåva Issue 2006- 12		Bildnr Picture No 1285D		SB 39- SB 40- SB 43P SB 44P- SB 52P PRO RÖJARE SNÄCKVÄXEL		SB 39- SB 40- SB 43P SB 44P- SB 52P PRO BRUSH CUTTER GEAR CASE		Sida Page 296	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	6118 -11 4629 -13	6113 -12	6115 -12 4630 -14						
1	1	1			1911-3137-01	Snäckväxel kpl.....	Gear case assy.....		Inkl. pos 2 - 21
1			1		1911-3138-01	Snäckväxel kpl.....	Gear case assy.....		Inkl. pos 2 - 21
1A	1	1			1911-3161-01	Snäckväxelhus.....	Gear case.....		
1A			1		1911-3162-01	Snäckväxelhus.....	Gear case.....		
2	1	1	1		1911-3067-01	• Låsring.....	• Lock ring.....		
3	1	1	1		1911-3065-01	• Låsring.....	• Lock ring.....		
4	1	1	1		1911-3037-01	• Kullager.....	• Ball bearing.....		
5	1	1	1		1911-3036-01	• Kullager.....	• Ball bearing.....		
6	1	1			1911-3182-01	• Snäckdrev.....	• Worm gear.....		
6			1		1911-3183-01	• Snäckdrev.....	• Worm gear.....		
7	2	2	2		1911-3008-01	• Skruv.....	• Screw.....		
8	1	1	1		1911-3025-01	• Skruv.....	• Screw.....		
9	1	1	1		1911-3029-01	• Skruv.....	• Screw.....		
10	1	1	1		1911-3038-01	• Kullager.....	• Ball bearing.....		
13	1	1	1		1911-3034-01	• Kullager.....	• Ball bearing.....		
14	1	1	1		1911-3066-01	• Låsring.....	• Lock ring.....		
15	1	1	1		1911-3045-01	• Tätningsring.....	• Oil seal.....		
16	1	1	1		1911-3082-01	• Hylsa.....	• Collar.....		
17	1	1	1		1911-3081-01	• Ringmutter- övre.....	• Ring nut- upper.....		
18	1	1	1		1911-3070-01	• Ringmutter- nedre.....	• Ring nut- lower.....		
19	1	1	1		1911-3163-01	• Skål kpl (fast).....	• Bowl assy (fixed).....		Inkl. pos 20 - 21
20	1	1	1		1911-3018-01	• • Bricka.....	• • Washer.....		
21	1	1	1		1911-3026-01	• • Skruv (vä- gängad).....	• • Screw (LH- thread).....		
22	1	1	1		1911-3179-01	Röjklina.....	Clearing blade.....		4T - Ø 255 mm
22A	1	1	1		1911-3850-01	Klingskydd.....	Blade guard.....		Ej ill/not ill.
24	1	1	1		1911-3921-01	Sågklina.....	Saw blade.....		24T - Ø 255 mm
31	1	1	1		1911-3877-01	Skärhuvud kpl.....	Cutterhead assy.....		Inkl. pos 32 - 33
31A	1	1	1		1911-9008-04	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		0.45 kg (90 m)
31A	1	1	1		1911-9008-08	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		15 m
32	2	2	2		1911-3875-01	• Trådhylsa.....	• Line inlet.....		
33	1	1	1		1911-3876-01	• Fjäder.....	• Spring.....		
41	1	1	1		1911-3154-01	Skärhuvud kpl (Profi).....	Nylon head (Profi).....		Inkl. pos 42 - 44
41A	1	1	1		1911-9008-04	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		0.45 kg (90 m)
41A	1	1	1		1911-9008-08	Skärtråd (2.4 mm).....	Cutting line (2.4 mm).....		15 m
42	2	2	2		1911-3085-01	• Bussning.....	• Bushing.....		
43	1	1	1		1911-3213-01	• Fjäder.....	• Spring.....		
44	1	1	1		1911-3215-01	• Lock.....	• Cover.....		
45	1	1	1		1911-3076-01	Kopp.....	Cup.....		
99	1	1	1		1911-3853-01	Fettub.....	Grease tube.....		Ej ill/not ill.