



Genuine Spare Parts



Joist
Spareparts
Joist

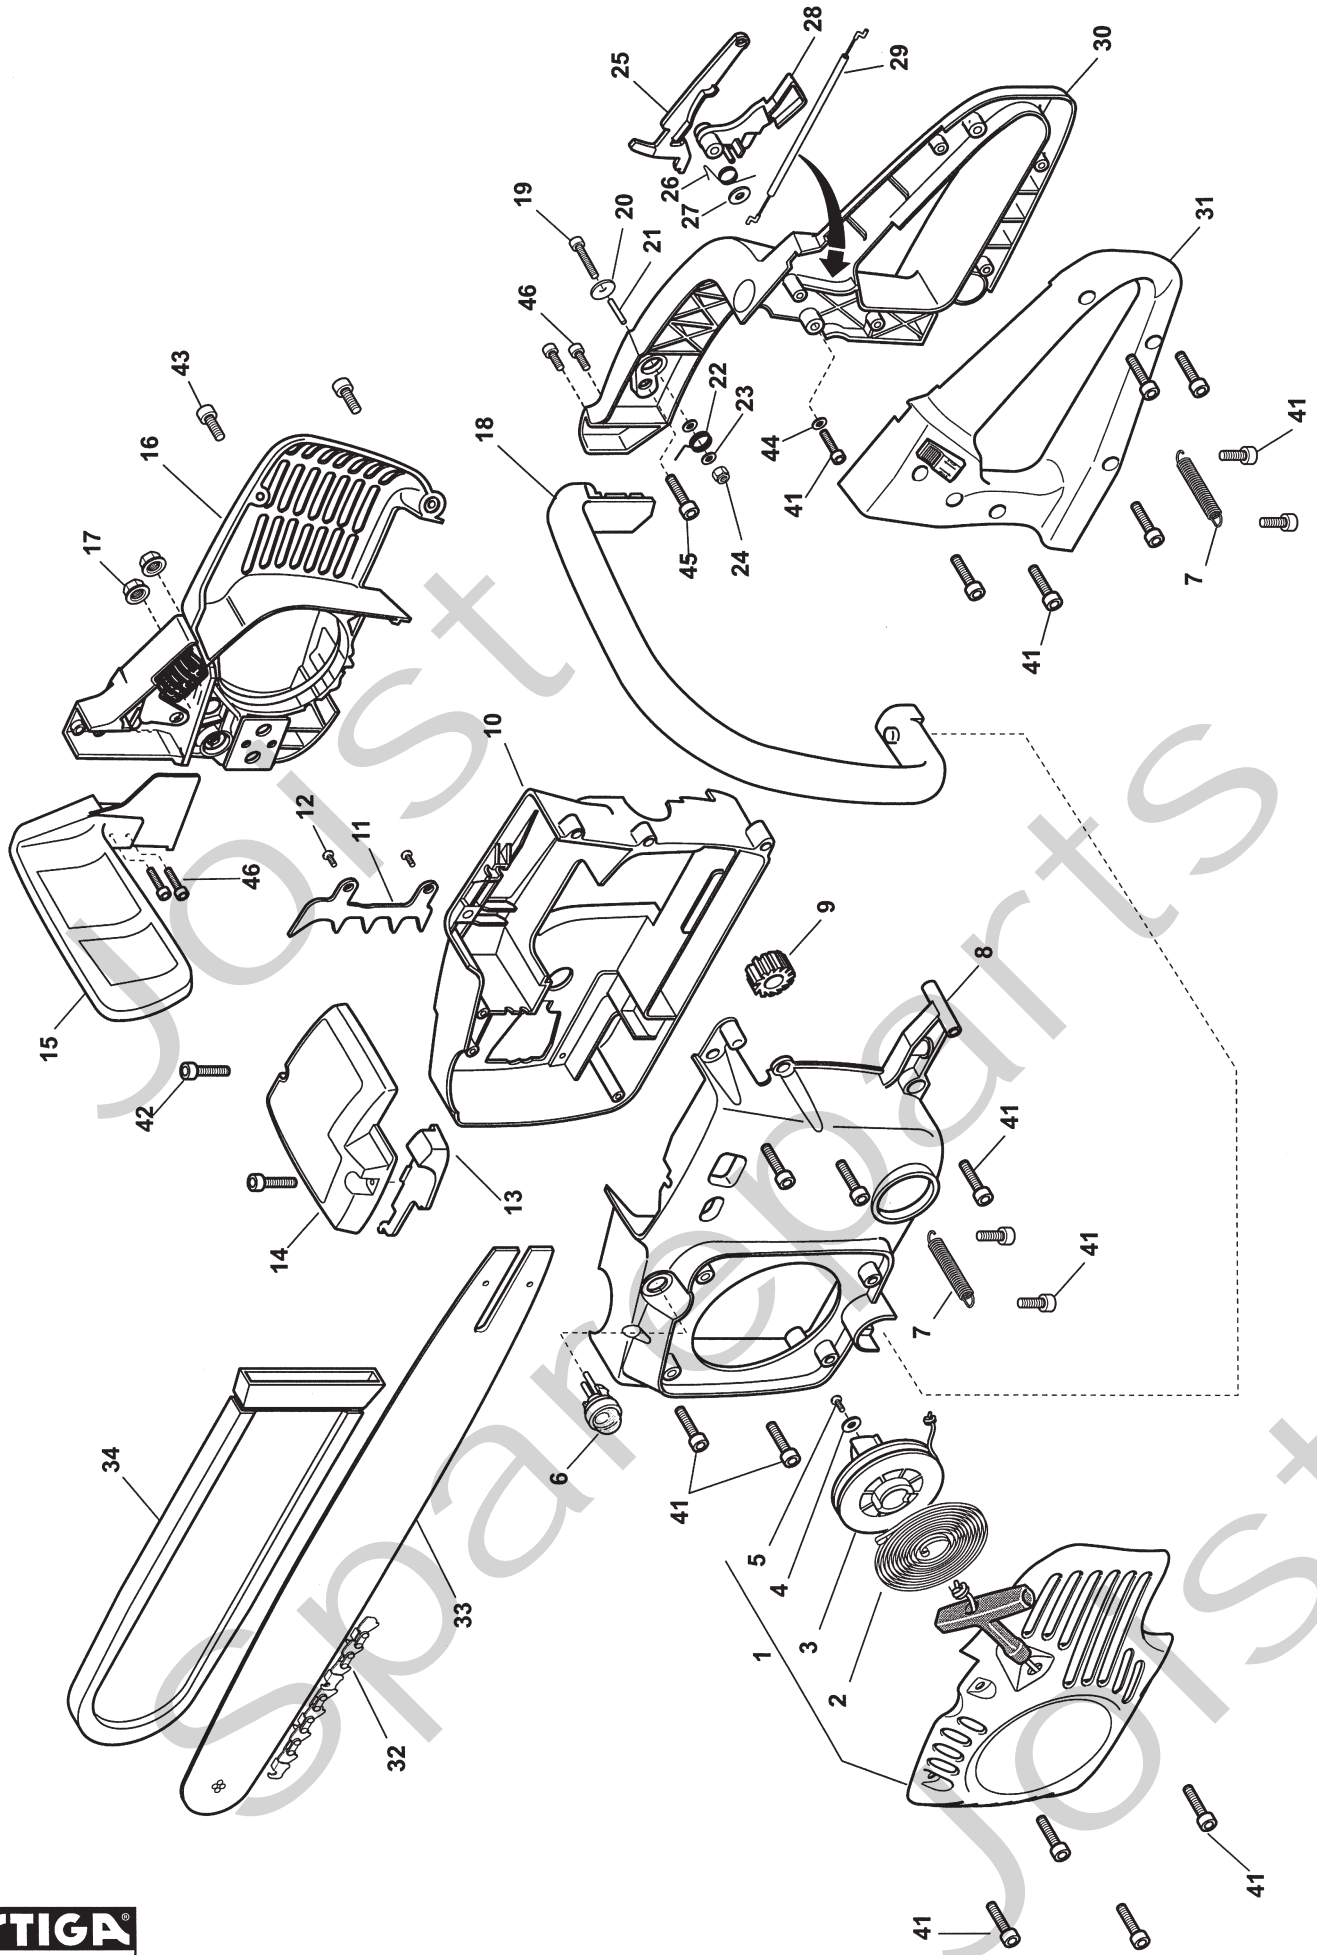

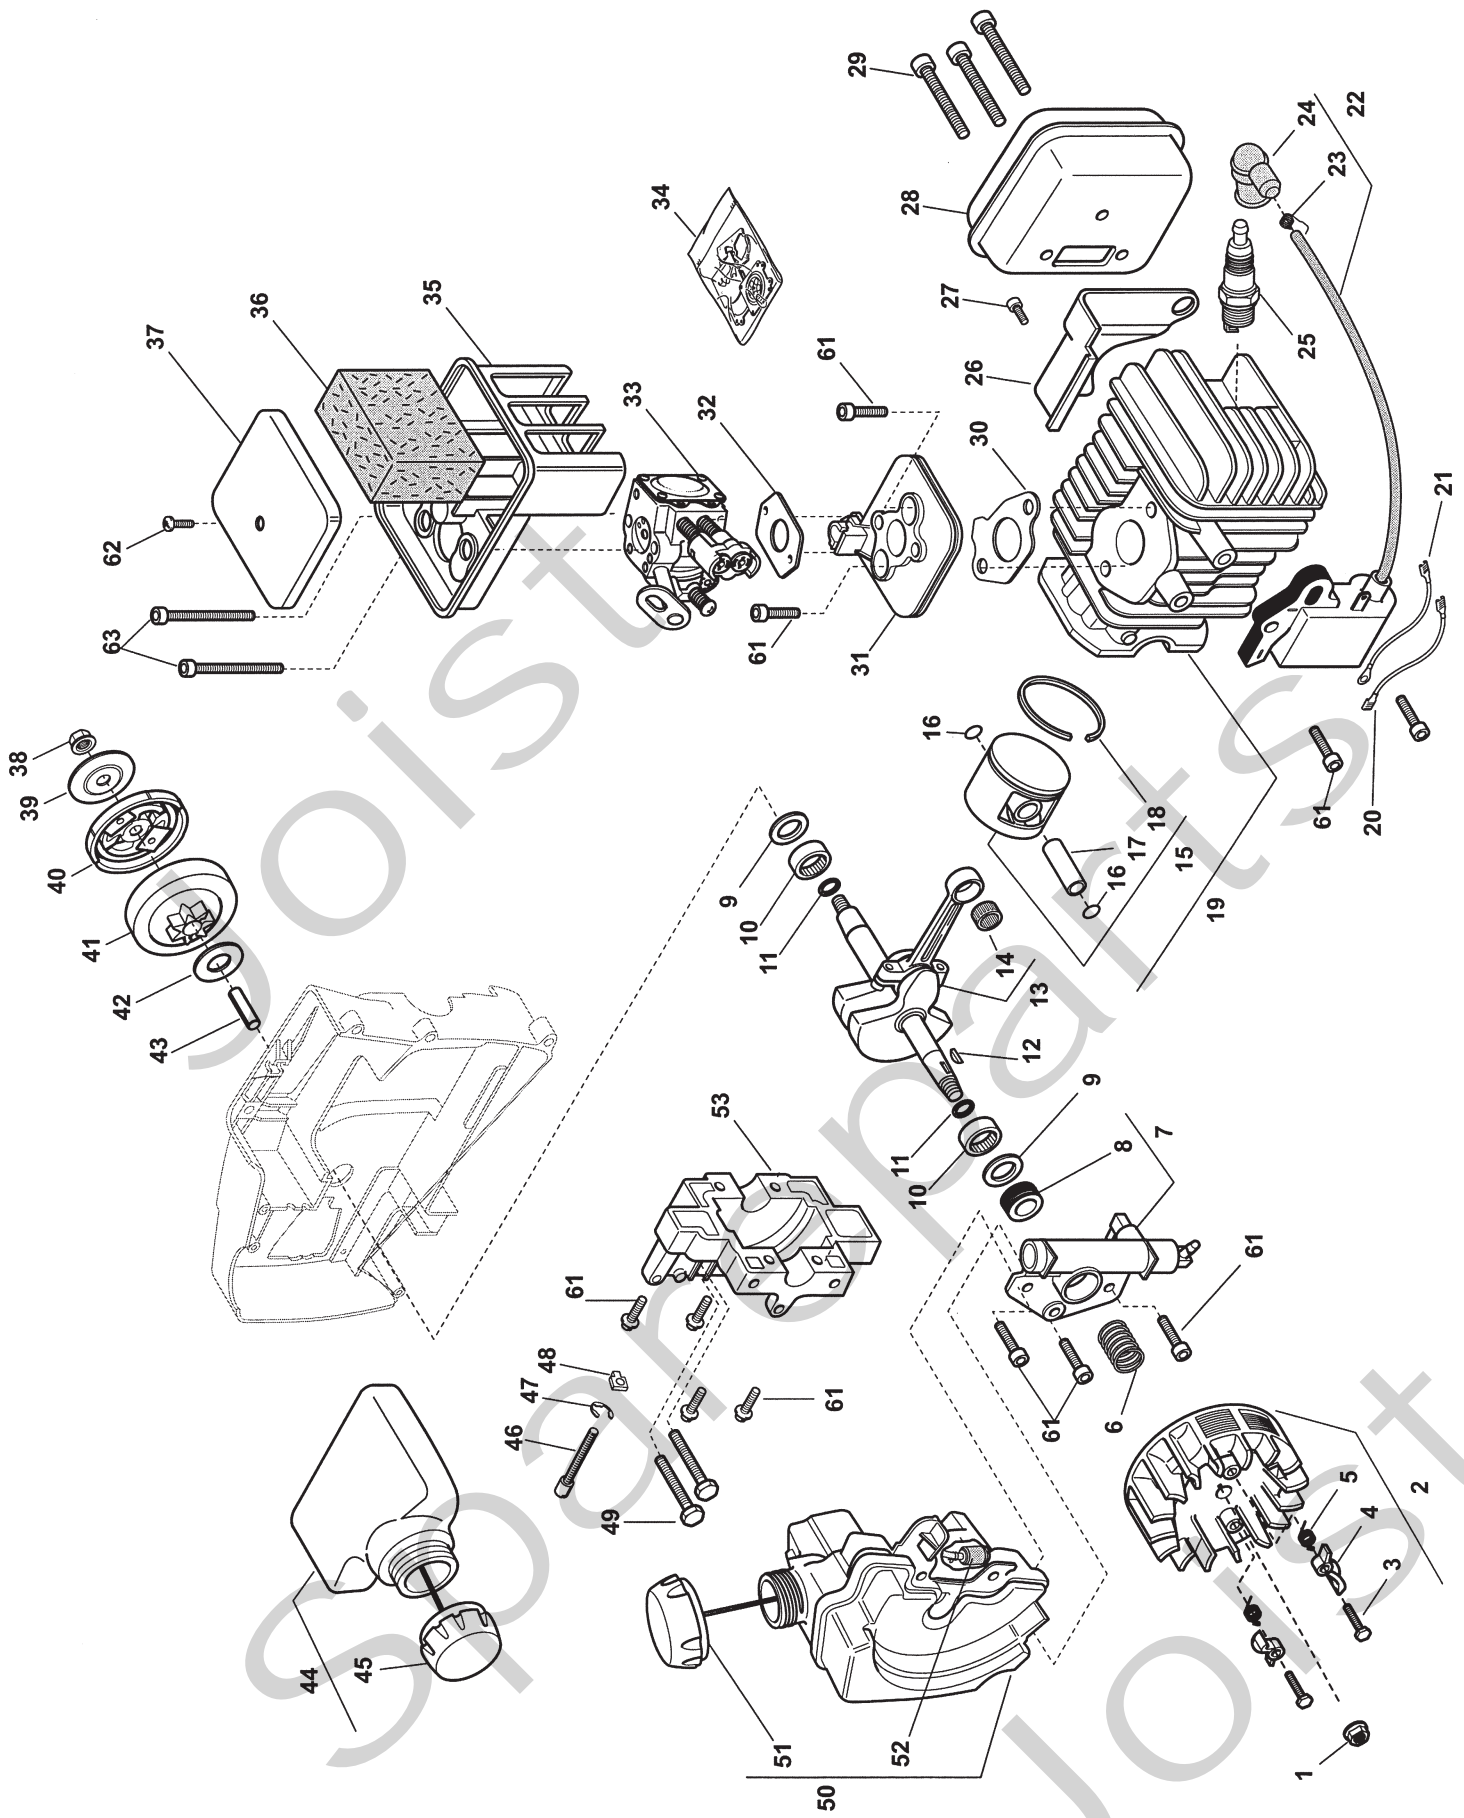

Utgåva Issue		Bildnr Picture No		SP 355 MOTOR	SP 355 ENGINE	Sida Page		
2005- 12		1759				336		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4130							
X	1	1		1911-4017-01	Mutter.....	Nut.....		
X	2	1		1911-4018-01	Svånghjul kpl.....	Flywheel assy.....		Inkl. pos 3 - 5
X	3	2		1911-4019-01	• Sprint.....	• Flywheel pin.....		
X	4	2		1911-4020-01	• Startspärr.....	• Starter hook.....		
X	5	2		1911-4021-01	• Fjäder.....	• Spring.....		
X	6	1		1911-4022-01	Fjäder.....	Spring.....		
X	7	1		1911-4023-01	Oljepump kpl.....	Oil pump assy.....		Inkl. pos 8
X	8	1		1911-4024-01	• Skruvhylsa.....	• Female screw.....		
X	9	2		1911-4025-01	Tätningring.....	Seal ring.....		
X	10	2		1911-4026-01	Kullager.....	Ball bearing.....		
X	11	2		1911-4027-01	Bricka.....	Washer.....		
X	12	1		1911-4028-01	Kil.....	Key.....		
X	13	1		1911-4029-01	Vevaxel kpl.....	Crankshaft assy.....		Inkl. pos 14
X	14	1		1911-4030-01	• Nällager.....	• Needle bearing.....		
X	15	1		1911-4031-01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 16 - 18
X	16	2		1911-4032-01	• • Låsring.....	• • Circlip.....		
X	17	1		1911-4033-01	• • Kolvbult.....	• • Piston pin.....		
X	18	1		1911-4034-01	• • Kolvring.....	• • Piston ring.....		
X	19	1		1911-4035-01	Cylinder-kolv kpl.....	Cylinder-piston assy.....		Inkl. pos 15
X	20	1		1911-4036-01	Jordkabel.....	Ground wire.....		
X	21	1		1911-4037-01	Stoppkabel.....	Stop wire.....		
X	22	1		1911-4038-01	Tändsystem kpl.....	Electronic coil assy.....		Inkl. pos 23, 24
X	23	1		1911-3421-01	• Fjäder.....	• Spring.....		
X	24	1		1911-3546-01	• Tändstiftshatt.....	• Spark plug cover.....		
X	25	1		1911-4039-01	Tändstift.....	Spark plug.....		
X	26	1		1911-4040-01	Deflektor.....	Deflector.....		
X	27	1		1911-4041-01	Skruv.....	Screw.....		
X	28	1		1911-4042-01	Ljuddämpare.....	Muffler.....		
X	29	3		1911-4043-01	Skruv.....	Screw.....		
X	30	1		1911-4044-01	Packning.....	Gasket.....		
X	31	1		1911-4045-01	Insugningsrör.....	Intake manifold.....		
X	32	1		1911-3440-01	Packning.....	Gasket.....		
X	33	1		1911-4046-01	Förgasare kpl.....	Carburettor assy.....		
X	34	1		1911-3612-01	Membran- packningssats	Diaphragm- gasket set		
X	35	1		1911-4047-01	Luftfilterhållare.....	Air filter holder.....		
X	36	1		1911-4048-01	Luftfilter.....	Air filter.....		
X	37	1		1911-4049-01	Luftfilterlock.....	Filter cover.....		
X	38	1		1911-4050-01	Mutter.....	Nut.....		
X	39	1		1911-4051-01	Kopplingskiva.....	Clutch disc.....		
X	40	1		1911-4052-01	Koppling.....	Clutch.....		
X	41	1		1911-4053-01	Drev.....	Sprocket.....		
X	42	1		1911-4054-01	Drevbricka.....	Sprocket washer.....		
X	43	1		1911-4055-01	Distans.....	Spacer.....		
X	44	1		1911-4056-01	Oljetank kpl.....	Oil tank assy.....		Inkl. pos 45
X	45	1		1911-4057-01	• Tanklock.....	• Oil tank cap.....		
X	46	1		1911-4058-01	Skruv.....	Screw.....		
X	47	1		1911-4059-01	Hållare.....	Retainer.....		
X	48	1		1911-4060-01	Kedjespännarblock.....	Chain tightener block.....		
X	49	2		1911-4061-01	Skruv.....	Screw.....		
X	50	1		1911-4062-01	Bränsletank kpl.....	Fuel tank assy.....		Inkl. pos 51, 52
X	51	1		1911-4063-01	• Tanklock.....	• Fuel tank cap.....		
X	52	1		1911-3150-01	• Bränslefilter.....	• Intake filter.....		
X	53	1		1911-4064-01	Vevhus.....	Crankcase.....		
X	61	11		1911-4065-01	Skruv.....	Screw.....		
X	62	1		1911-4066-01	Skruv.....	Screw.....		
X	63	2		1911-4067-01	Skruv.....	Screw.....		