



Genuine Spare Parts

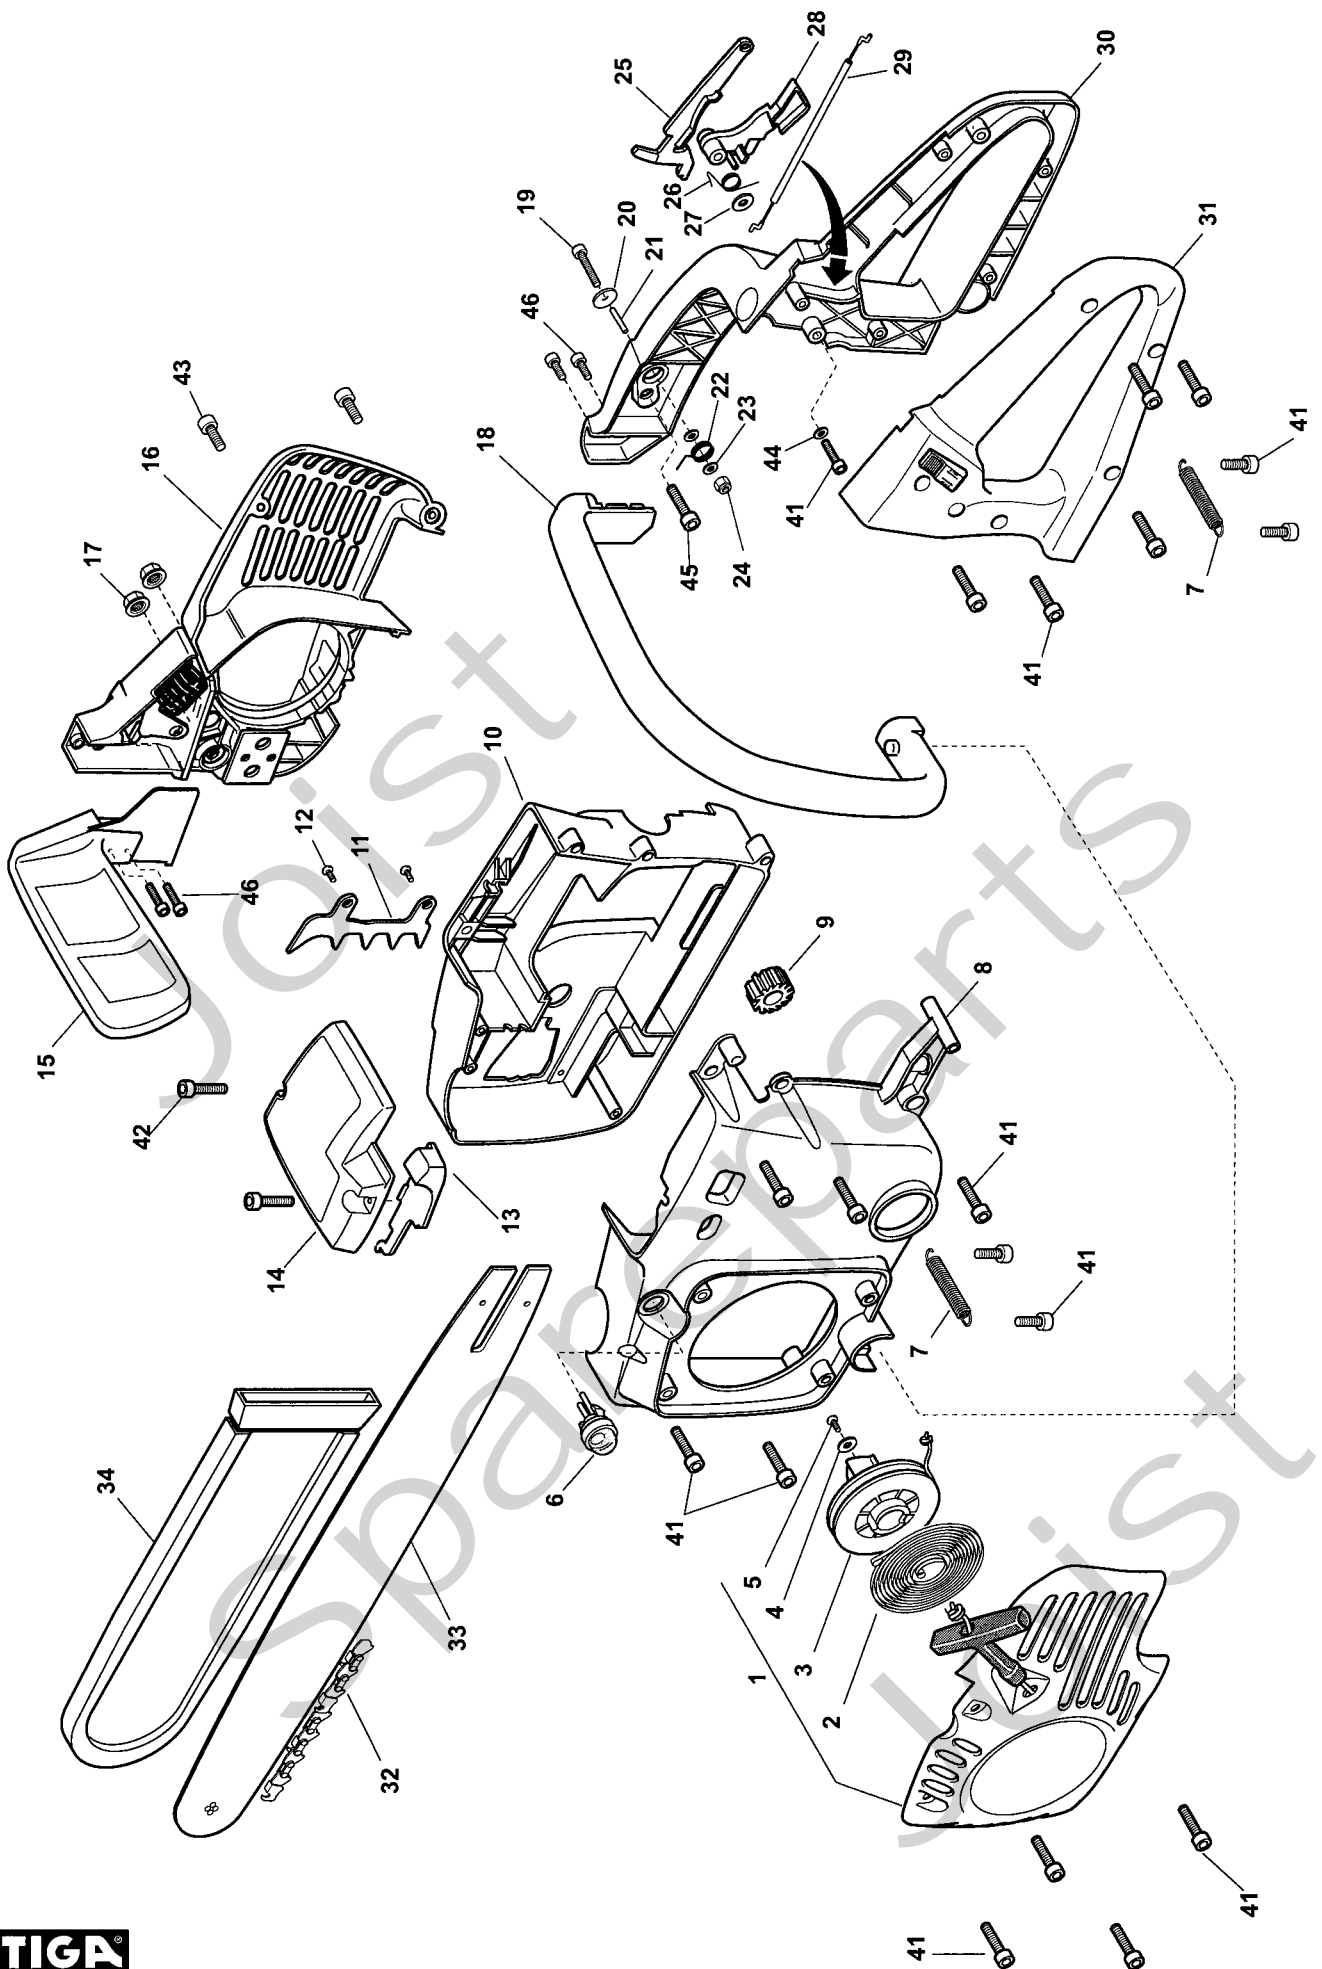

Joist
Spareparts
Joist



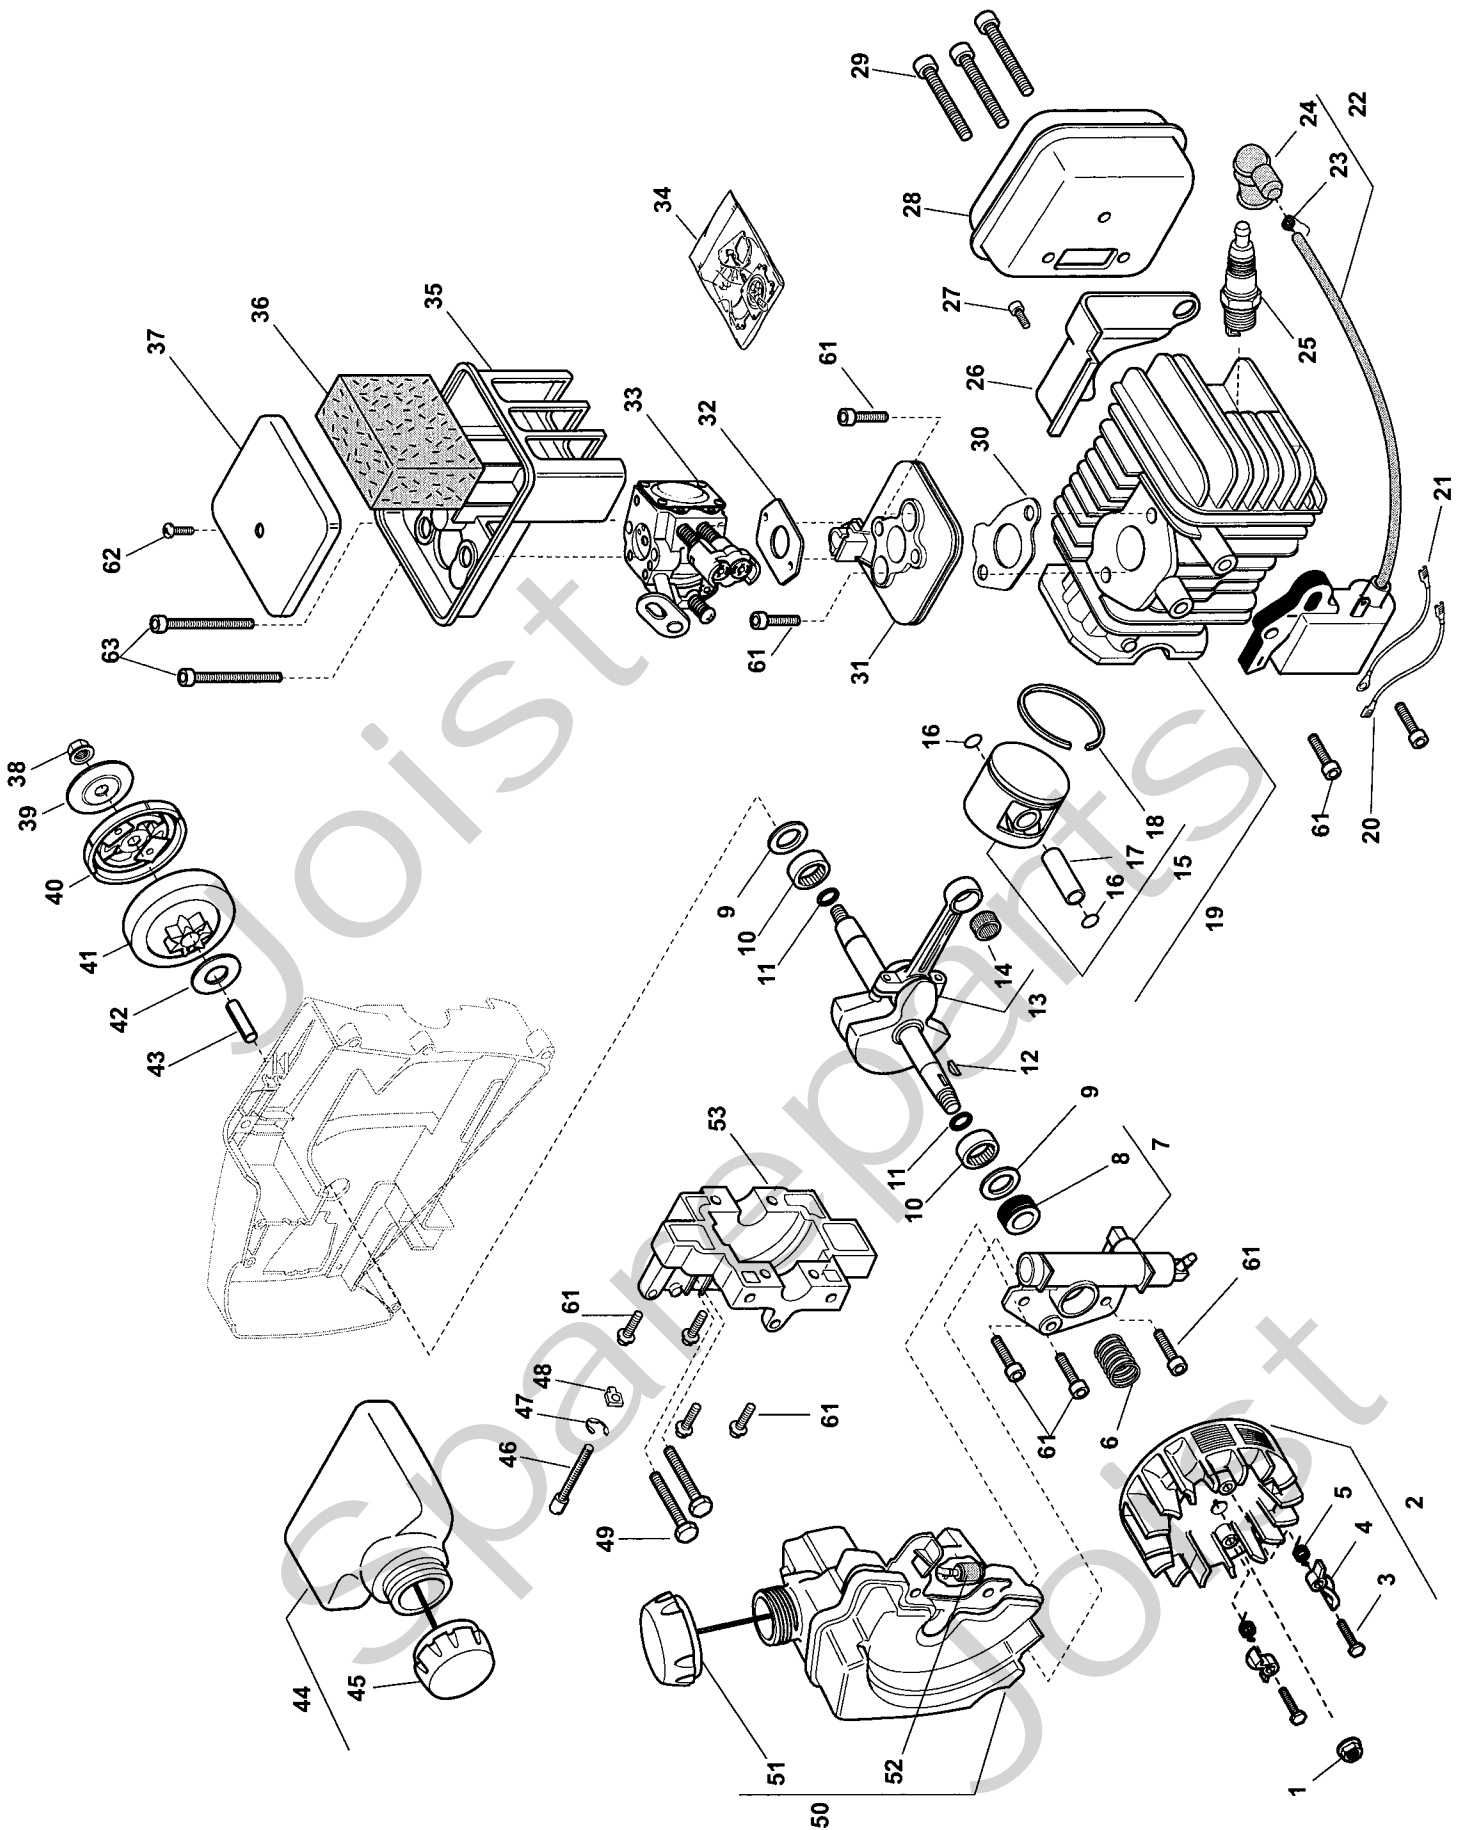

Utgåva Issue		Bildnr Picture No		SP 355 MOTOR	SP 355 ENGINE	Sida Page		
2006-12		1759				354		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4130 -12							
1	1			1911-4017-01	Mutter.....	Nut.....		
2	1			1911-4018-01	Svånghjul kpl.....	Flywheel assy.....		Inkl. pos 3 - 5
3	2			1911-4019-01	• Sprint.....	• Flywheel pin.....		
4	2			1911-4020-01	• Startspärr.....	• Starter hook.....		
5	2			1911-4021-01	• Fjäder.....	• Spring.....		
6	1			1911-4022-01	Fjäder.....	Spring.....		
7	1			1911-4023-01	Oljepump kpl.....	Oil pump assy.....		Inkl. pos 8
8	1			1911-4024-01	• Skruvhylsa.....	• Female screw.....		
9	2			1911-4025-01	Tätningring.....	Seal ring.....		
10	2			1911-4026-01	Kullager.....	Ball bearing.....		
11	2			1911-4027-01	Bricka.....	Washer.....		
12	1			1911-4028-01	Kil.....	Key.....		
13	1			1911-4029-01	Vevaxel kpl.....	Crankshaft assy.....		Inkl. pos 14
14	1			1911-4030-01	• Nällager.....	• Needle bearing.....		
15	1			1911-4031-01	• Kolv kpl.....	• Piston assy.....		Inkl. pos 16 - 18
16	2			1911-4032-01	• Låsring.....	• Circlip.....		
17	1			1911-4033-01	• Kolvbult.....	• Piston pin.....		
18	1			1911-4034-01	• Kolvring.....	• Piston ring.....		
19	1			1911-4035-01	Cylinder- kolv kpl.....	Cylinder- piston assy.....		Inkl. pos 15
20	1			1911-4036-01	Jordkabel.....	Ground wire.....		
21	1			1911-4037-01	Stoppkabel.....	Stop wire.....		
22	1			1911-4038-01	Tändsystem kpl.....	Electronic coil assy.....		Inkl. pos 23, 24
23	1			1911-3421-01	• Fjäder.....	• Spring.....		
24	1			1911-3546-01	• Tändstiftshatt.....	• Spark plug cover.....		
25	1			1911-4039-01	Tändstift.....	Spark plug.....		
26	1			1911-4040-01	Deflektor.....	Deflector.....		
27	1			1911-4041-01	Skruv.....	Screw.....		
28	1			1911-4042-01	Ljuddämpare.....	Muffler.....		
29	3			1911-4043-01	Skruv.....	Screw.....		
30	1			1911-4044-01	Packning.....	Gasket.....		
31	1			1911-4045-01	Insugningsrör.....	Intake manifold.....		
32	1			1911-3440-01	Packning.....	Gasket.....		
33	1			1911-4046-01	Förgasare kpl.....	Carburettor assy.....		
34	1			1911-3612-01	Membran- packningssats.....	Diaphragm- gasket set.....		
35	1			1911-4047-01	Luftfilterhållare.....	Air filter holder.....		
36	1			1911-4048-01	Luftfilter.....	Air filter.....		
37	1			1911-4049-01	Luftfilterlock.....	Filter cover.....		
38	1			1911-4050-01	Mutter.....	Nut.....		
39	1			1911-4051-01	Kopplingskiva.....	Clutch disc.....		
40	1			1911-4052-01	Koppling.....	Clutch.....		
41	1			1911-4053-01	Drev.....	Sprocket.....		
42	1			1911-4054-01	Drevbricka.....	Sprocket washer.....		
43	1			1911-4055-01	Distans.....	Spacer.....		
44	1			1911-4056-01	Oljetank kpl.....	Oil tank assy.....		Inkl. pos 45
45	1			1911-4057-01	• Tanklock.....	• Oil tank cap.....		
46	1			1911-4058-01	Kedjespännarskruv.....	Chain tensioner screw.....		
47	1			1911-4059-01	Hållare.....	Retainer.....		
48	1			1911-4060-01	Kedjespännarblock.....	Chain tightener block.....		
49	2			1911-4061-01	Skruv.....	Screw.....		
50	1			1911-4062-01	Bränsletank kpl.....	Fuel tank assy.....		Inkl. pos 51, 52
51	1			1911-4063-01	• Tanklock.....	• Fuel tank cap.....		
52	1			1911-3150-01	• Bränslefilter.....	• Intake filter.....		
53	1			1911-4064-01	Vevhus.....	Crankcase.....		
61	11			1911-4065-01	Skruv.....	Screw.....		
62	1			1911-4066-01	Skruv.....	Screw.....		
63	2			1911-4067-01	Skruv.....	Screw.....		