


# Genuine Spare Parts

---

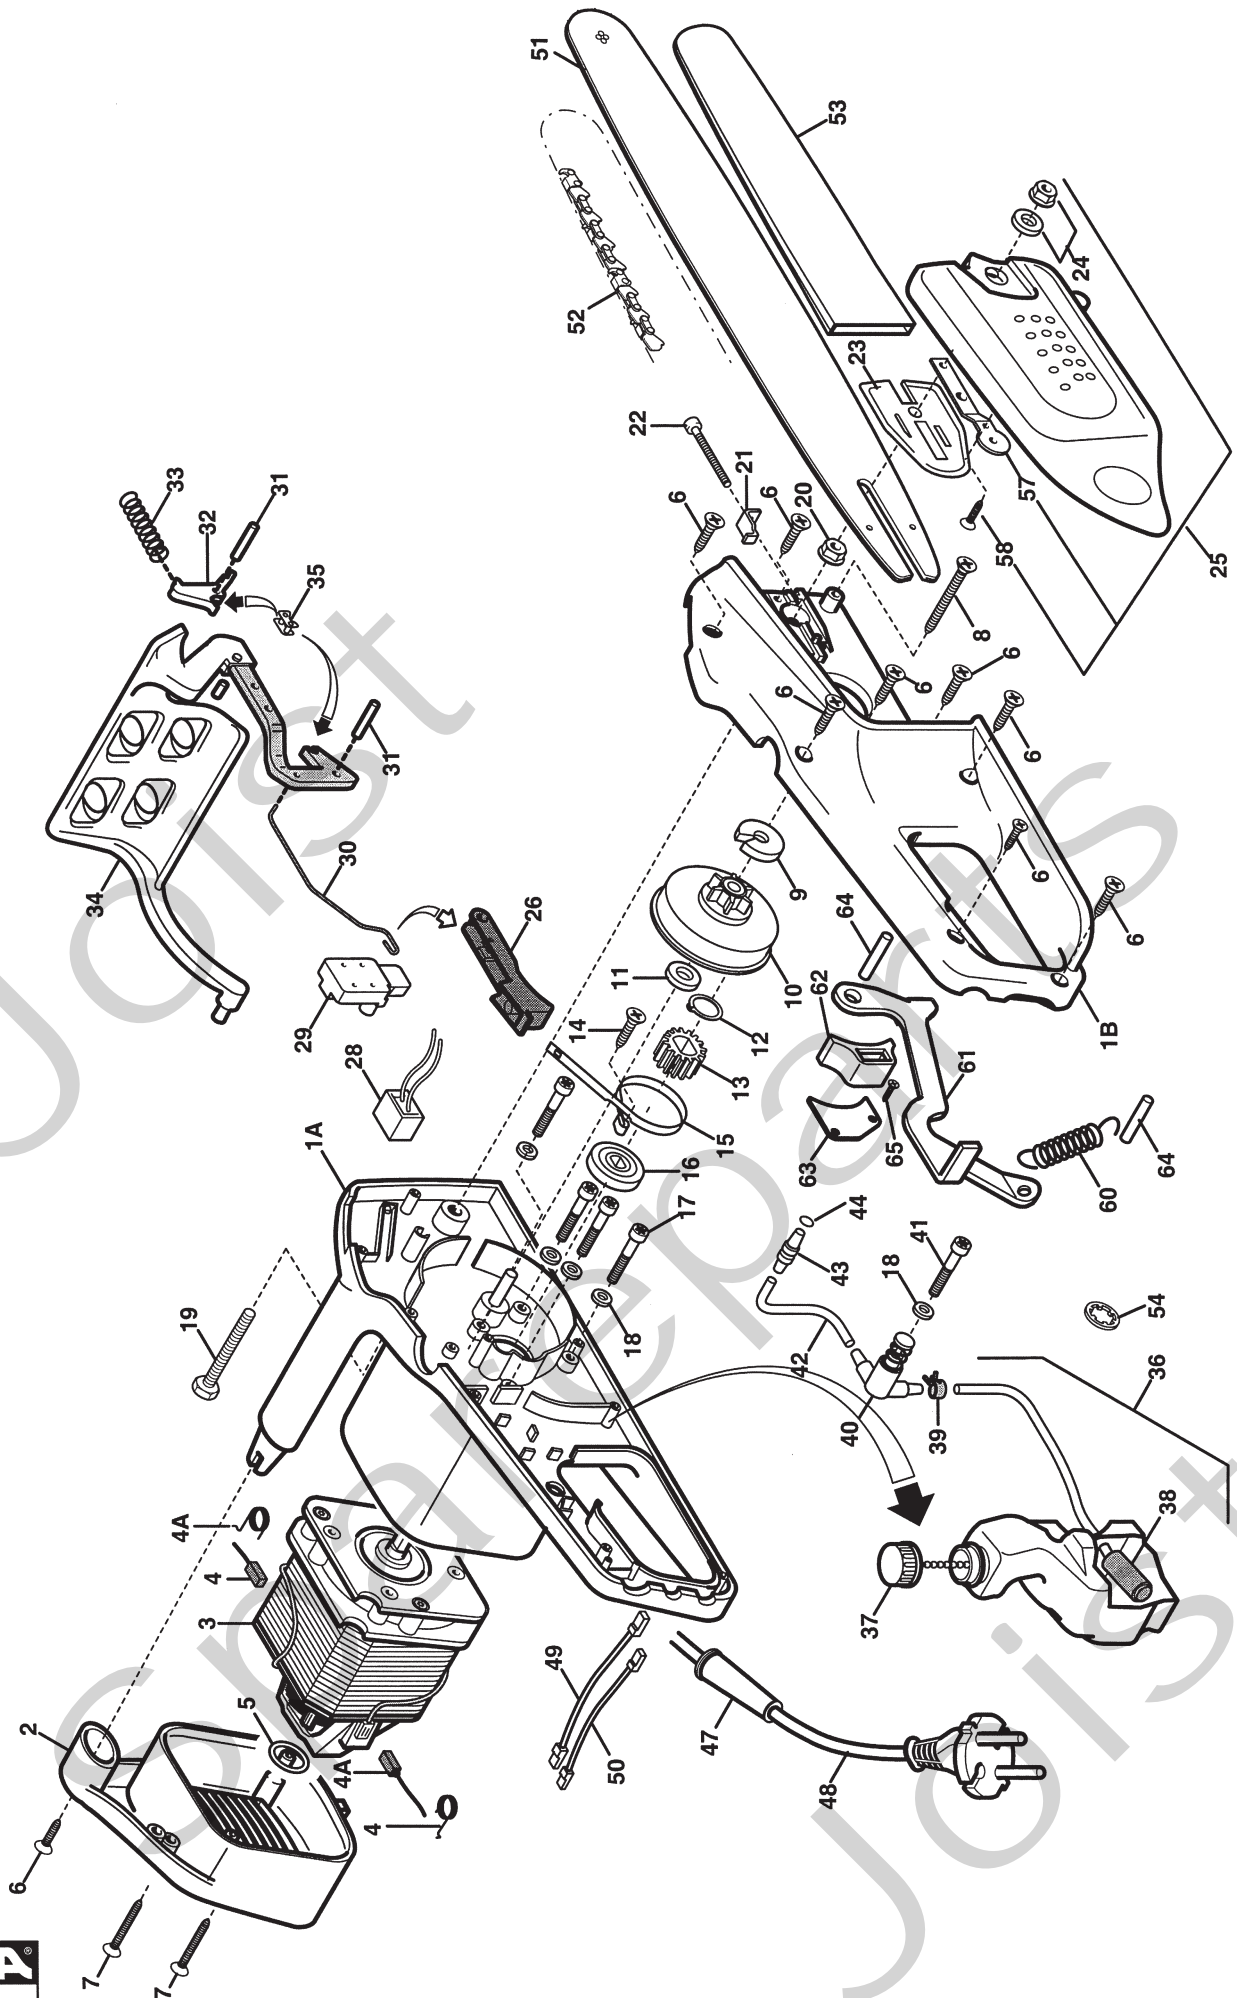

Spareparts  
Joist



**STIGA**  
 1741A  
 SPARE PARTS

Utgåva Issue		Bildnr Picture No		SE 190	SE 190	Sida Page		
2005-12		1741A				320		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4112							
1 A	1			1911-3940-01	Handtag- vä (gul) .....	Handle- LH (yellow).....		
1 B	1			1911-3939-01	Handtag- hö (gul) .....	Handle- RH (yellow).....		
2	1			1911-3576-01	Ändkåpa (grå) .....	End cover (grey) .....		
3	1			1911-3589-01	Motor m.fläkt .....	Motor w.fan.....		
4	2			1911-3859-01	Kol m. hållare .....	Brush holder w.brush.....		
4 A	2			1911-3857-01	Fjäder.....	Spring .....		
5	1			1911-3610-01	Tätningsring .....	Seal ring.....		
6	9			1911-3004-01	Skruv .....	Screw .....		
7	2			1911-3254-01	Skruv .....	Screw .....		
8	1			1911-3255-01	Skruv .....	Screw .....		
9	1			1911-3356-01	Drevstopp .....	Gear stop plate.....		
10	1			1911-3603-01	Kedjedrev.....	Gear .....		
11	1			1911-3334-01	Bricka .....	Washer.....		
12	1			1911-3331-01	Låsring .....	Snap ring .....		
13	1			1911-3427-01	Motordrev.....	Motor sprocket .....		
14	1			1911-3256-01	Skruv .....	Screw .....		
15	1			1911-3363-01	Bromsband .....	Brake band .....		
16	1			1911-3426-01	Bromsskiva.....	Brake disc .....		
17	4			1911-3007-01	Skruv .....	Screw .....		
18	5			1911-3015-01	Bricka .....	Washer.....		
19	1			1911-3241-01	Skruv .....	Screw .....		
20	1			1911-3030-01	Mutter.....	Nut .....		
21	1			1911-3357-01	Kedjespännare .....	Chain tightener.....		
22	1			1911-3244-01	Skruv .....	Screw .....		
23	1			1911-3354-01	Svärdplåt .....	Bar plate.....		
24	1			1911-3609-01	• Mutter m.bussning .....	• Nut w.bushing.....		
25	1			1911-3606-01	Kedjekåpa kpl (grå).....	Chain cover (grey) .....		Inkl. pos 24, 57, 58
26	1			1911-3452-01	Brytararm .....	Switch lever .....		
28	1			1911-3056-01	Kondensator .....	Condensor .....		
29	1			1911-3314-01	Brytare.....	Switch .....		
30	1			1911-3420-01	Brytarstång .....	Switch rod.....		
31	1			1911-3309-01	Pinne .....	Pin .....		
32	1			1911-3353-01	Arm .....	Lever .....		
33	1			1911-3399-01	Bromsfjäder.....	Brake spring.....		
34	1			1911-3605-01	Handskydd m.arm .....	Hand guard w.lever .....		
35	1			1911-3535-01	Kedjebromslänk.....	Chain brake link .....		
36	1			1911-3533-01	Oljetank kpl.....	Oil tank assy.....		Inkl. pos 37, 38
37	1			1911-3534-01	• Tanklock .....	• Tank cap .....		
38	1			1911-3608-01	• Oljefilter m.slang.....	• Oil filter w.pipe .....		
39	1			1911-3327-01	Slangklämma.....	Clamp.....		
40	1			1911-3616-01	Oljepump .....	Oil pump .....		
41	1			1911-3001-01	Skruv .....	Screw .....		
42	1			1911-3504-01	Oljerör .....	Oil tube .....		
43	1			1911-3477-01	Munstycke .....	Nozzle .....		
44	1			1911-3429-01	Packning .....	Gasket .....		
47	1			1911-3461-01	Kabelskydd .....	Cord protector.....		
48	1			1911-3319-01	Anslutningssladd .....	Power cord .....		
49	1			1911-3318-01	Kabel- kort (hona).....	Cable- short (female).....		
50	1			1911-3316-01	Kabel- lång (hona) .....	Cable- long (female).....		
51	1			1911-3225-01	Svärd .....	Bar .....		14" (3/8"x0.050)
52	1			1519-9001-50	Kedja (50E).....	Chain (50E) .....		91VG (3/8")
53	1			1911-3519-01	Kedjeskydd .....	Chain cover .....		14"
54	2			9675-0008-02	Starlock .....	Locking washer.....		
57	1			1911-3355-01	• Svärdplåt .....	• Bar plate.....		
58	1			1911-3249-01	• Skruv .....	• Screw .....		
60	1			1911-3935-01	Fjäder.....	Spring .....		
61	1			1911-3934-01	Arm .....	Lever .....		
62	1			1911-3936-01	Länkblock .....	Link block .....		
63	1			1911-3933-01	Platta .....	Plate.....		
64	2			1911-3309-01	Pinne .....	Pin .....		
65	1			1911-3950-01	Skruv .....	Screw .....		
99	1			1911-3518-01	Svärdnyckel.....	Bar key .....		Ej ill/not ill.