


Genuine Spare Parts



Spareparts
Joist

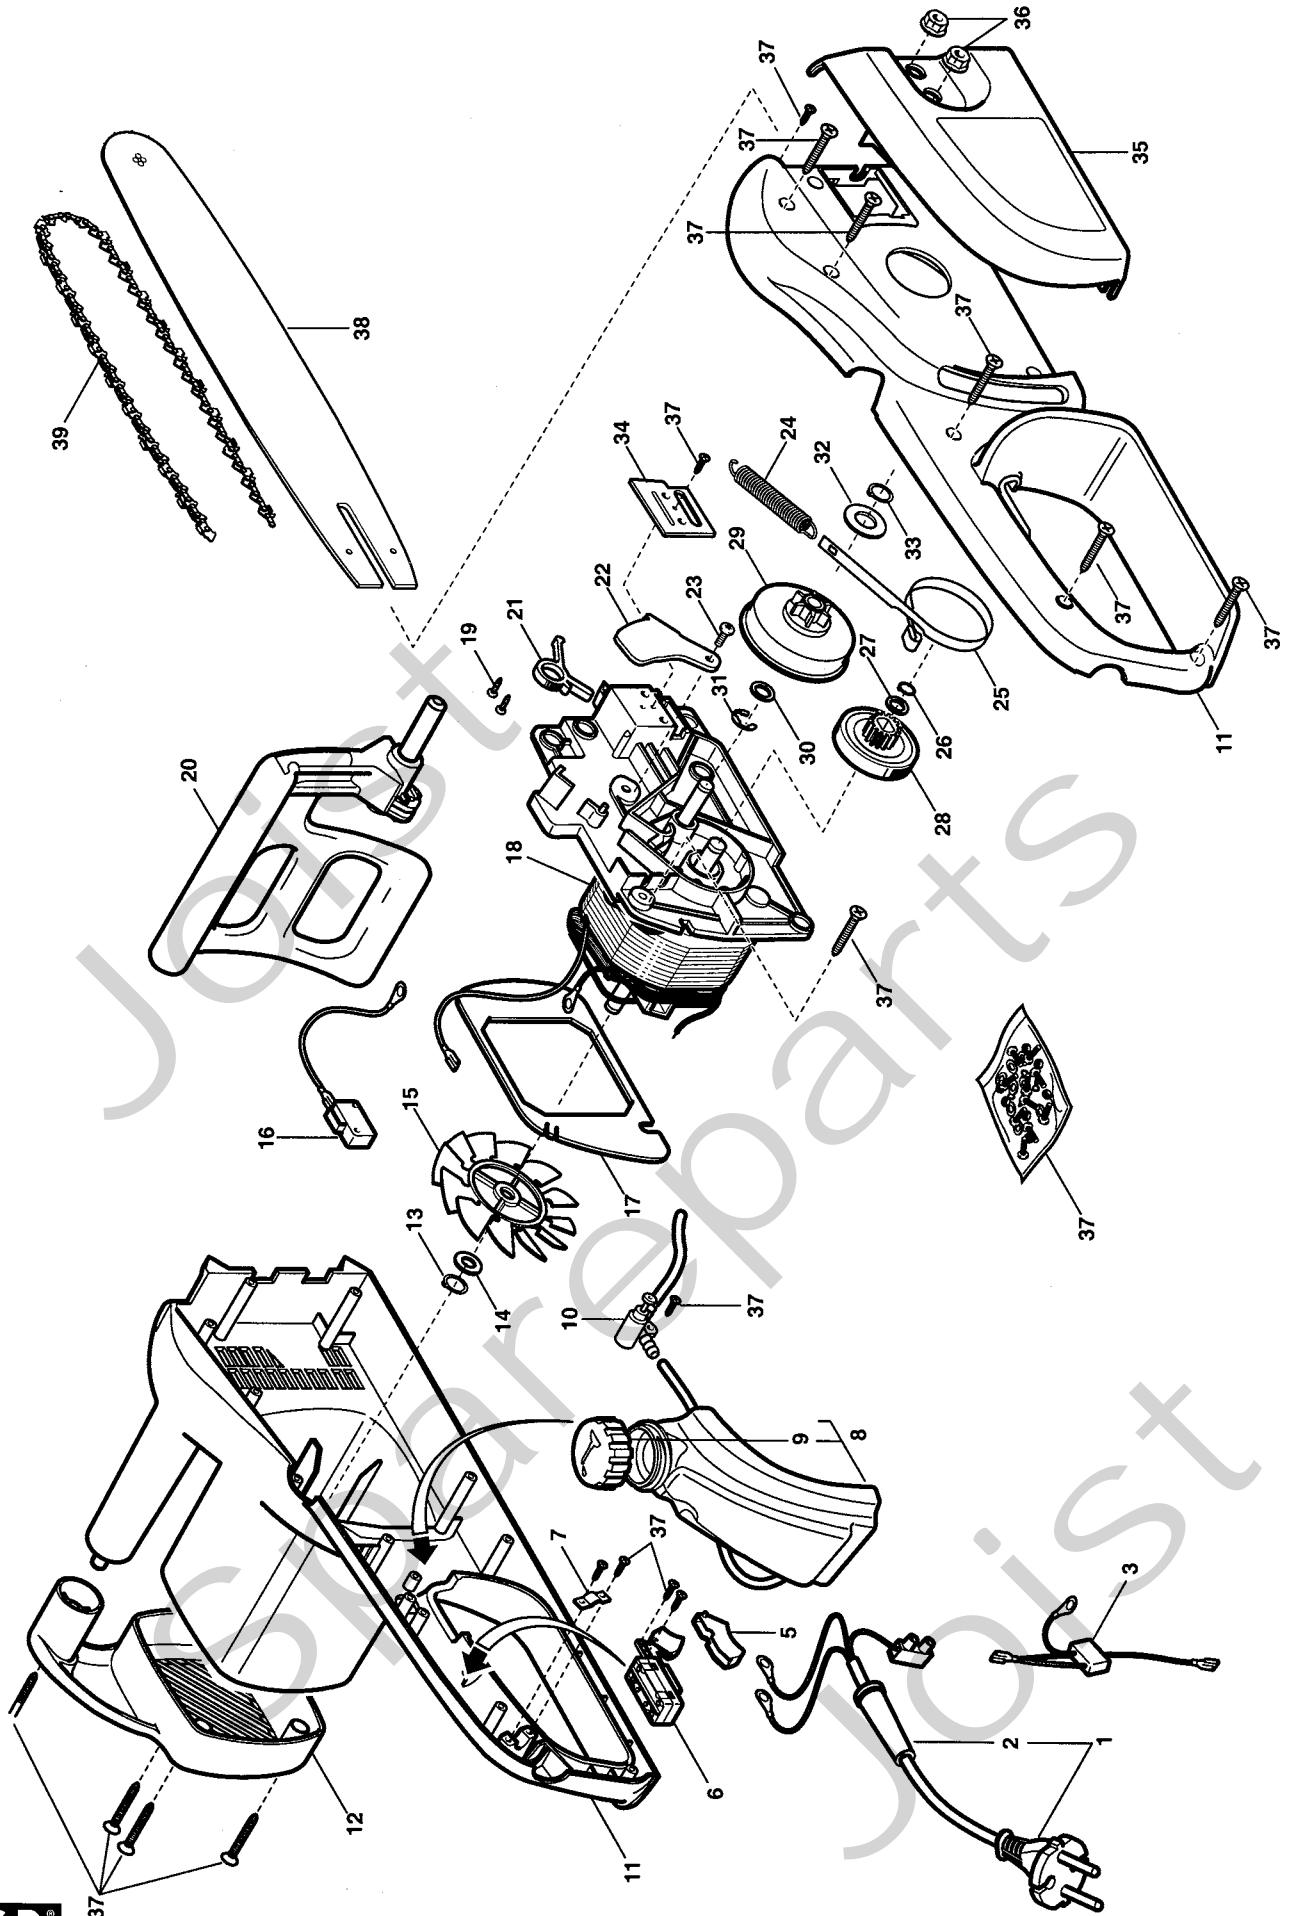

Utgåva Issue		Bildnr Picture No		SE 180	SE 180	Sida Page		
2004-12		1743				296		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	4119 -11							
X	1	1		1911-3954-01	Anslutningsladd	Power cord		Inkl. pos 2
X	2	1		1911-3955-01	• Kabelhylsa	• Cord protector		
	3	1		1911-3886-01	Kondensator	Condensator		
X	5	1		1911-3956-01	Brytararm	Switch lever		
X	6	1		1911-3957-01	Strömbrytare	Switch		
X	7	1		1911-3958-01	Fäste	Bracket		
X	8	1		1911-3959-01	Oljetank kpl	Oil tank assy		Inkl. pos 9
X	9	1		1911-3960-01	• Tanklock	• Tank cap		
X	10	1		1911-3961-01	Oljepump	Oil pump		
X	11	1		1911-3962-01	Handtag kpl (gul)	Handle assy (yellow)		
X	12	1		1911-3963-01	Ändkåpa (grå)	End cover (grey)		
X	13	1		1911-3964-01	Låsring	Snap ring		
X	14	1		1911-3965-01	Bricka	Washer		
X	15	1		1911-3966-01	Fläkt	Fan		
X	16	1		1911-3967-01	Brytare	Switch		
X	17	1		1911-3968-01	Isolering	Insulator		
X	18	1		1911-3969-01	Elmotor	El. motor		
X	19	2		1911-3970-01	Skruv	Screw		
X	20	1		1911-3971-01	Handskydd	Hand guard		
X	21	1		1911-3972-01	Arm	Lever		
X	22	1		1911-3973-01	Kedjebromsarm	Chain brake lever		
X	23	1		1911-3974-01	Skruv	Screw		
X	24	1		1911-3975-01	Fjäder	Spring		
X	25	1		1911-3976-01	Bromsband	Brake band		
X	26	1		1911-3977-01	Låsring	Snap ring		
X	27	1		1911-3978-01	Bricka	Washer		
X	28	1		1911-3979-01	Bromshjul	Brake wheel		
X	29	1		1911-3980-01	Kedjedrev	Sprocket		
X	30	1		1911-3981-01	Bricka	Washer		
X	31	1		1911-3982-01	Låsring	Snap ring		
X	32	1		1911-3983-01	Bricka	Washer		
X	33	1		1911-3964-01	Låsring	Snap ring		
X	34	1		1911-3984-01	Kedjesträckare	Chain tensioner		
X	35	1		1911-3985-01	Svärdkåpa (grå)	Bar holder (grey)		
X	36	2		1911-3986-01	Svärdmutter	Bar nut		
X	37	1		1911-3987-01	Skruvsats	Screw set		
X	38	1		1911-3988-01	Svärd	Bar		
X	39	1		1911-3989-01	Kedja	Chain		