



Genuine Spare Parts




Spareparts
Joist

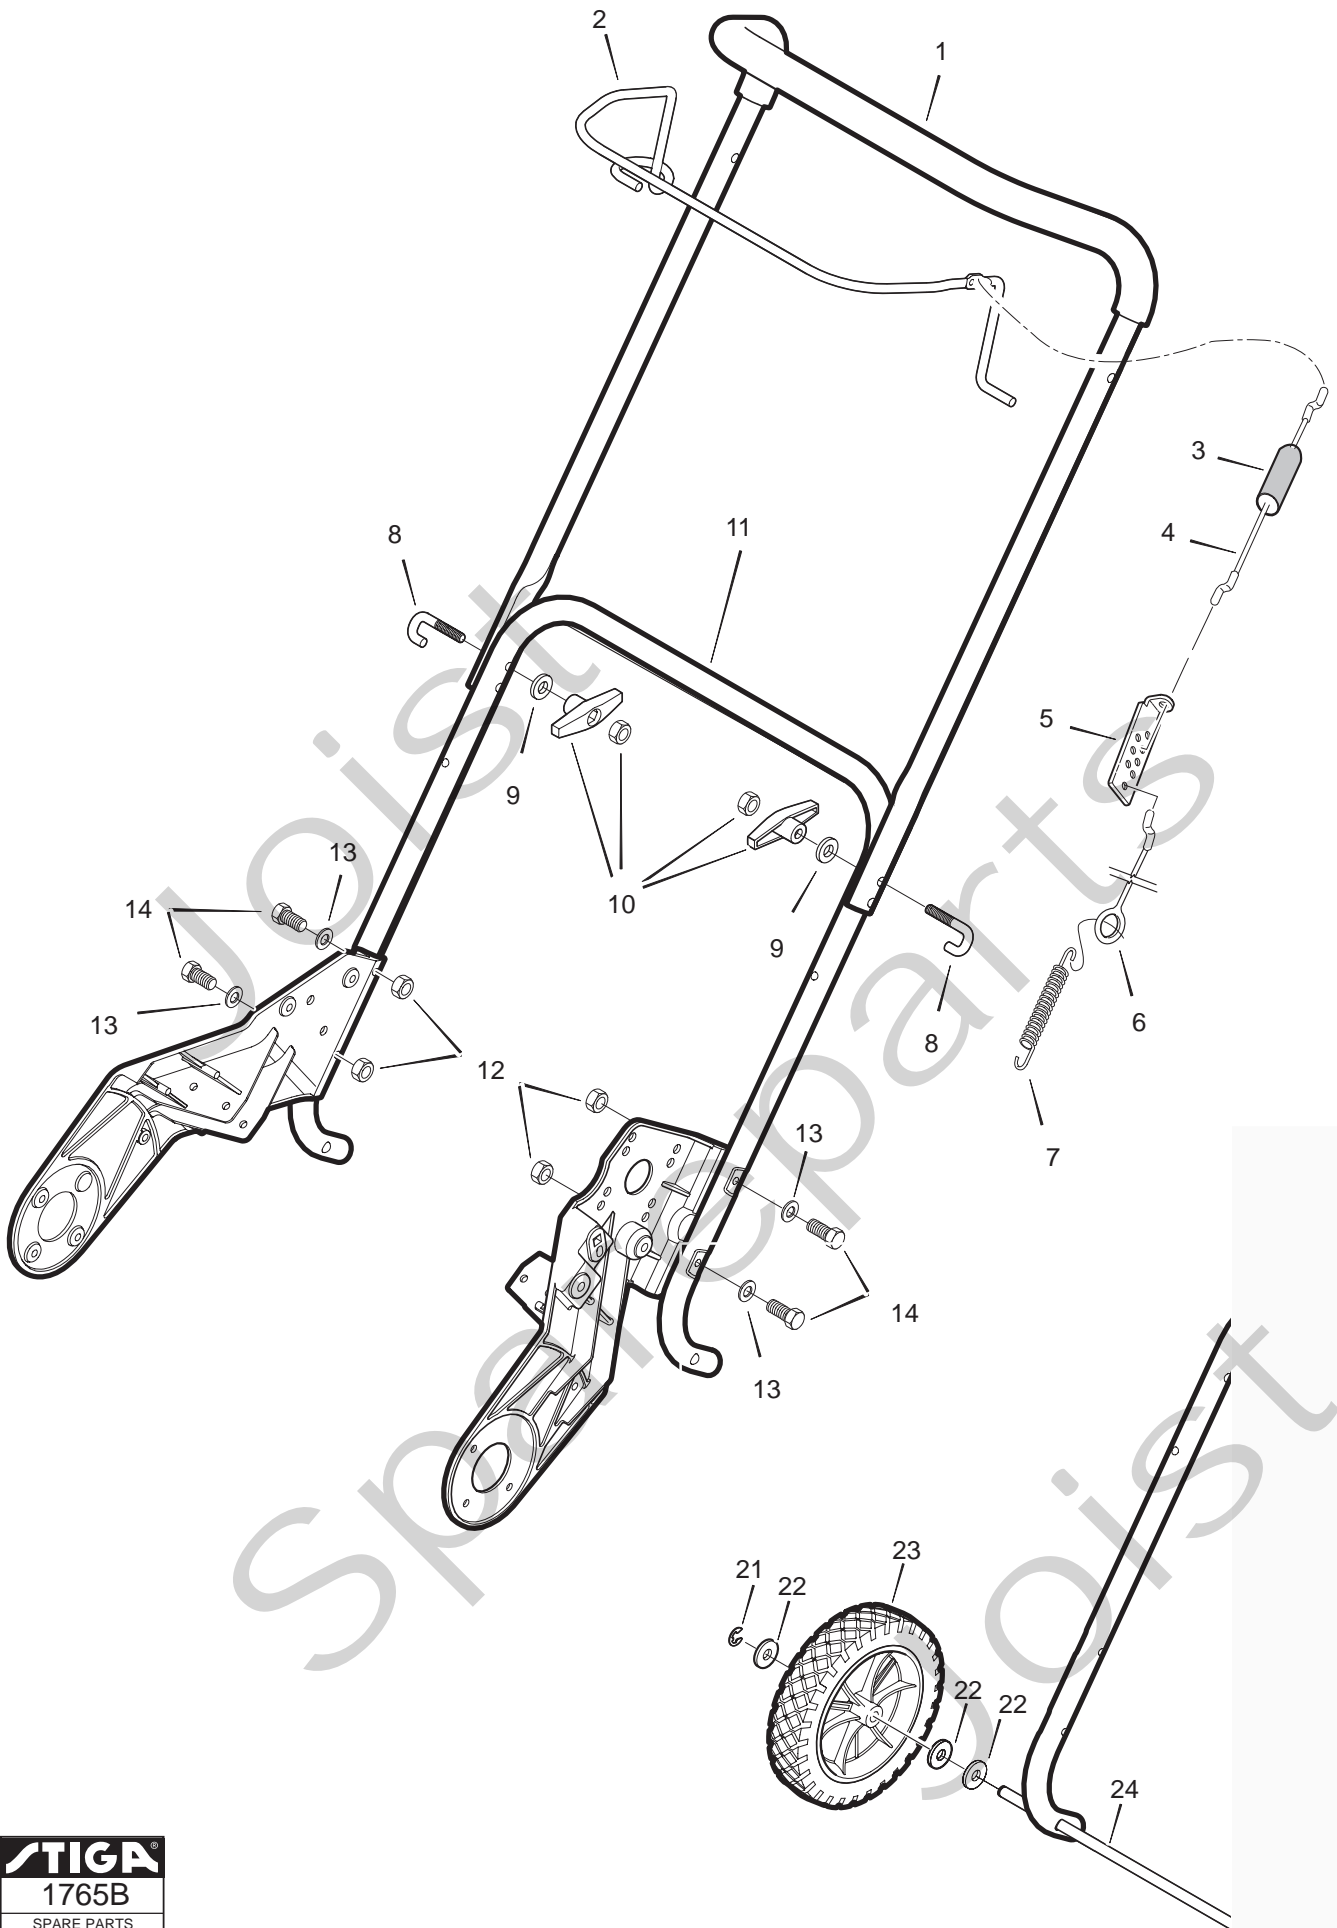


Utgåva Issue		Bildnr Picture No		SNOW FROST ES STYRE HJUL		SNOW FROST ES HANDLE WHEELS		Sida Page	
2009- 14		1765B						8	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2812 -30								
1	1				1812-1989-01 Styre- överdel	Handle- upper.....			
2	1				1812-1961-01 Reglagebygel	Control bail			
3	1				1133-0968-01 Wirehylsa.....	Clutch spring boot			
4	1				1812-2002-01 Reglagewire.....	Control cable.....			
5	1				1133-0977-01 Wirefäste	Cable adjust bracket.....			
6	1				1812-1883-01 Reglagewire- nedre	Control cable- lower			
7	1				1812-1670-01 Fjäder.....	Spring			
8	2				1812-1973-01 U- bult.....	U- bolt			
9	2				1133-0933-01 Kupad bricka.....	Formed washer			
10	2				1812-2340-01 Lås ratt	Winged knob.....			
11	1				1812-1960-01 Styre- underdel	Handle- lower			
12	4				1812-0812-01 Låsmutter	Locking nut			
13	4				9699-0028-02 Planbricka.....	Flat washer.....			
14	4				9988-3532-12 Skruv	Screw			
21	2				1133-1021-01 Låsring	Retaining ring			
22	6				9699-0030-02 Planbricka.....	Flat washer.....			
23	2				1812-1455-01 Hjul	Wheel.....			
24	1				1812-1975-01 Hjulaxel.....	Axle rod.....			

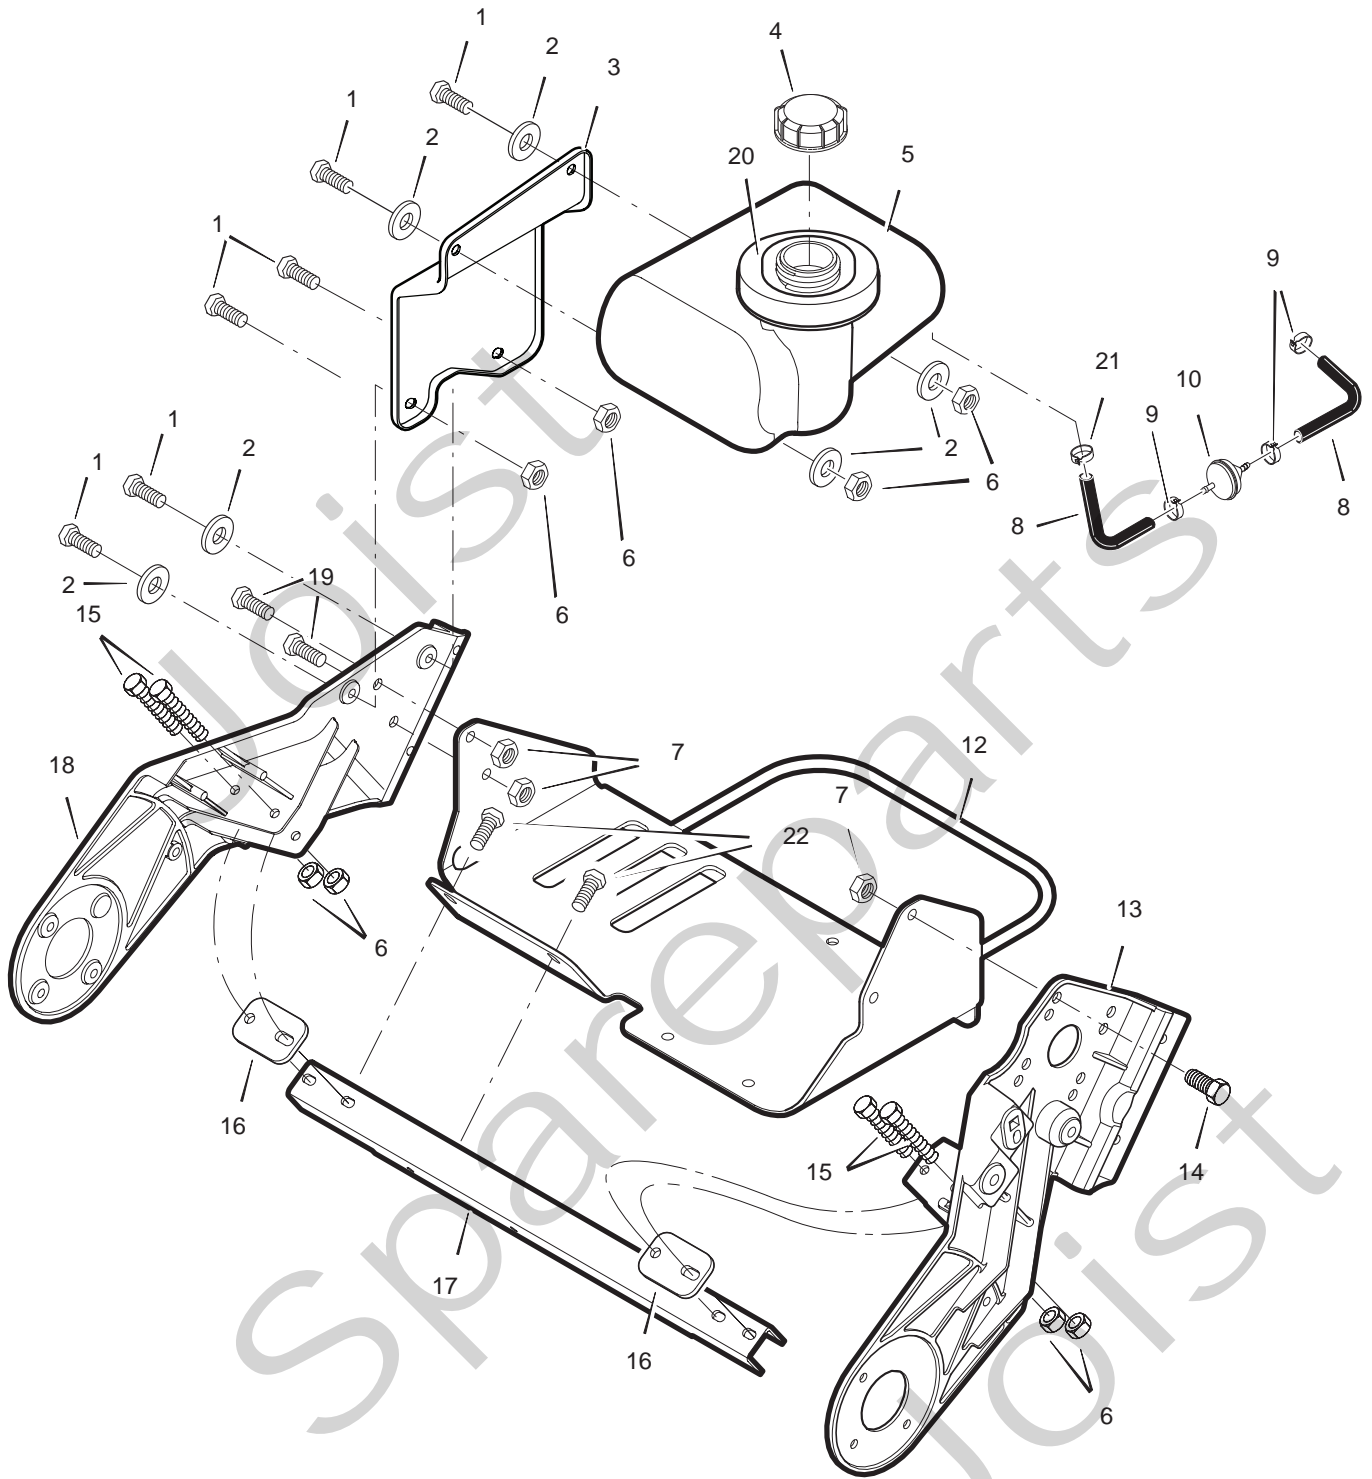


Utgåva Issue 2009-14		Bildnr Picture No 1766B		SNOW FROST ES RAM BRÄNSLETANK		SNOW FROST ES FRAME FUEL TANK		Sida Page 10	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2812 -30								
X	1	4			9988-3519-16	Skruv.....	Screw.....		
	2	4			9699-0028-02	Planbricka.....	Flat washer.....		
	3	1			1812-2471-01	Fäste.....	Bracket.....		
X	4	1			1812-2306-01	Tänklöck.....	Fuel tank cap.....		
	5	1			1812-2438-01	Bränsletank.....	Fuel tank.....		
	6	8			1812-0812-01	Låsmutter.....	Locking nut.....		
	7	3			1812-0811-01	Låsmutter.....	Locking nut.....		
	8	2			1812-1998-01	Bränsleslang.....	Fuel line tubing.....		
	9	3			1812-1487-01	Slangklämma.....	Fuel line clamp.....		
	10	1			1812-2286-01	Bränslefilter.....	Fuel line filter.....		
	12	1			1812-1954-01	Motorvagg.....	Engine cradle.....		
	13	1			1812-1968-01	Ram-vä.....	Frame- LH.....		
	14	1			9988-3616-16	Skruv.....	Screw.....		
	15	4			9988-3551-12	Skruv.....	Screw.....		
	16	2			1812-1894-01	Platta.....	Bolting support plate.....		
	17	1			1812-1955-01	Ramstöd.....	Frame support.....		
	18	1			1812-1967-01	Ram-hö.....	Frame- RH.....		
	19	2			9988-3619-16	Skruv.....	Screw.....		
	20	1			1812-2330-01	Skumplastring.....	Foam ring.....		
	21	1			1133-0070-01	Slangklämma.....	Fuel line clamp.....		
	22	2			9988-3516-16	Skruv.....	Screw.....		

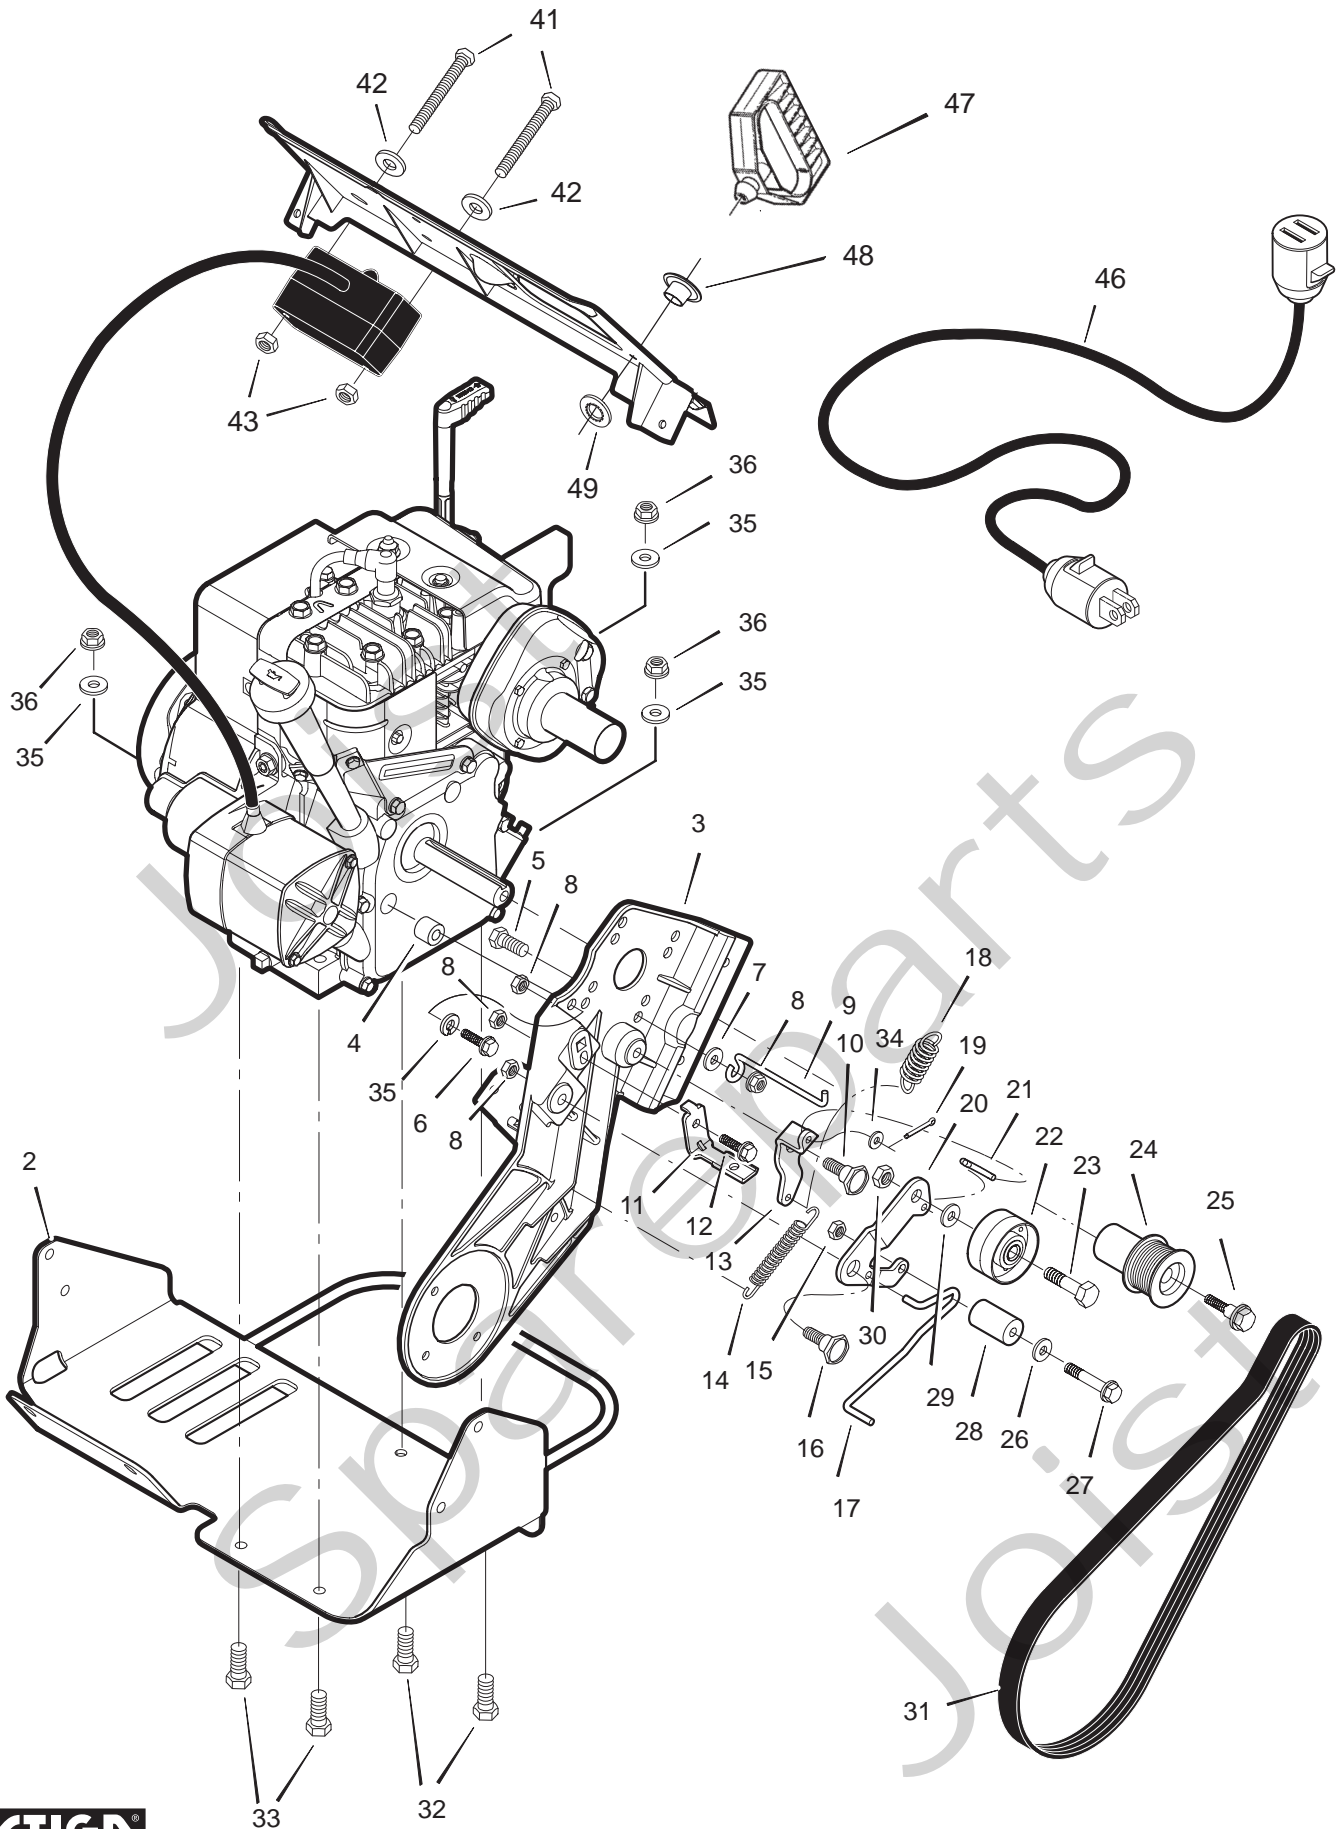


Utgåva Issue 2009- 14		Bildnr Picture No 1767A		SNOW FROST ES REMTRANSMISSION MOTOR		SNOW FROST ES BELT TRANSMISSION ENGINE		Sida Page 12	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2812 -30								
2	1			1812-1954-01	Motorvagg	Engine cradle			
3	1			1812-1968-01	Ram- vä	Frame- LH			
4	4			1812-1997-01	Avvibrering	Antivibration mount			
5	1			9988-3625-16	Skruv	Screw			
6	4			1812-1918-01	Skruv	Screw			
7	1			9699-0029-02	Planbricka	Flat washer			
8	4			1812-0811-01	Låsmutter	Locking nut			
9	1			1812-1893-01	Remstyrning	Belt guide			
10	1			1812-1829-01	Ansatsbult	Shoulder bolt			
11	1			1812-1891-01	Brombelägg	Brake pad			
12	1			9988-3516-16	Skruv	Screw			
13	1			1812-1882-01	Spännarm	Idler pivot arm			
14	1			1812-1885-01	Fjäder	Spring			
15	1			1812-0812-01	Låsmutter	Locking nut			
16	1			1812-1829-01	Ansatsbult	Shoulder bolt			
17	1			1812-1896-01	Bromsstång	Brake wire			
18	1			1812-1670-01	Fjäder	Spring			
19	1			1812-1879-01	Låsnål	Cotter pin			
20	1			1812-1888-01	Spännarm	Idler bracket arm			
21	1			1812-1881-01	Länkstång	Clutch linkage rod			
22	1			1133-0936-01	Spännrulle	Idler pulley			
23	1			9988-3738-12	Skruv	Screw			
24	1			1812-1977-01	Motorremskiva	Engine belt pulley			
25	1			1812-1976-01	Bult	Bolt			
26	1			9699-0028-02	Planbricka	Flat washer			
27	1			9988-3551-12	Skruv	Screw			
28	1			1812-1897-01	Rulle	Pinch roller			
29	1			1812-1880-01	Planbricka	Flat washer			
30	1			9743-3721-32	Mutter	Nut			
31	1			1812-1878-01	Drivrem	Drive belt			
32	2			9988-3651-12	Skruv	Screw			
33	2			9988-3725-16	Skruv	Screw			
34	1			9699-0079-02	Bricka	Washer			
35	8			9683-0030-02	Låsbricka	Lock washer			
36	4			9795-3631-02	Mutter	Nut			
41	2			1812-1923-01	Skruv	Screw			
42	2			9699-0079-02	Bricka	Washer			
43	2			1812-1921-01	Mutter	Nut			
46	1			1812-1615-01	Förlängningssladd	Extension cord			
47	1			1812-1995-01	Handtag	Grip			
48	1			1812-2123-01	Linhylsa	Rope grommet			
49	1			1812-2124-01	Bricka	Washer			

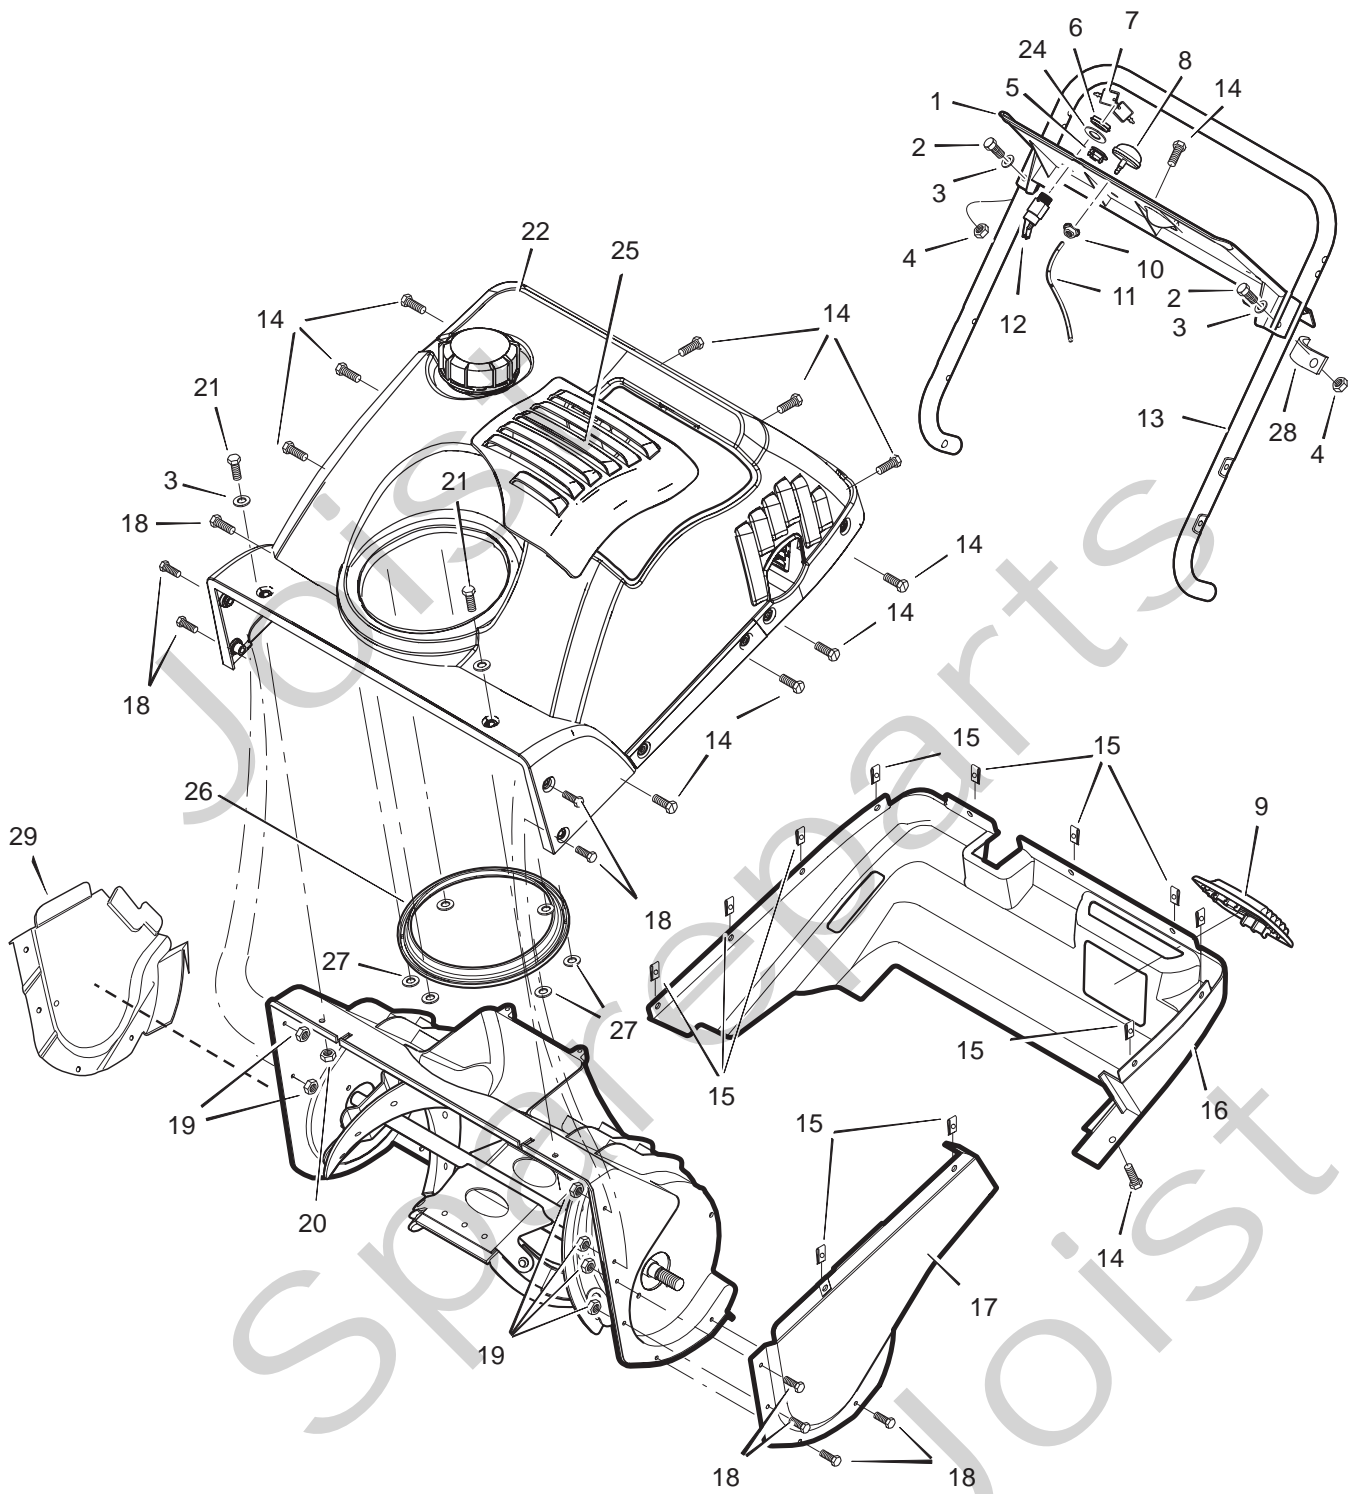

Utgåva Issue		Bildnr Picture No		SNOW FROST ES KÅPÖR		SNOW FROST ES COVERS		Sida Page	
2009- 14		1768B						14	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2812 -30								
1	1				1812-2327-01	Reglagepanel	Control panel.....		
2	2				9988-3532-12	Skruv	Screw		
3	4				9699-0028-02	Planbricka	Flat washer		
4	2				1812-0812-01	Låsmutter	Locking nut		
5	1				1812-1970-01	Bussning	Chute crank bushing		
6	1				1134-2852-01	Mutter	Nut		
7	1				1812-2289-01	Tändningsnyckel	Ignition key		
8	1				1812-2288-01	Primernippel	Primer bulb		
9	1				1812-1974-01	Lock	Cover		
10	1				9795-3531-02	Mutter	Nut		
11	1				1812-1496-01	Primerslang	Primer hose		
12	1				1133-0956-01	Tändningslås	Ignition switch		
13	1				1812-1960-01	Styre- underdel	Handle- lower		
14	13				1133-0955-01	Skruv	Screw		
15	11				1133-1026-01	Snabbmutter	Speed nut		
16	1				1812-2325-01	Kåpa- undre, svart	Cover- bottom, black		
17	1				1812-2326-01	Remskydd, svart	Belt cover, black		
18	8				1812-2331-01	Skruv	Screw		
19	6				1812-2332-01	Mutter	Nut		
20	2				1812-1758-01	Mutter	Nut		
21	2				9863-3516-16	Skruv	Screw		
22	1				1812-2343-01	Kåpa- övre, gul	Cover- top, yellow		
24	1				1134-2853-01	Bricka	Washer		
25	1				1812-2344-01	Lock, gul	Oil access cover, yel		
26	1				1812-1987-01	Packning	Gasket		
27	6				1812-1916-01	Snabbmutter	Push nut		
28	1				1812-2110-01	Klämma	Cable clamp		
29	1				1812-2334-01	Kåpa- hö, svart	Cover- RH, black		

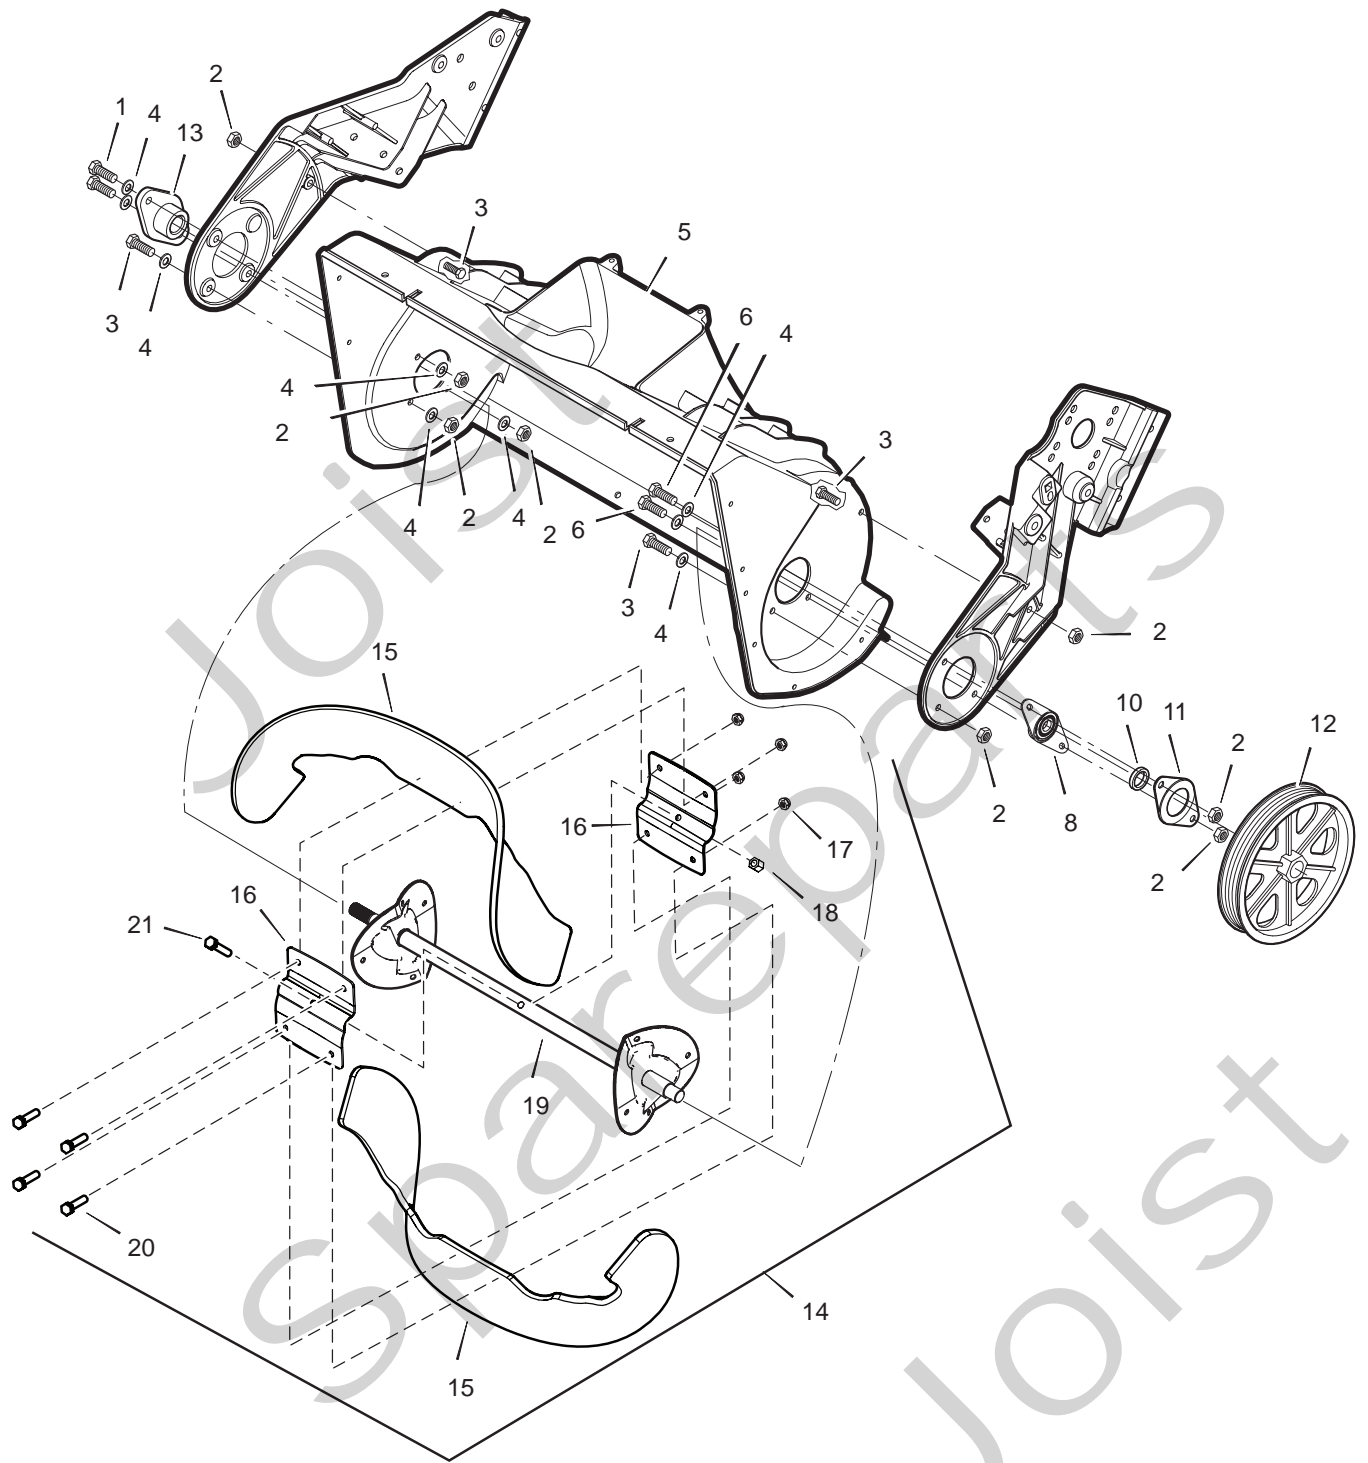

Utgåva Issue		Bildnr Picture No		SNOW FROST ES SNÖSKRUV		SNOW FROST ES AUGER		Sida Page	
2009- 14		1769B						16	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2812 -30								
	1	2			9988-3525-16	Skruv	Screw		
	2	8			1812-0812-01	Låsmutter	Locking nut		
	3	3			9988-3519-16	Skruv	Screw		
	4	10			9699-0028-02	Planbricka	Flat washer		
X	5	1			1812-2389-01	Snöskruvhus	Auger housing		
	6	2			9988-3516-16	Skruv	Screw		
	8	1			1133-0947-01	Lager m.hållare	Bearing & plate		
	10	1			1812-1895-01	Distans	Sleeve spacer		
	11	1			1133-1000-01	Lagerhållare	Retainer plate		
	12	1			1812-1889-01	Remskiva	Pulley		
	13	1			1133-1019-01	Flänslager	Flange bearing		
X	14	1			1812-2397-01	Snöskruv kpl.	Auger assy		Inkl. pos 15-21
X	15	2			1812-2388-01	• Gummiskär	• Auger blade		
X	16	2			1812-2390-01	• Fäste	• Center bracket		
	17	4			9743-3521-32	• Mutter	• Nut		
	18	1			9743-3621-32	• Mutter	• Nut		
X	19	1			1812-2391-01	• Snöskruvaxel	• Sub shaft		
X	20	4			1812-2360-01	• Skruv	• Cap screw		
	21	1			9988-3638-12	• Skruv	• Screw		

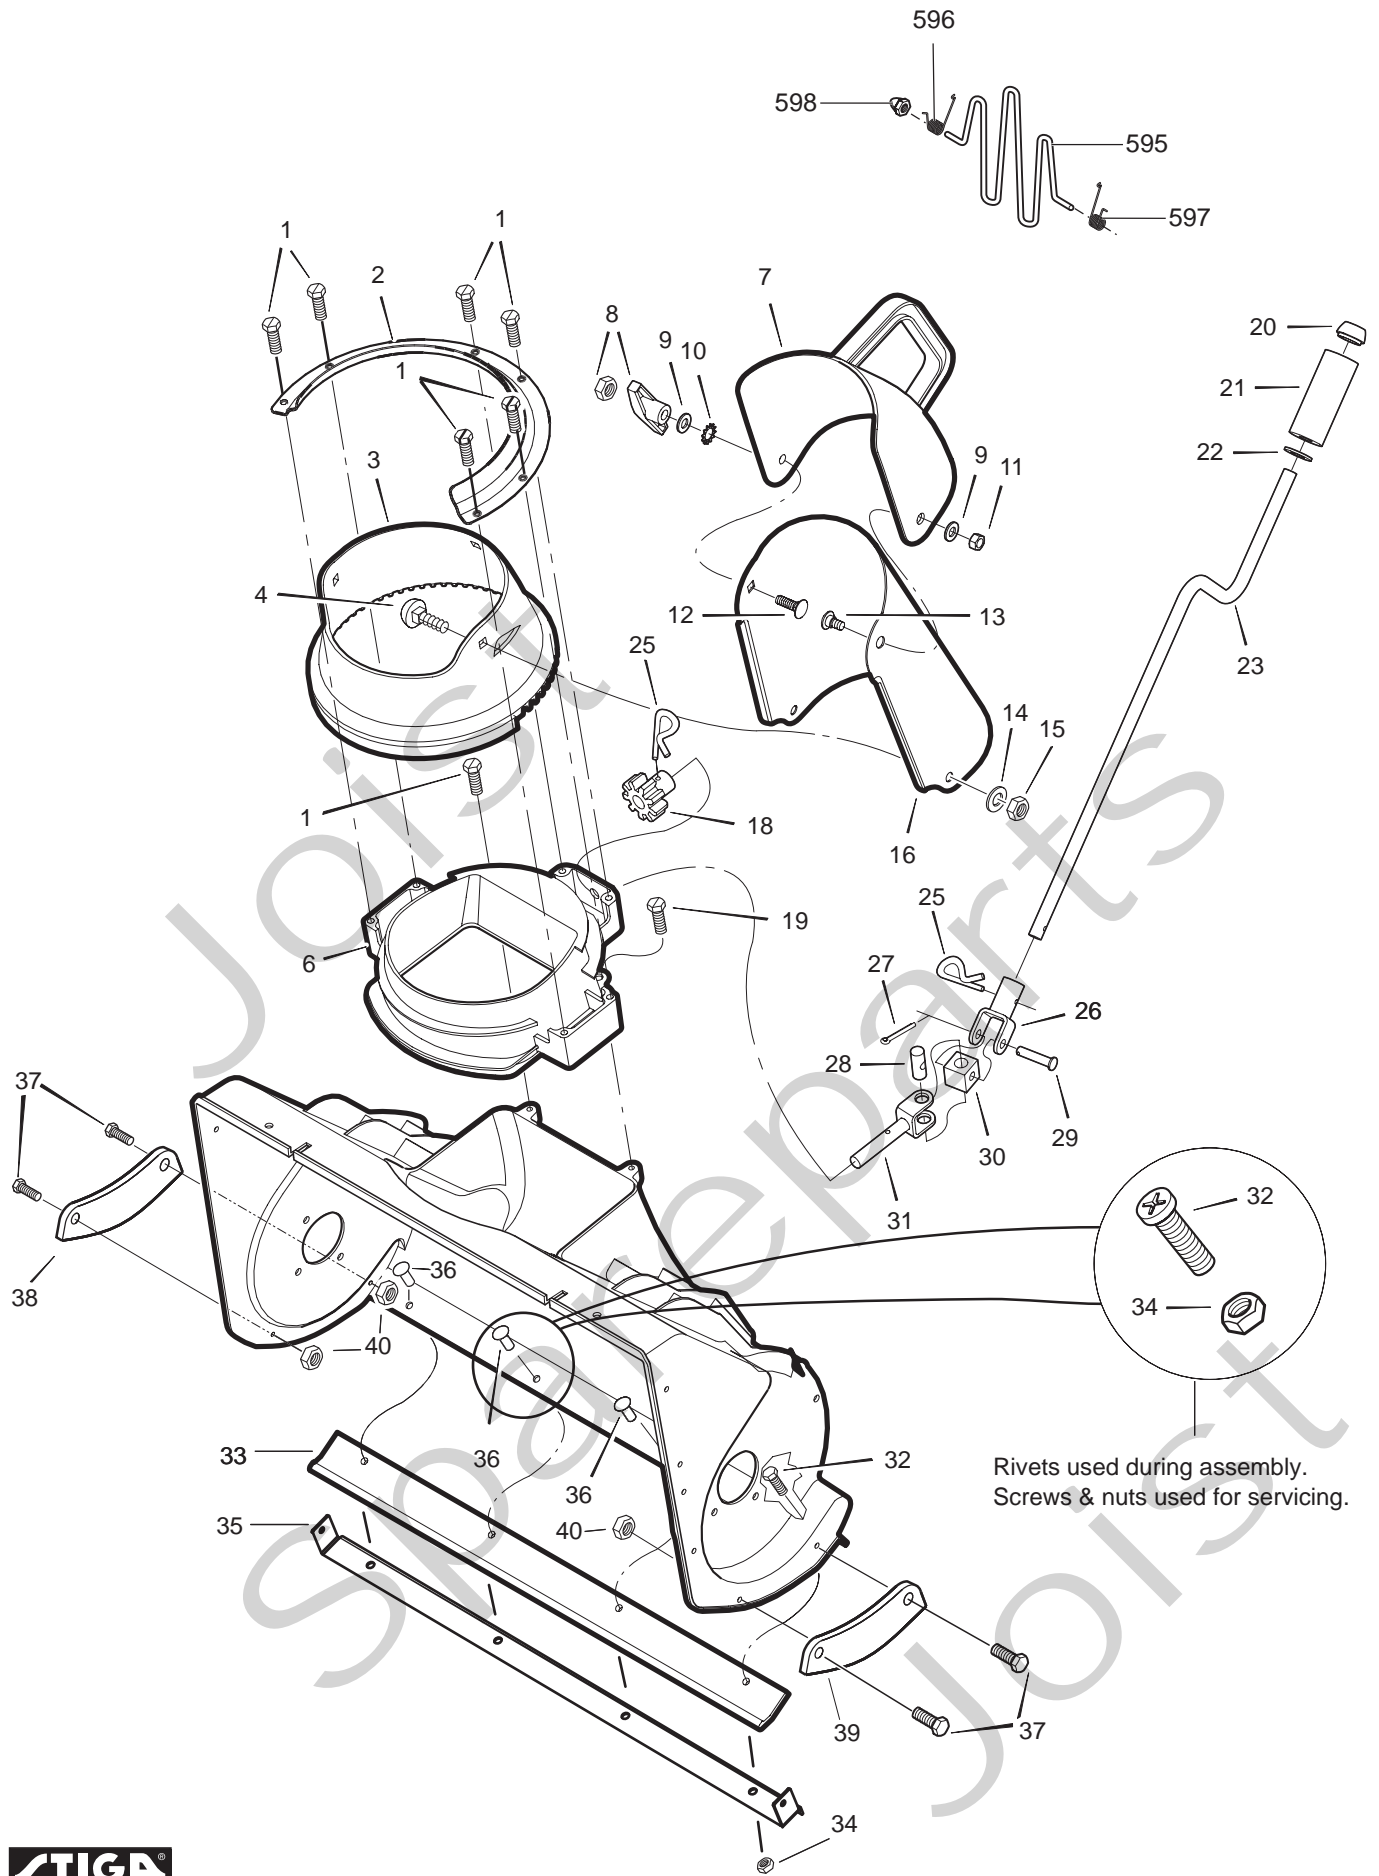

Utgåva Issue 2009- 14		Bildnr Picture No 1770B		SNOW FROST ES UTKAST INSTÄLLNINGSVEVŞ		SNOW FROST ES DISCHARGE CHUTE CHUTE ROD		Sida Page 18	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2812 -30								
1	7				1133-0955-01 Skruv.....	Screw.....			
2	1				1812-2057-01 Hållare	Chute ring retainer			
3	1				1812-2058-01 Utkastring.....	Chute ring			
4	2				9899-3622-16 Skruv.....	Screw.....			
6	1				1812-2399-01 Fäste- utkast	Chute neck.....			
7	1				1812-1979-01 Utkastskärm	Upper chute			
8	1				1133-0932-01 Låsrott	T- knob.....			
9	2				9699-0029-02 Planbricka.....	Flat washer.....			
10	1				9678-0010-02 Låsbricka	Starlock.....			
11	1				1812-0811-01 Låsmutter	Locking nut.....			
12	1				1812-1678-01 Vagnsbult	Carriage bolt			
13	1				1812-1978-01 Bult.....	Bolt			
14	2				9699-0035-02 Planbricka.....	Flat washer.....			
15	2				9743-3621-32 Mutter.....	Nut			
16	1				1812-1994-01 Utkaströr	Lower chute			
18	1				1812-1706-01 Drev.....	Gear.....			
19	2				1133-0955-01 Skruv.....	Screw.....			
20	1				1812-0396-01 Låsning.....	Retainer			
21	1				1133-0959-01 Handtag.....	Knob			
22	1				9699-0035-02 Planbricka.....	Flat washer.....			
23	1				1812-2122-01 Inställn. vev	Chute rotation crank.....			
25	2				1812-1791-01 Låsnål.....	Hair pin			
26	1				1812-1708-01 Gaffel.....	Yoke adapter			
27	1				9599-0033-00 Saxsprint	Split pin.....			
28	1				1812-1316-01 Axel	Universal pin.....			
29	1				1812-1318-01 Sprint.....	Clevis pin			
30	1				1812-1317-01 Ledknut	Universal pivot block.....			
31	1				1812-1969-01 Gaffelstång	Crank rod			
32	4				9988-3519-16 Skruv.....	Screw.....			
33	1				1812-1963-01 Skrapskär	Scraper blade.....			
34	4				1812-1758-01 Mutter.....	Nut			
35	1				1812-2310-01 Förstärkningsstag.....	Reinforcement plate.....			
36	4				1133-1022-01 Nit.....	Rivet.....			
37	4				1812-2336-01 Skruv.....	Screw.....			
38	1				1812-2339-01 Släpsko- hö.....	Skid shoe- RH.....			
39	1				1812-2338-01 Släpsko- vä.....	Skid shoe- LH.....			
40	4				1812-2337-01 Mutter.....	Nut			
595	1				1133-0970-01 Utkastskydd.....	Wire chute guide.....			
596	1				1133-0944-01 Fjäder.....	Torsion chute spring			
597	1				1133-0945-01 Fjäder.....	Torsion chute spring			
598	2				1133-0937-01 Hattlåsning	Acorn nut			

X