Electrolux

ELECTROLUX OUTDOOR PRODUCTS

PARTS 2000	8X
	P999022

MODEL **Flymo RC320 Cordless**

ILLUSTRATED PARTS LIST

9643100-99
Aus, NZ

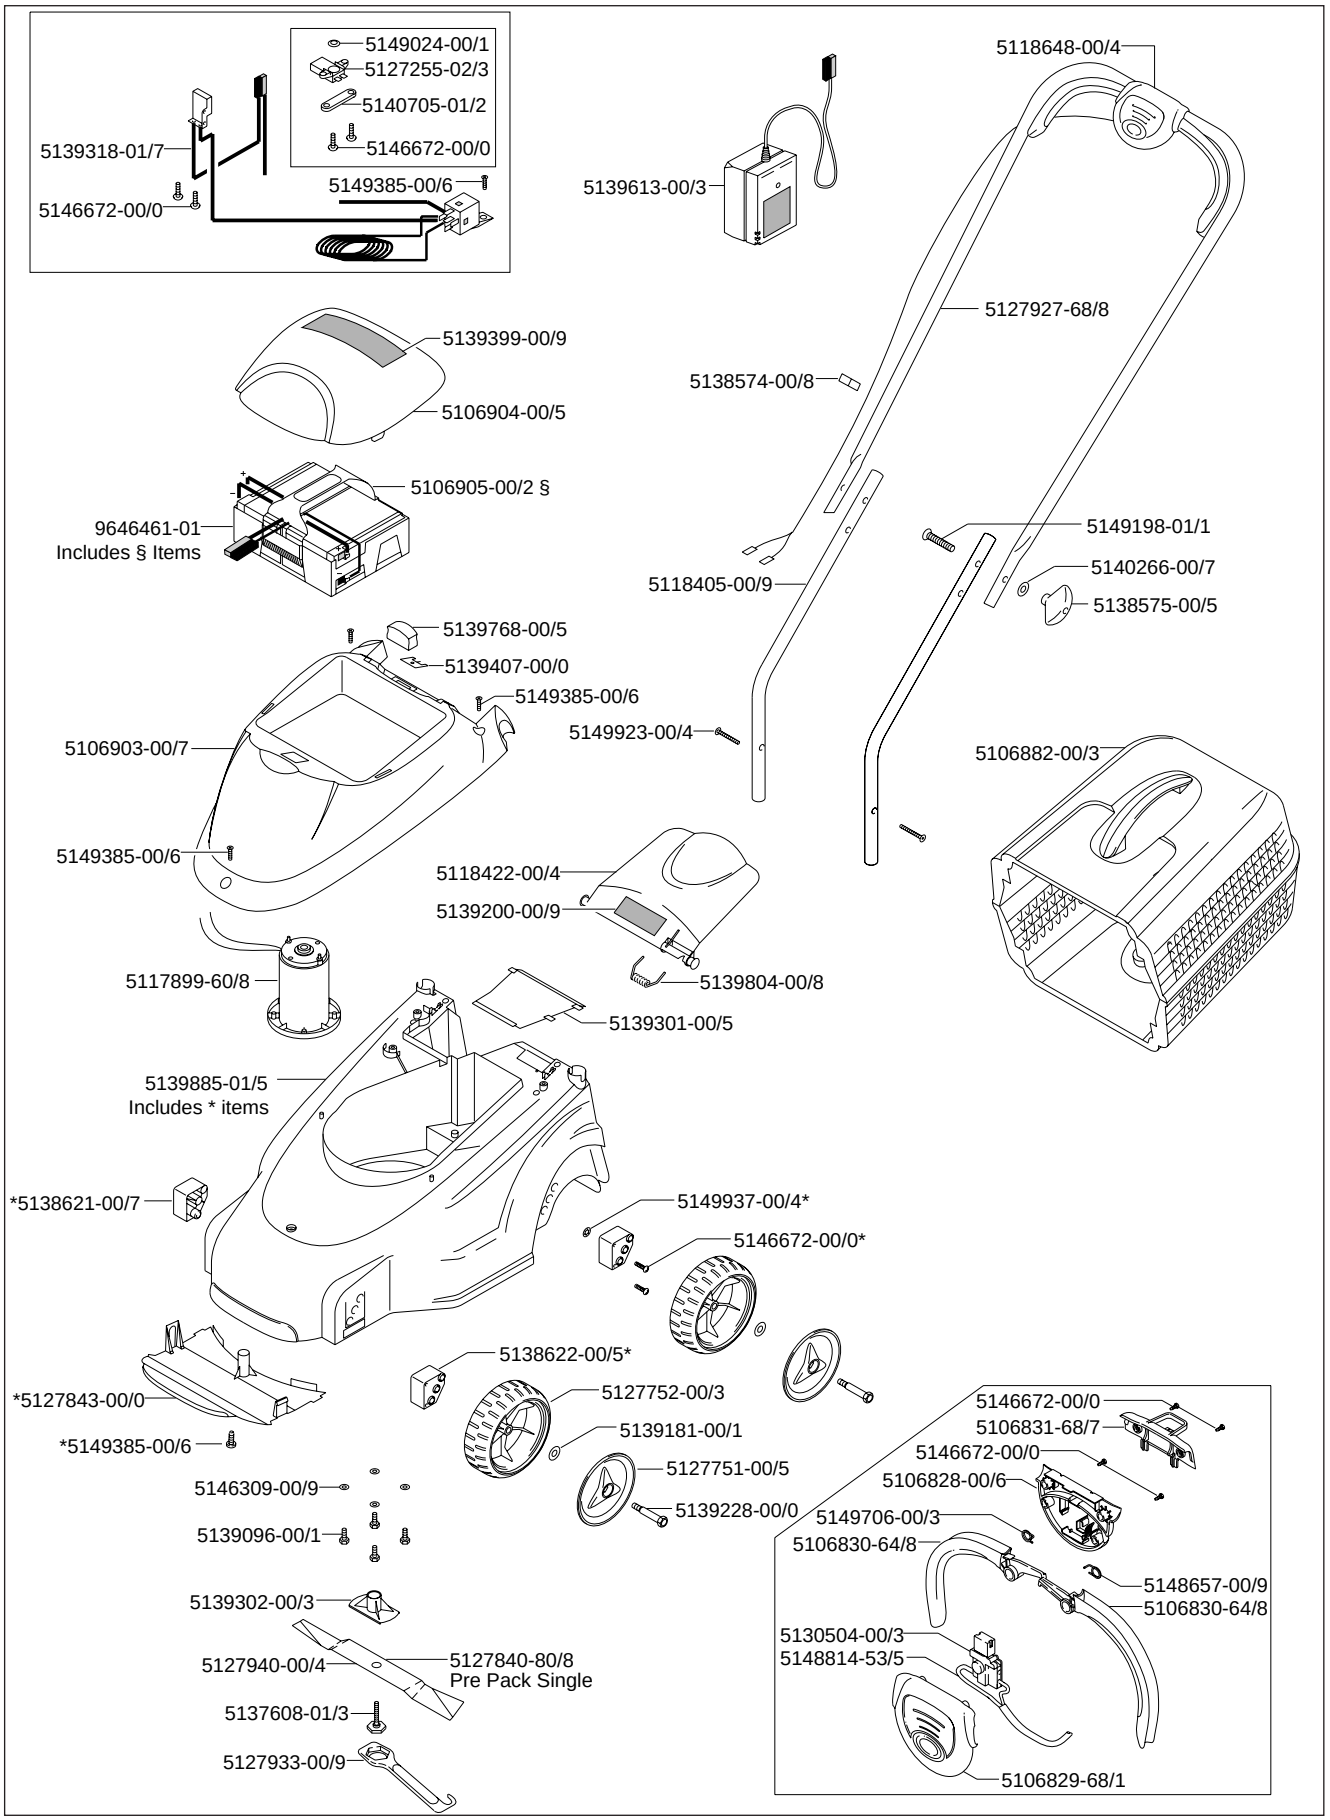

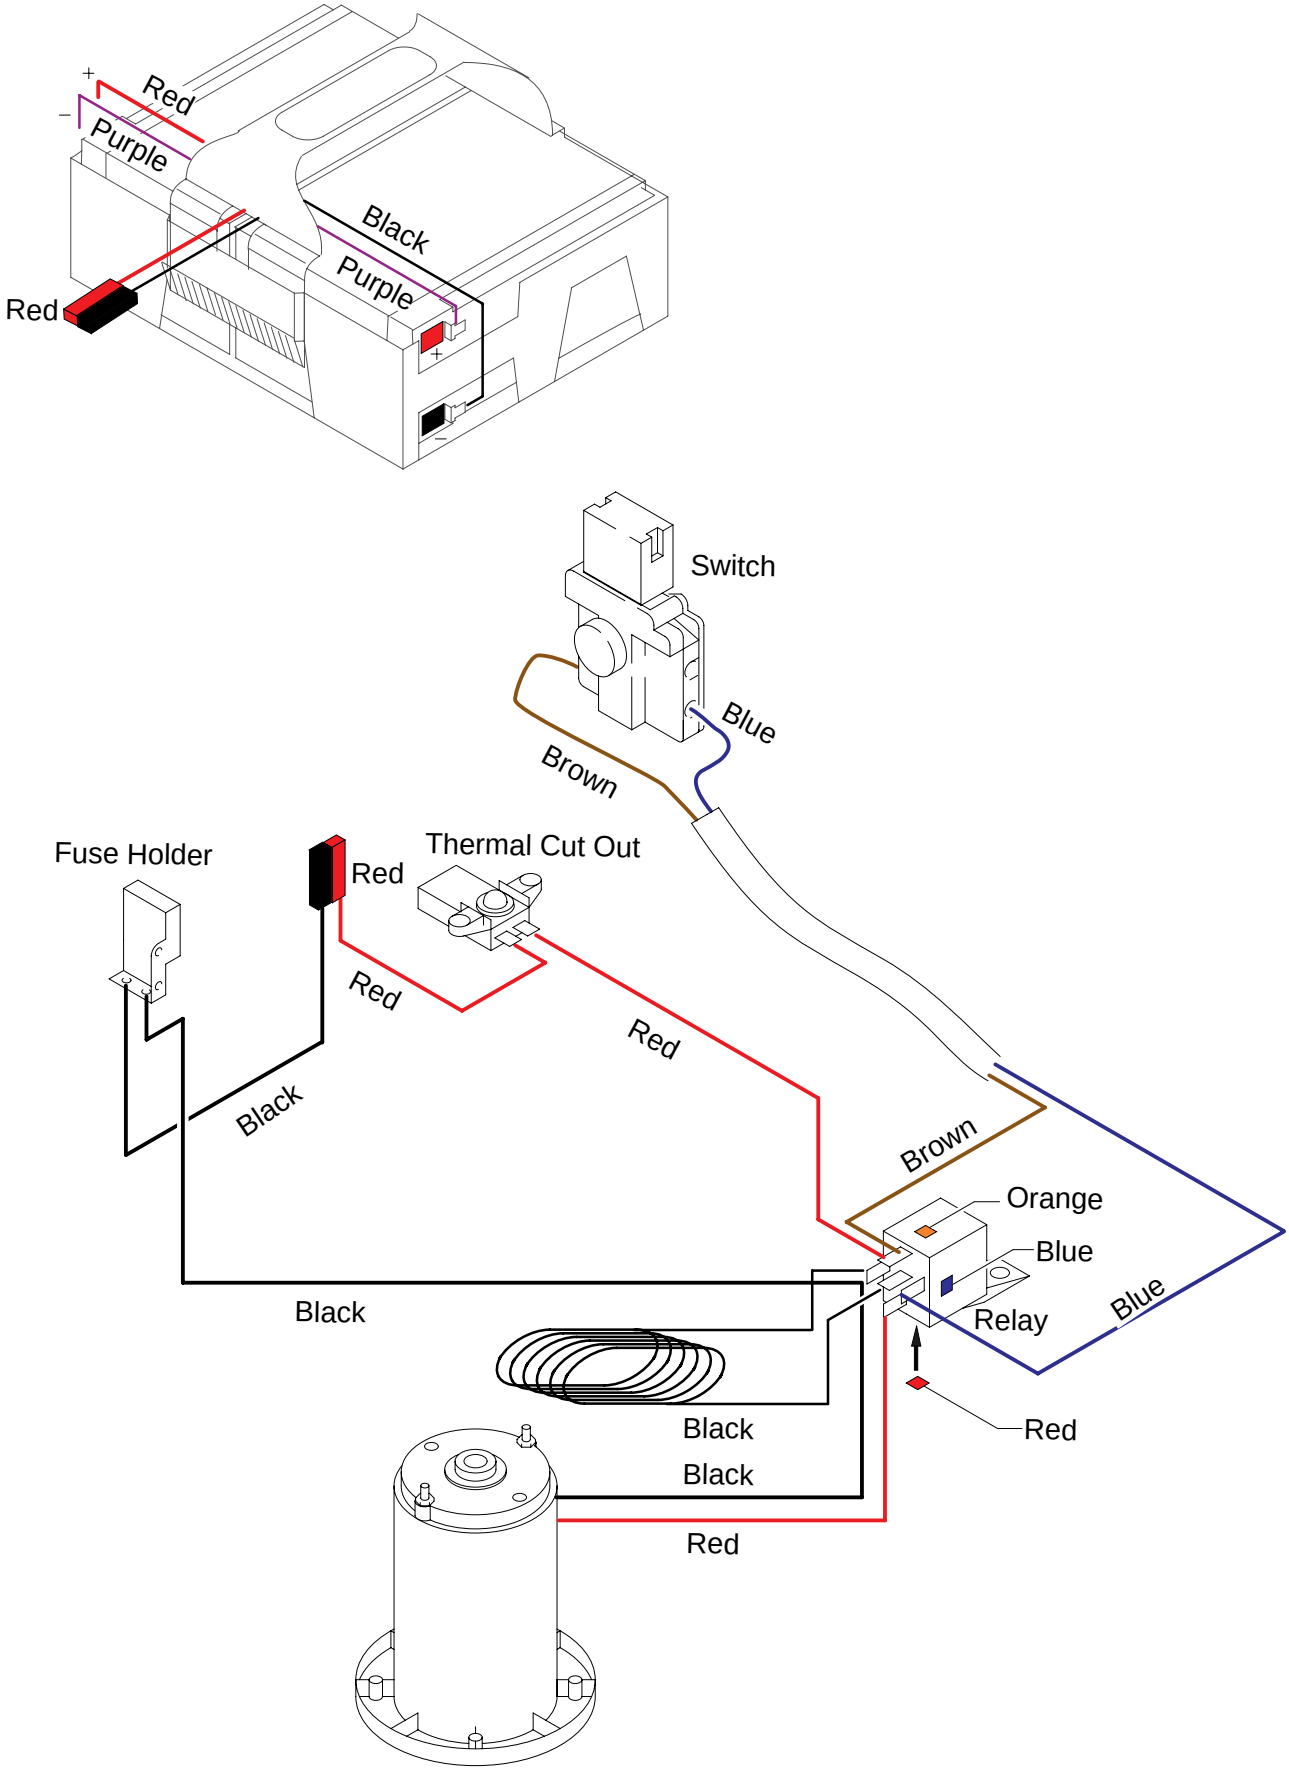
+
Red
–
Purple
Black
Purple
Red
+
–
Switch
Blue
Brown
Fuse Holder
Red
Thermal Cut Out
Red
Red
Black
Brown
Orange
Blue
Relay
Blue
Black
Red
Black
Black
Red