


entvm125_pg1 TVM140-70363K / Engine pg 1

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

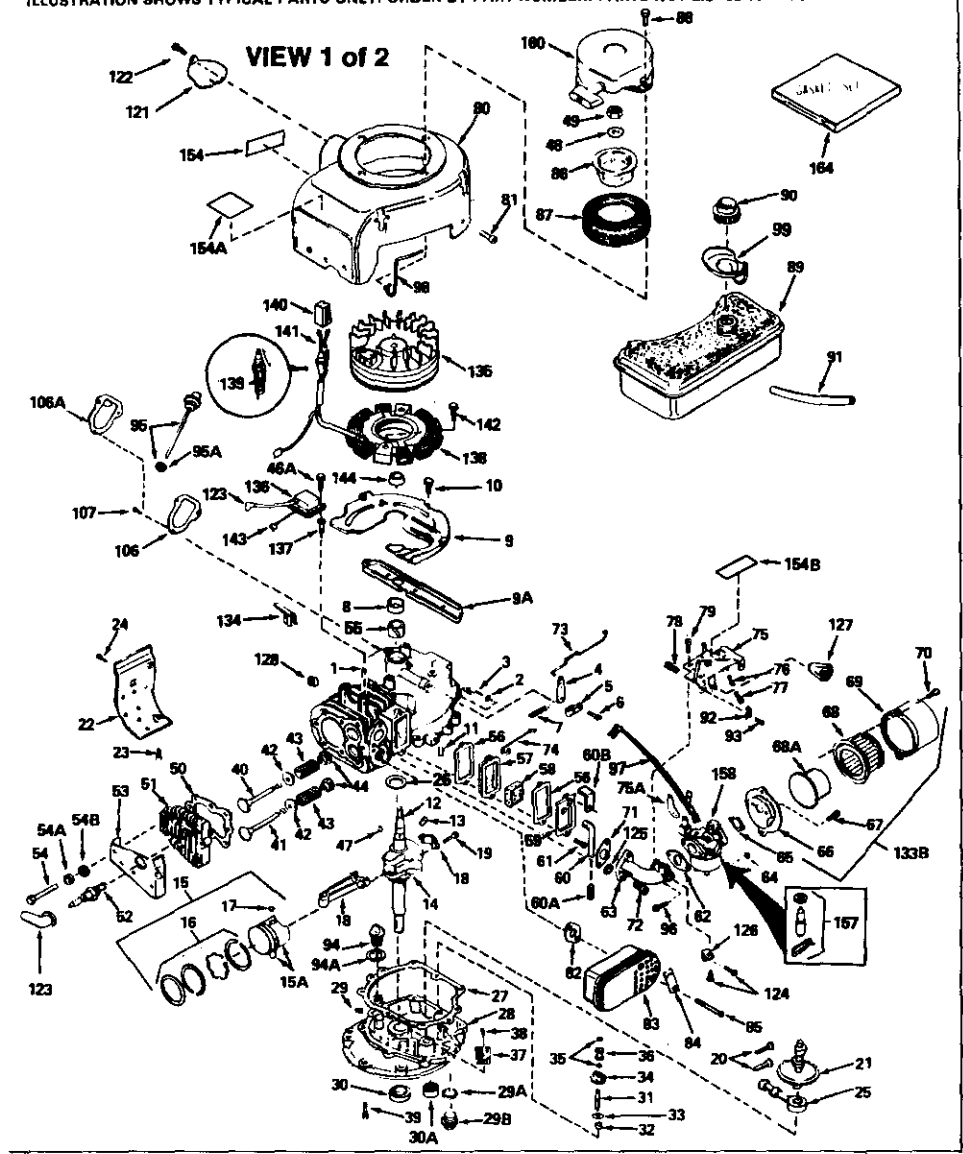

Teileliste

entvm125_pg1 TVM140-70363K / Engine pg 1

REF #	ITEM #	DESCRIPTION	QTY	REMARK
1	34913A	Cylinder		(Incl. 8, 11, 94 & 94A) 2-5/8"
2	28277	Flat washer		
3	30669	Rod, Governor		
4	31357	Lever, Governor		
5	31335	Clamp, Governor lever		
6	650548	Screw, 8-32 x 5/16"		
7	31361	Spring, Governor		
8	32630	Seal, Oil		
9	29536	Blower Housing Baffle		ed)
9	35256A	Blower Housing Baffle		eq.)
10	650561	Screw, 1/4-20 x 5/8"		
11	27652	Dowel Pin		
12	34880	Crankshaft (Incl. 13 & 14)		
13	29783	Pin, Crankshaft gear		
14	27884	Gear, Crankshaft		
15	34531	Piston, Pin & Ring Set		(2-5/8") Std.
15	34532	Piston, Pin & Ring Set (.010" OS)		
15	34533	Piston, Pin & Ring Set (.020" OS)		
15A	33312B	Piston & Pin Ass'y.		(Incl. 17) (2-5/8") (Std.)
15A	33313B	Piston & Pin Ass'y.		(Incl. 17) .010" OS
15A	33314B	Piston & Pin Ass'y.		(Incl. 17) .020" OS
16	34854	Ring Set (2-5/8") (Std.)		
16	34855	Ring Set (.010" OS)		
16	34856	Ring Set (.020" OS)		
17	27888	Piston Pin Retaining Ring		
18	31380C	Rod Assy., Connecting (Incl. 19)		
19	650662C	Bolt, Connecting rod (Incl. 2 pieces)		
20	34034	Lifter, valve		
21	32114	Camshaft (MCR)		
22	30622A	Extension, Blower housing		
23	650128	Screw, 10-24 x 1/2"		
24	30688	Screw, 1/4-20 x 1/2"		
25	31356	Pump Assy., Oil		
27	30684	* Gasket, Cylinder cover		
28	31471C	Flange Ass'y.		Incl. 29,30,31,33,182 & 183
29	27642	Oil Drain Plug (Sq. hd., 1/4-18)		
30	27897	Oil Seal		
31	30668	Shaft, Mech. Governor		
32	31707A	Governor Spacer Assy. (Incl. 33)		
33	30590A	Washer, Flat (2 required)		
34	30591	Gear Assy., Governor		
35	29193	Retaining Ring		
36	30588A	Spool, Governor		
37	31355	Screen, Oil filter (Use as required)		
38	29117	Screw, 8-32 x 5/16" (Use as required)		
39	650488	Screw, 1/4-20 x 1-1/4"		
40	32783	Intake Valve (Std.) (Incl. 44)		
40	32784	Intake Valve (1/32" OS) (Incl. 44)		
41	27878A	Exhaust Valve (Std.) (Incl. 151)		
41	27880A	Exhaust Valve (1/32" OS) (Incl. 151)		
42	27882	Valve Spring Cap		
43	27881	Valve Spring		
44	32581	Cap, Lower valve spring		
47	32589	Key, Flywheel		

48	650815	Washer, Belleville	
49	8116	Nut, Washer, 1/2-20	
50	28938B	* Gasket, Head	
51	30938A	Head, Cylinder (Incl. 54)	
52	33636	Resistor Spark Plug - RJ17LM	
52	34251	Resistor Spark Plug (RJ-17LM)	
53	30939A	Cover Assy., Cylinder head	
54	650694A	Screw, 5/16-18 x 2" (Use as required)	
54	650697A	Screw, 5/16-18 x 2-1/2"	Use as required
54A	26073	Washer	
54A	650690	Washer, Belleville (Use as required)	
54B	650691	Washer, Flat (Use as required)	
56	27896	* Gasket, Breather cover	
57	28423	Breather Body	
58	28424	Breather Element	
59	28425	Valve Cover	
60	27627	Tube, Breather	
61	650128	Screw, 10-24 x 1/2"	
62	26756	* Gasket, Carburetor	
63	32632	Pipe, Intake	
65	27272	* Gasket, Air cleaner	
66	31691	Bracket, Air cleaner	
67	28820	Screw, 10-32 x 1/2"	
68	30727	Air Filter	(Paper) also available in Packaged Part #740029B
69	31715	Body, Air cleaner	
70	650152	Screw, 8-32 x 3/8"	
71	27915	* Gasket, Intake to cylinder	
72	650378	Screw, 5/16-18 x 1-1/8"	
73	31823	Link, Throttle	
74	32582	Link, Governor spring	
75	32181A	Control Assy., Speed	Incl. 76, 77 & 78
76	31342	Spring, Compression	
77	650549	Screw, 5-40 x 7/16"	
78	610973	Terminal Ass'y. (Use as required)	
79	30200	Screw, 10-24 x 9/16"	
80	32223A	Blower Housing	(Incl. 121 & 122) Elec . Str.
81	29747B	Screw, T-40, 5/16-24 x 21/32"	
82	27930	* Gasket, Exhaust	
83	31574	Muffler	
84	31588	Plate, Muffler locking	
85	30196	Screw, 5/16-18 x 3/4"	
85	650696	Screw, 5/16-18 x 2-3/4"	Use as required
85	650697A	Screw, 5/16-18 x 2-1/2"	Use as required
86	32125	Cup, Starter	
87	35009	Starter Screen	
88	29716	Screw, 1/4-28 x 7/16"	
89	32584	Fuel Tank (Incl. 90)	
90	33032	Fuel Cap	(Red 1-1/2" ID) also available in Packaged Part #740005B
90	34210	Fuel Cap (use as required)	
91	29774	Fuel Line (8.62")	
91	30962	Fuel Line (32") (Use as required)	
92	27793	Conduit Clip	
93	28942	Screw, 10-32 x 3/8"	
95	34165	Dipstick (Incl. 95A)	
95A	29673	* Gasket, Oil fill	
96	6201	Screw, 1/4-28 x 7/8"	Use as required
96	650372	Screw, 1/4-20 x 13/16"	Use as required
97	34580	Ground Wire	
123	27276	Spark Plug Cover	
123	610118	Cover, Spark plug (Use as required)	

133B	730127	A/C Assy.	Incl. 65,66,67,68A,69,70,13 4
154	34346	Decal, Instruction	
154A	550223	Decal, Name	
157	631021	Inlet Needle, Seat & Clip Assy.	
158	632253	Carburetor	(Incl. 62) (Refer to Division 5, Section A, page 184 for breakdown)
160	590420	Rewind Starter	Refer to Division 5, Section C, page 25 for breakdown
164	33234A	* Gasket Set (Incl. items marked *)	