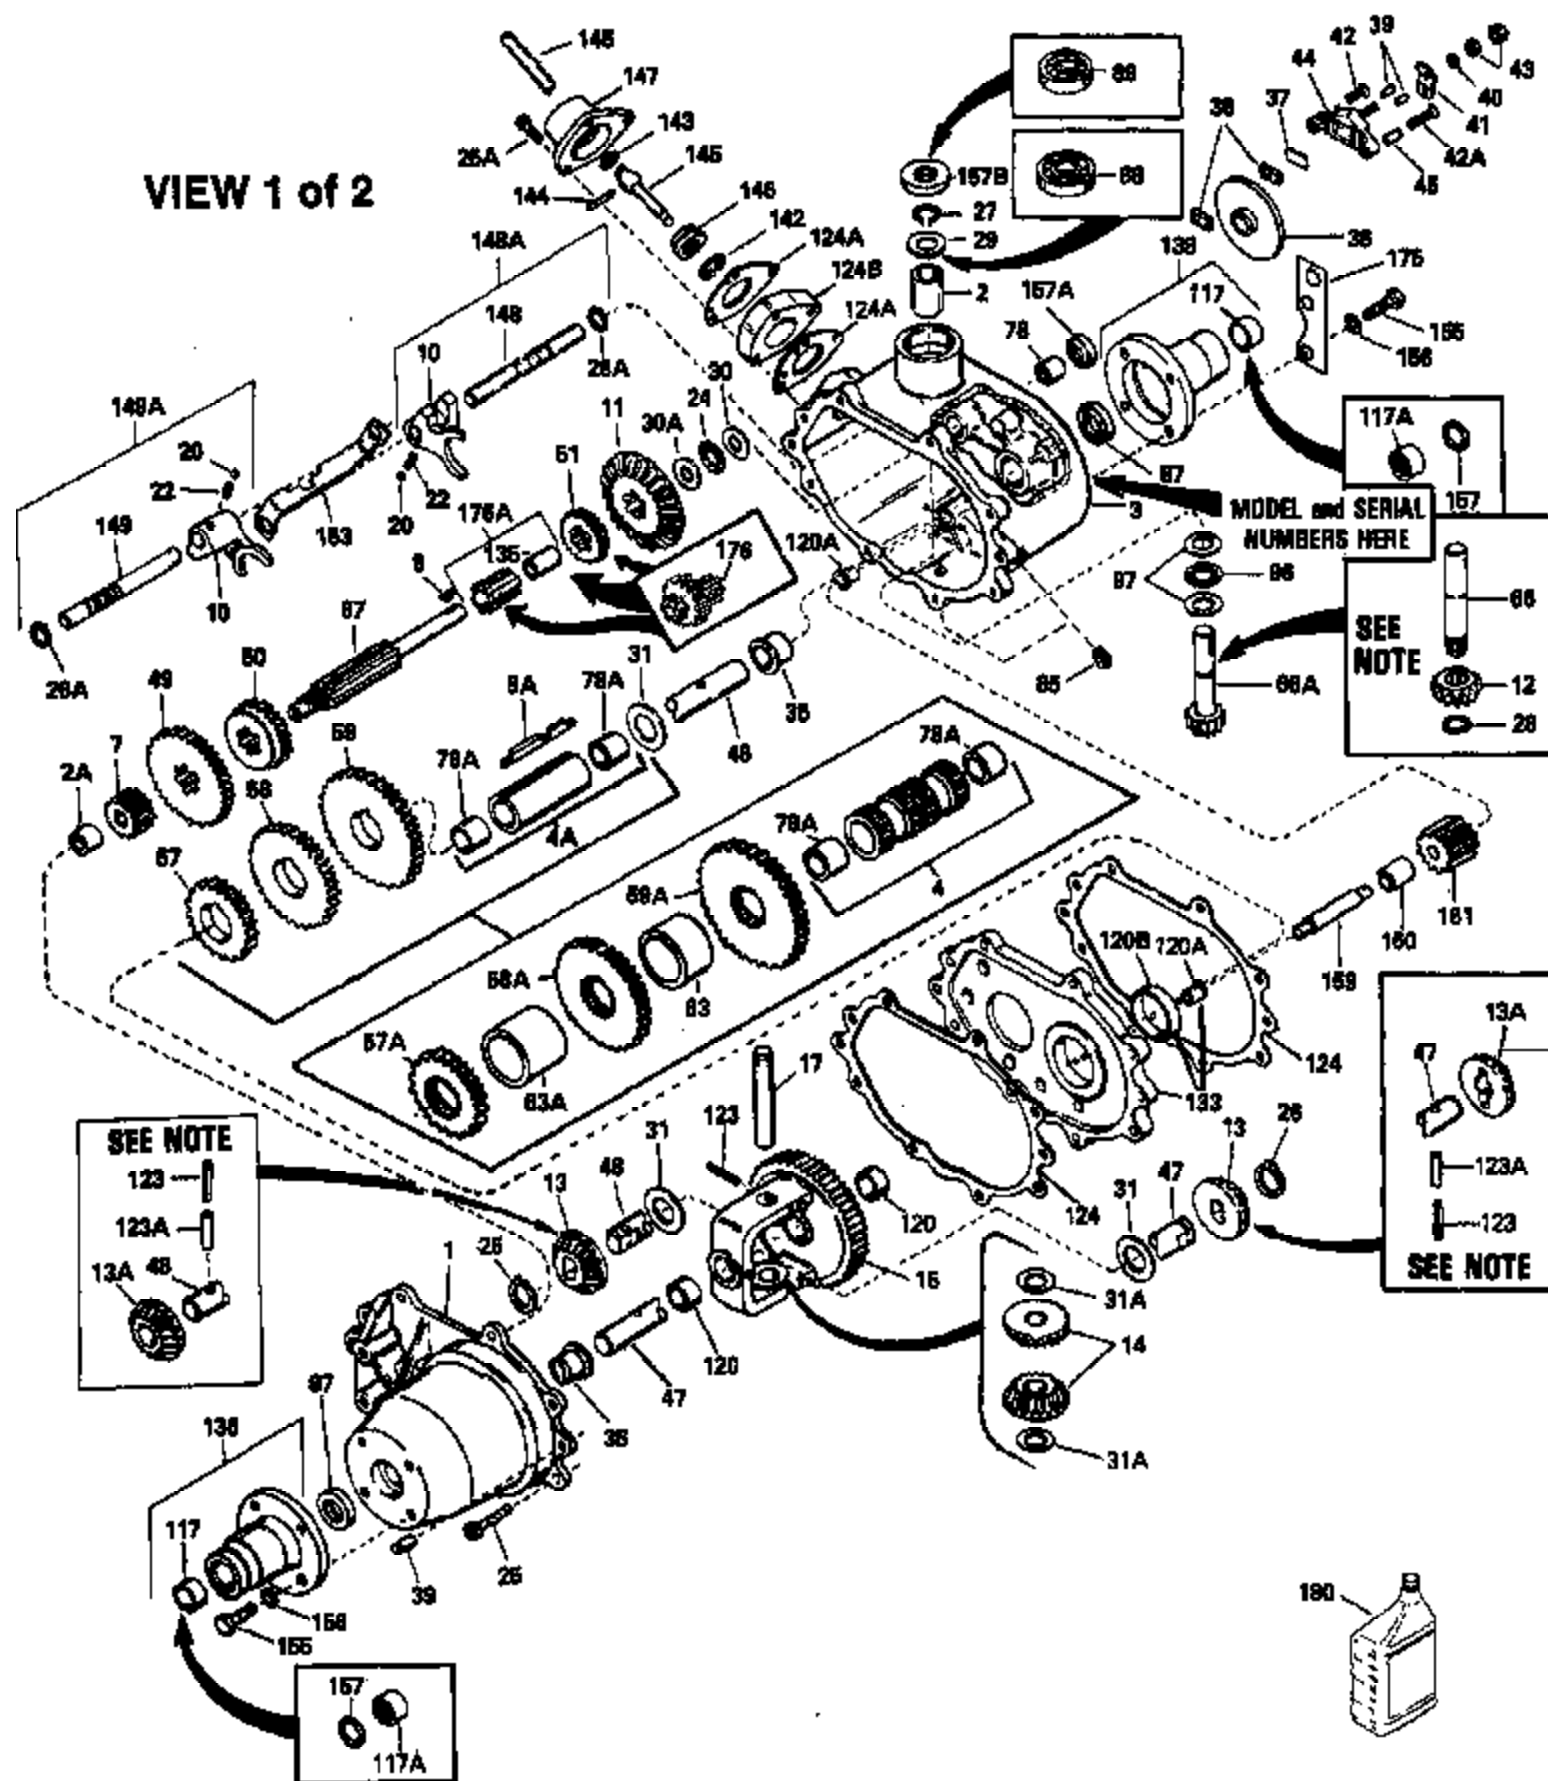







ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 of 2



Ref #	Part Number	Qty	Description
1	772042		Transaxle Cover (Incl. 2A & 35)
2	780061		Bronze Bearing
2A	780063		Needle Bearing
3	770063		Transaxle Case (Incl. 2, 35 & 78)
4	786080		Countershaft Sleeve (Incl. 2 of 78A)
7	778060		Spur Gear (12 teeth)
8	792045		Woodruff Key
10	784004		Shift Fork
11	778057		Bevel Gear (33 teeth)
12	778077		Input Pinion
13	778067		Bevel Gear
14	778068		Bevel Pinion
15	778175	600-650A	Differential Gear (Incl. 2 of 120)
17	786034	Peerless #1	Drive Pin
20	792004		Steel Ball
22	792003		Spring
24	780071		Thrust Bearing
25	792036		Screw, 1/4-20 x 1-1/4"
25A	792007		Screw, 1/4-20 x 3/4"
26	792018		Snap Ring
26A	792017		Snap Ring
27	792035		Snap Ring
28	788040		Retaining Ring
30	780072		Thrust Washer
30A	780073		Thrust Washer
31A	780065		Thrust Washer
31	780001		Thrust Washer
35	780059		Bronze Bearing
36	790009		Brake Disk
37	790007		Brake Pad Plate
38	799021		Brake Pad (pkg of 2)
39	786026		Dowel Pin
40	792076A		Flat Washer
41	790008A		Brake Lever (90 degree angle)
42	792073A		Screw, 1/4-20 x 1-1/4"
43	792075		Lock Nut
44	790025		Brake Pad Holder
46	786086		Brake Lever Bracket
49	778059		Shifting Gear (1st & Rev.) (30 teeth)
50	778058		Shifting Gear (2nd & 3rd) (21 teeth)
51	778024A		Spur Gear (16 teeth-steel)
57A	778142		Countershaft Gear (25 teeth)
58A	778141		Countershaft Gear (34 teeth)
59A	778140		Countershaft Drive Gear (39 teeth)
63	786079		Spacer
63A	786078		Spacer
66	776103		Input Shaft
67	776138		Shifter & Brake Shaft
78	780086A		Needle Bearing
78A	780066		Bronze Bearing
79	792144		Spring
85	792039		Pipe Plug, 1/8-27
87	788009		Oil Seal
88	780093		Ball Bearing
96	780071		Thrust Bearing
97	780072		Thrust Washer

Ref #	Part Number	Qty	Description
117	780091		Needle Bearing & Seal Assy (Incl. 117 A & 157)
117A	780140		Needle Bearing (NOTE: The 780091 bearing and seal assembly Ref. No. 117 can be used to replace the 780140 bearing Ref. No. 117A and the 788042 seal Ref. No. 157 and vice versa.)
120	780064		Bronze Bearing
120A	780060		Bronze Bearing
120B	780062		Bronze Bearing
123	792040		Roll Pin
124	788033A		Case & Cover Gasket
124A	788003A		Shift Lever Housing Gasket
133	786033	600-650A	Center Plate (Incl. 120A & 120B)
136	782049	Peerless #1	Axle Housing (Incl. 117 & 117A)
138	782049		Axle Housing (Incl. 117 & 117A)
142	792016		Snap Ring
143	792001		"O" Ring
144	792049		Drive Pin
145	784113		Shift Lever
146	784094		Shift Lever Keeper
147	784088		Shift Lever Housing
148	784083		Shift Rod
148A	784079		Shift Rod(1st/Rev)(Incl. 10,20,22,26A & 148)
149	784085		Shift Rod
149A	784084		Shift Rod(2nd/3rd)(Incl. 10,20,22,26A & 149)
153	784087		Shift Stop
155	792037		Screw, 5/16-18 x 1"
157	788042		Oil Seal
157A	788043		Oil Seal
157B	788035A		Oil Seal
159	776057		Reverse Idler Shaft
160	786036		Reverse Idler Spacer
161	778064		Reverse Idler Gear (13 teeth)
176	776190A		Idler Shaft (Incl. 51)
180	730229A		Gear Oil SAE 80W90

47	VIEW 2 of 2	48
		
47A		48A
		
47B		48B
		
47C		48C
		
47D		48D
		
47E		48E
		
47F		48F
		
47G		48G
		

Ref #	Part Number	Qty	Description
46	786086		Brake Lever Bracket
47B	774284		Axle (12-3/8" long)
48B	774285		Axle (16-13/16" long)
79	792144		Spring

600-650A
Peerless #2

Page 5 of 5