


Utgåva Issue		Bildnr Picture No		DANA TRANSAXEL		DANA TRANSAXLE		Sida Page	
2011-11		2215		6800-7 6800-8		6800-7 6800-8		430	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	6800 -7	6800 -8							
0	1			1134-6338-01	Transaxel kpl.....	Transaxle assy.....		DANA 6800-7	
0		1		1134-6349-01	Transaxel kpl.....	Transaxle assy.....		DANA 6800-8	
1	1			F000-6768-00	Hus- övre kpl.....	Housing- upper assy.....		Inkl. pos 4, 7-8	
1		1		F000-6769-00	Hus- övre kpl.....	Housing- upper assy.....		Inkl. pos 4, 7-8	
2	18	18		F000-1919-00	Skruv.....	Screw.....			
3	1	1		F004-1356-00	Gummiplugg.....	Rubber plug.....			
4	1	1		F000-7089-00	• Tätningring.....	• Oil seal.....			
5	1	1		F000-5947-00	Kula.....	Ball.....			
6	1	1		F000-5948-00	Fjäder.....	Spring.....			
7	1	1		F000-7101-00	• Lock.....	• Detent cover.....			
8	1	1		F084-0052-00	• Skruv.....	• Screw.....			
9	1	1		F000-6670-00	Växelförare.....	Shifter.....			
10	1	1		F000-1106-00	• Låsring.....	• Retaining ring.....			
11	3	3		F000-4689-00	• Sats- shims.....	• Kit- shim.....			
12	3	3		F000-3876-00	• Bricka.....	• Washer.....			
13	1	1		F000-6753-00	Ingående axel kpl.....	Input shaft assy.....		Pos 10- 12, 14- 15	
14	1	1		F000-1746-00	• Kil.....	• Key.....			
15	1	1		F000-3956-00	• Låsring.....	• Retaining ring.....			
16	1	1		F000-3625-00	Kedja.....	Chain.....			
17	5	5		F000-7091-00	Bussning.....	Bushing.....			
18	1	1		F000-7080-00	Drev.....	Spur gear.....		12T	
19	1	1		F000-6692-00	Växelkrage.....	Shift collar.....			
20	1	1		F000-7086-00	Axel.....	Intermediate shaft.....			
21	1	1		F000-3830-00	Kedjehjul.....	Sprocket.....		18T	
22	1	1		F000-7094-00	Distans.....	Spacer.....			
23	1	1		F000-5365-00	Drev.....	Gear, spur.....		37T	
24	1	1		F000-3867-00	Drev.....	Gear, spur.....		30T	
25	1	1		F000-3783-00	Drev.....	Gear, spur.....		25T	
26	1	1		F000-3869-00	Drev.....	Gear, spur.....		22T	
27	1	1		F000-5202-00	Drev.....	Gear, spur.....		19T	
28	1	1		F000-5027-00	Distans.....	Spacer.....			
29	1	1		F000-7115-00	Tätningring.....	Oil seal.....			
30	1	1		F000-7092-00	Bussning.....	Bushing.....			
31	1	1		F000-3890-00	Bricka.....	Plain washer.....			
32	1	1		F000-7079-00	Drev.....	Spur gear.....		30T	
33	1	1		F000-7083-00	Axel.....	Idler shaft.....			
34	1	1		F000-3410-00	Distans.....	Spacer.....			
35	1	1		F000-5180-00	Drev.....	Spur gear.....		10T	
36	2	2		F000-1425-00	Bricka.....	Washer.....			
37	2	2		F000-3714-00	Distans.....	Spacer.....			
38	1	1		F000-3645-00	Kedjehjul.....	Sprocket.....		9T	
39	1	1		F000-7162-00	Distans.....	Spacer.....			
40	1	1		F000-7084-00	Axel.....	Drive shaft.....			
41	1	1		F000-5364-00	Drev.....	Gear, spur.....		12T	
42	1	1		F000-3866-00	Drev.....	Gear, spur.....		20T	
43	1	1		F000-3719-00	Drev.....	Gear, spur.....		25T	
44	1	1		F000-3868-00	Drev.....	Gear, spur.....		28T	
45	1	1		F000-3683-00	Drev.....	Gear, spur.....		31T	
46	2	2		F000-7088-00	Tätningring.....	Oil seal.....			
47	2	2		F000-3184-00	Bricka.....	Washer.....			
48	1			F000-7165-10	Hjulaxel- vä.....	Wheel axle- LH.....			
48		1		F000-7166-10	Hjulaxel- vä.....	Wheel axle- LH.....			
49	2	2		F000-5622-00	Drev.....	Miter gear.....		12T	
50	2	2		F000-5270-00	Låsring.....	Retaining ring.....			
51	1	1		F000-5181-00	Drev.....	Spur gear.....		41T	
52	2	2		F000-5623-00	Drev.....	Miter gear.....		12T	
53	1	1		F000-3919-00	Axel.....	Cross shaft.....			
54	1			F000-7165-20	Hjulaxel- hö.....	Wheel axle- RH.....			
54		1		F000-7166-20	Hjulaxel- hö.....	Wheel axle- RH.....			
55	1	1		F000-4691-00	Sats- shims.....	Kit- shim.....			
56	1	1		F000-7071-A0	Hus- nedre.....	Housing- lower.....			
57	1	1		F000-6754-00	Friktionsbelägg- sats.....	Friction puck kit.....			
58	1	1		F000-7103-00	Bromsskiva.....	Brake disc.....			

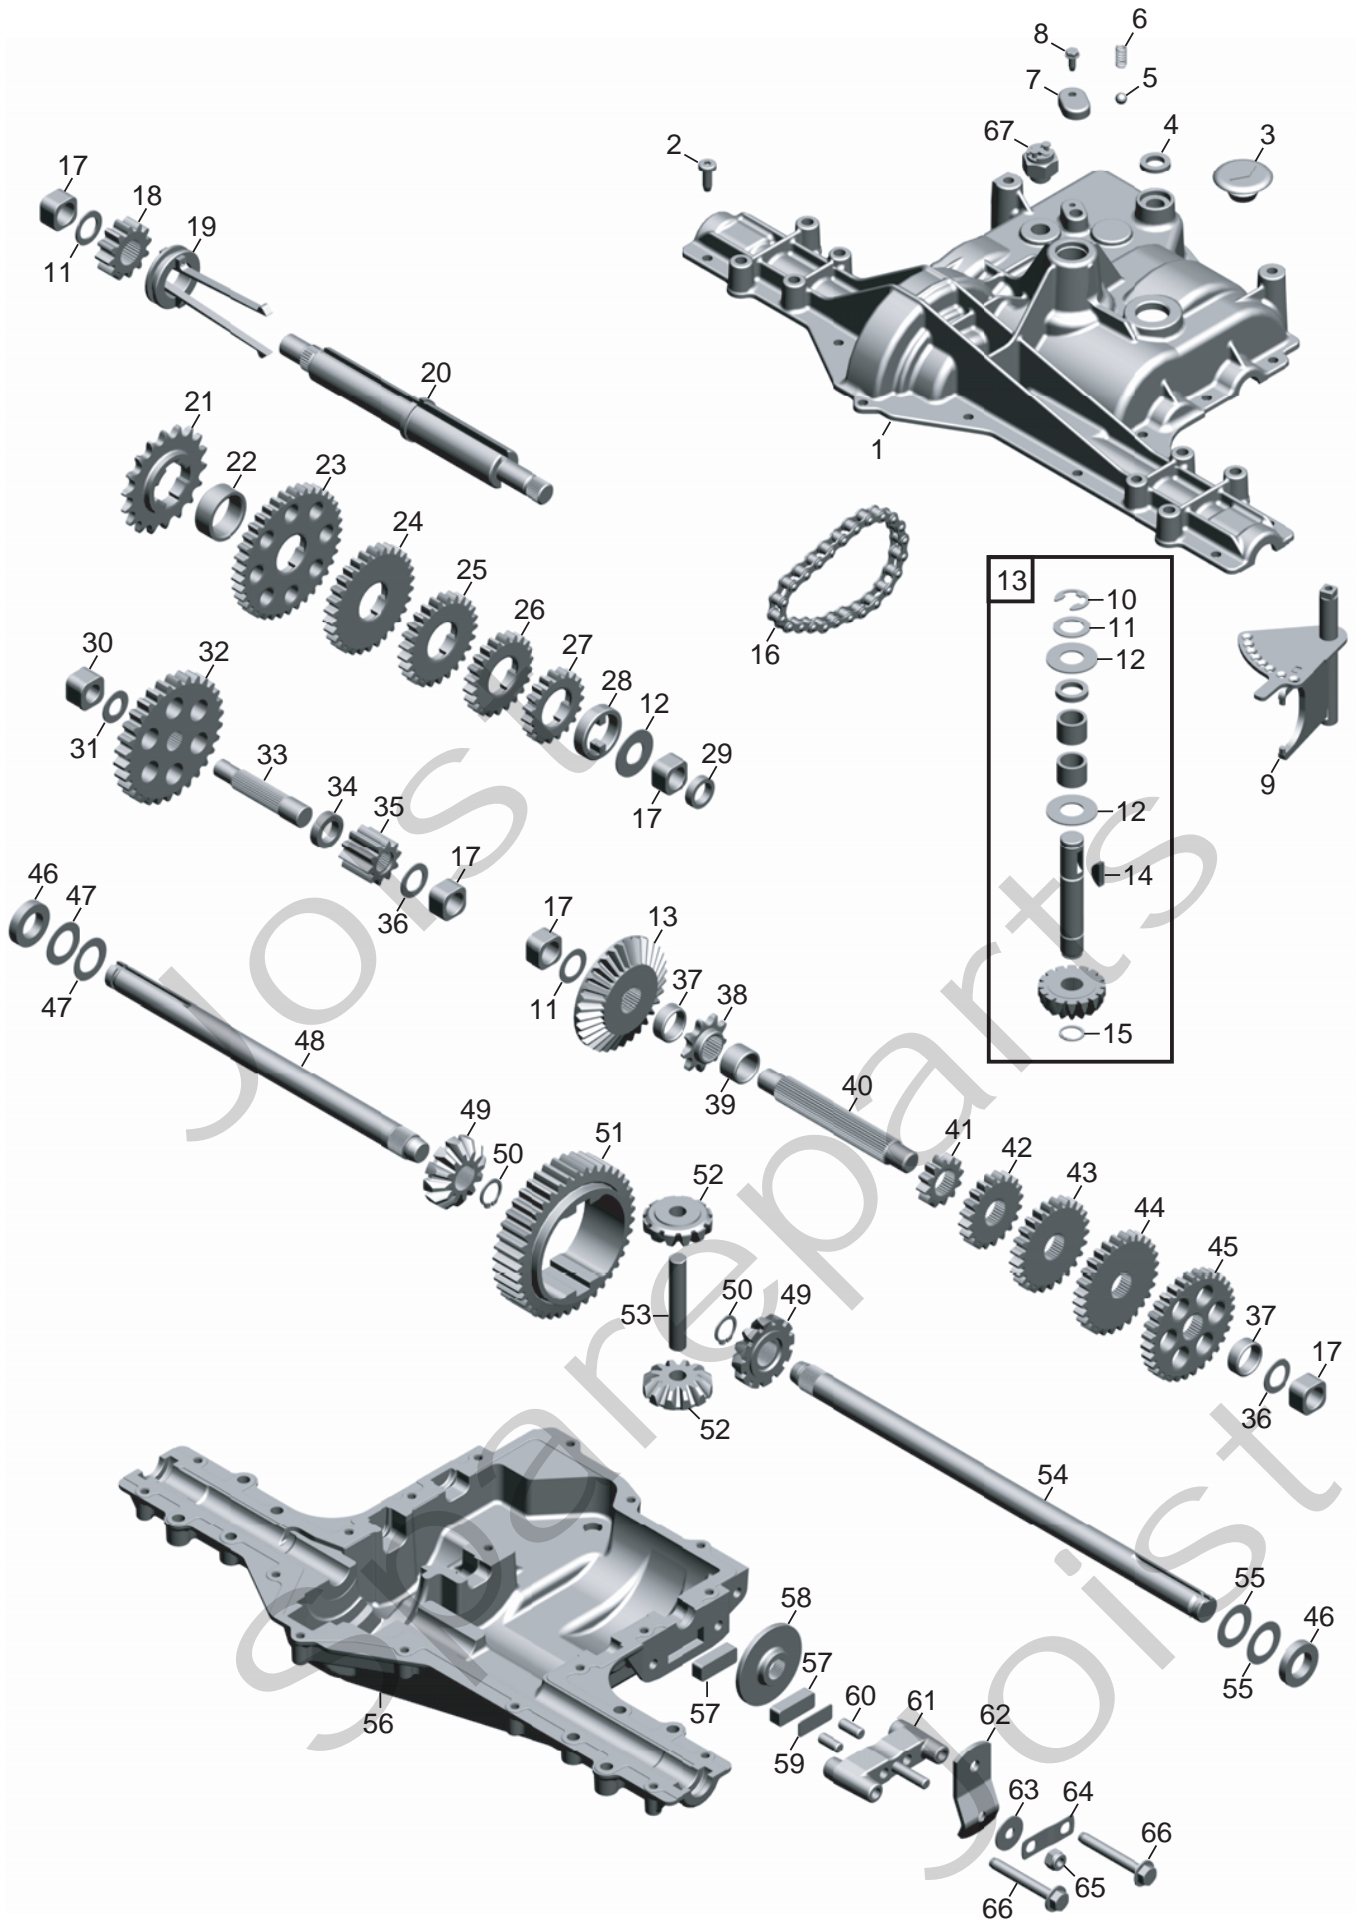

Utgåva Issue		Bildnr Picture No		DANA TRANSAXEL		DANA TRANSAXLE		Sida Page	
2011-11		2215		6800-7 6800-8		6800-7 6800-8		432	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	6800 -7	6800 -8							
59	1	1		F000-3758-00	Distans	Spacer			
60	2	2		F000-3843-00	Pinne	Dowel pin			
61	1	1		F000-5554-00	Bromshållare	Brake jaw			
62		1		F000-7029-00	Bromsarm	Actuating lever			
62	1			F000-7032-00	Bromsarm	Actuating lever			
63	1	1		F000-3760-00	Bricka	Washer			
64	1	1		F000-5555-00	Bricka	Bracket			
65	1	1		F000-3847-00	Låsmutter	Lock nut			
66	2	2		F000-5562-00	Skruv	Screw			
67		1		F000-7034-00	Brytare	Switch			