




Genuine Spare Parts




Joist
Spareparts
Joist

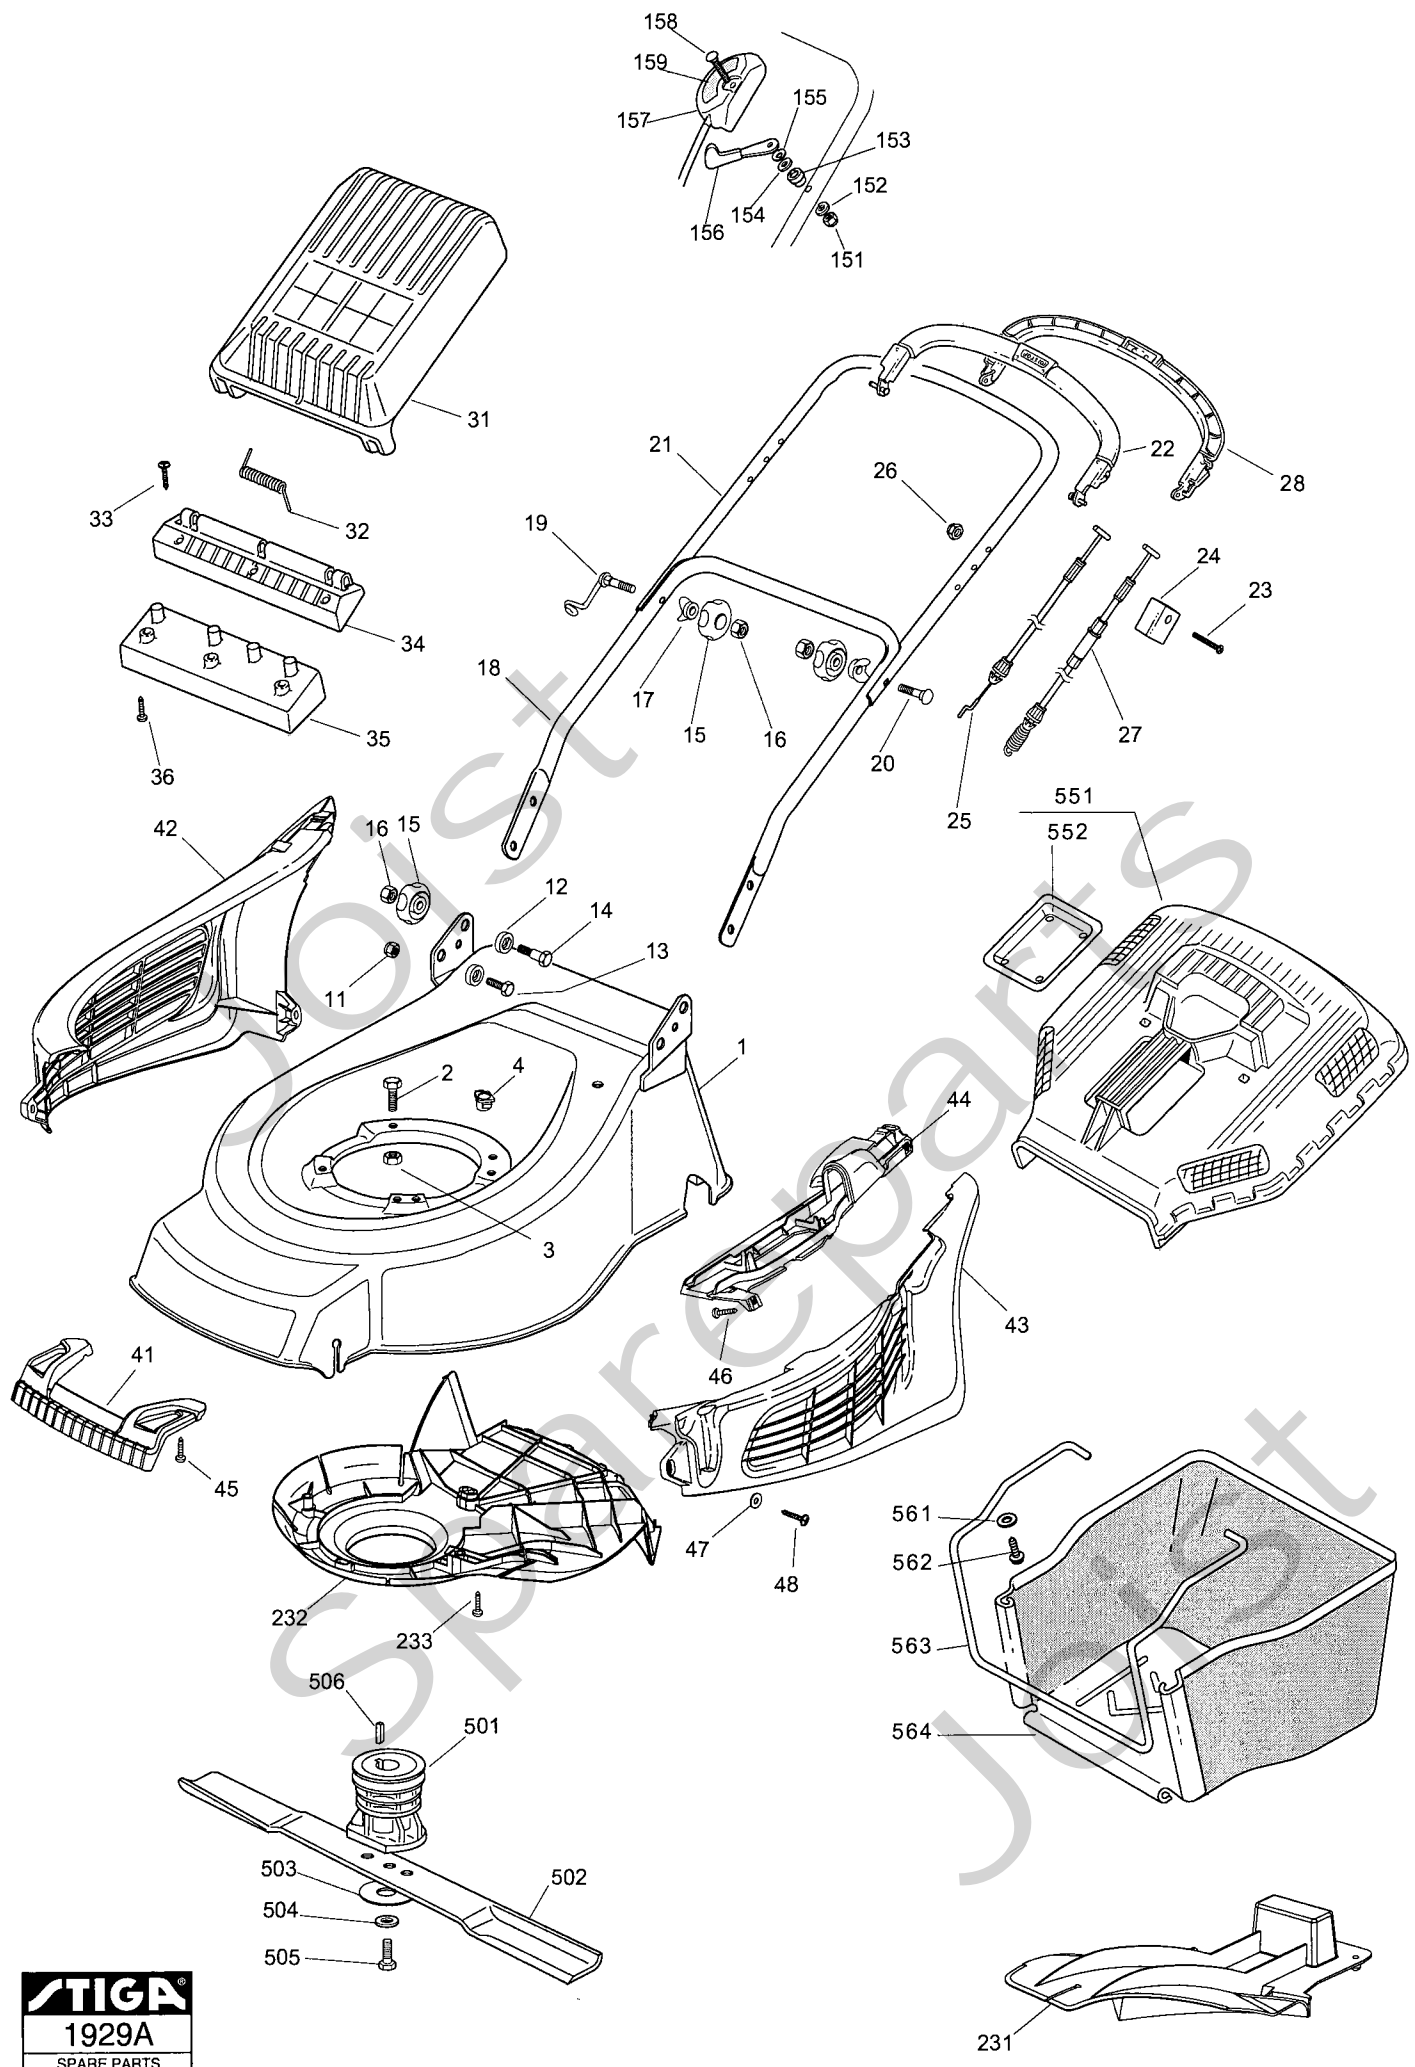


Utgåva Issue		Bildnr Picture No		TURBO 53S COMBI TURBO 53SE COMBI CHASSI STYRE		TURBO 53S COMBI TURBO 53SE COMBI CHASSIS HANDLE		Sida Page
2006-12		1929A						142
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	5230 -15	5286 -15	5298 -15					
1	1	1	1	1136-1912-01	Kåpa	Deck		
2	2	2	2	9997-0830-16	Skruv	Screw		
2	1	1	1	9997-0860-16	Skruv	Screw		L = 30 mm
3	3	3	3	9739-0831-22	Mutter	Nut		L = 60 mm
4	1	1	1	1136-0665-01	Gummihylsa	Rubber insert		
11	2	2	2	9747-0831-02	Mutter	Lock nut		
12	4	4	4	1111-3554-01	Bussning	Bushing		
13	2	2	2	9997-0816-16	Skruv	Screw		
14	2	2	2	1136-0617-01	Skruv	Screw		
15	4	4	4	1117-3194-01	Låsratt	Locking knob		
16	4	4	4	9799-0831-02	Mutter	Nut		
17	2	2	2	1136-0693-01	Bricka	Washer		
18	1	1	1	1136-1193-01	Styre- underdel	Handle- lower		
19	1	1	1	1136-0747-01	Skruv m. ögla	Screw w. loop		
20	1	1	1	1136-0620-01	Skruv	Screw		
21	1	1	1	1136-1519-01	Styre- överdel	Handle- upper		
22	1	1	1	1111-2953-01	Manöverbygel	Control handle		
23	1	1	1	9997-0640-12	Skruv	Screw		
24	1	1	1	1111-2969-01	Wirefäste	Cable attachment		
25	1	1	1	1136-1838-01	Motorbromswire	Engine brake cable		
25	1	1	1	1136-2430-01	Motorbromswire	Engine brake cable		
26	1	1	1	9747-0631-02	Låsmutter	Lock nut		
27	1	1	1	1136-1839-01	Kopplingswire	Clutch cable		
28	1	1	1	1111-2954-01	Manöverbygel	Control handle		
31	1	1	1	1111-3283-01	Lucka- gul	Flap- yellow		
32	1	1	1	1111-2792-01	Fjäder	Spring		
33	3	3	3	9836-9525-12	Skruv	Screw		
34	1	1	1	1136-0703-01	Luckhållare- gul	Fulcrum- yellow		
35	1	1	1	1136-1899-01	Fäste	Holder		
36	3	3	3	1136-1458-01	Skruv	Screw		
41	1	1	1	1136-1913-01	Frontskydd	Front guard		
42	1	1	1	1136-1905-01	Sidoskydd- hö	Side guard- RH		
43	1	1	1	1136-1906-01	Sidoskydd- vä	Side guard- LH		
44	1	1	1	1136-1910-01	Stöd	Support		
45	2	2	2	1136-1895-01	Skruv	Screw		
46	3	3	3	1117-3226-01	Skruv	Screw		
47	4	4	4	9699-0025-02	Planbricka	Washer		
48	4	4	4	1136-1591-01	Skruv	Screw		
151	1	1	1	1136-0604-01	Mutter	Nut		
152	1	1	1	1136-0611-01	Låsbricka	Grower		
153	1	1	1	1136-0659-01	Distans	Spacer		
154	1	1	1	9699-0035-02	Planbricka	Flat washer		
155	1	1	1	1136-0606-01	Fjäderbricka	Spring washer		
156	1	1	1	1136-0766-01	Gasreglagearm	Throttle lever		
157	1	1	1	1136-0764-01	Gasreglagekabel	Throttle cable		
158	1	1	1	1136-0618-01	Skruv	Screw		
159	1	1	1	1136-1884-01	Dekal	Label		
X 159	1	1	1	1136-2431-01	Dekal	Label		
231	1	1	1	1136-0656-01	Mulcherplugg	Deflector		
232	1	1	1	1136-0645-01	Skyddskåpa	Protection		
233	3	3	3	1136-0615-01	Skruv	Screw		
501	1	1	1	1111-9120-01	Knivfäste m.remskiva	Hub w. pulley		
502	1	1	1	1111-9122-01	Kniv	Blade		
503	1	1	1	1136-0083-01	Fjäderbricka	Elastic washer		
504	1	1	1	1136-0015-01	Bricka	Washer		
505	1	1	1	9987-5251-12	Skruv	Screw		
506	1	1	1	9600-0014-00	Kil	Key		
551	1	1	1	1111-2840-01	Uppsamlarlock- gul	Top collector- yellow		
552	1	1	1	1111-2764-01	• Täckbricka	• Cover		
561	2	2	2	9699-0100-02	Bricka	Washer		
562	2	2	2	9838-9522-12	Skruv	Screw		
563	1	1	1	1111-2843-01	Trådbygel	Wire clamp		
564	1	1	1	1111-2844-01	Uppsamlingsäck- svart	Collecting bag- black		

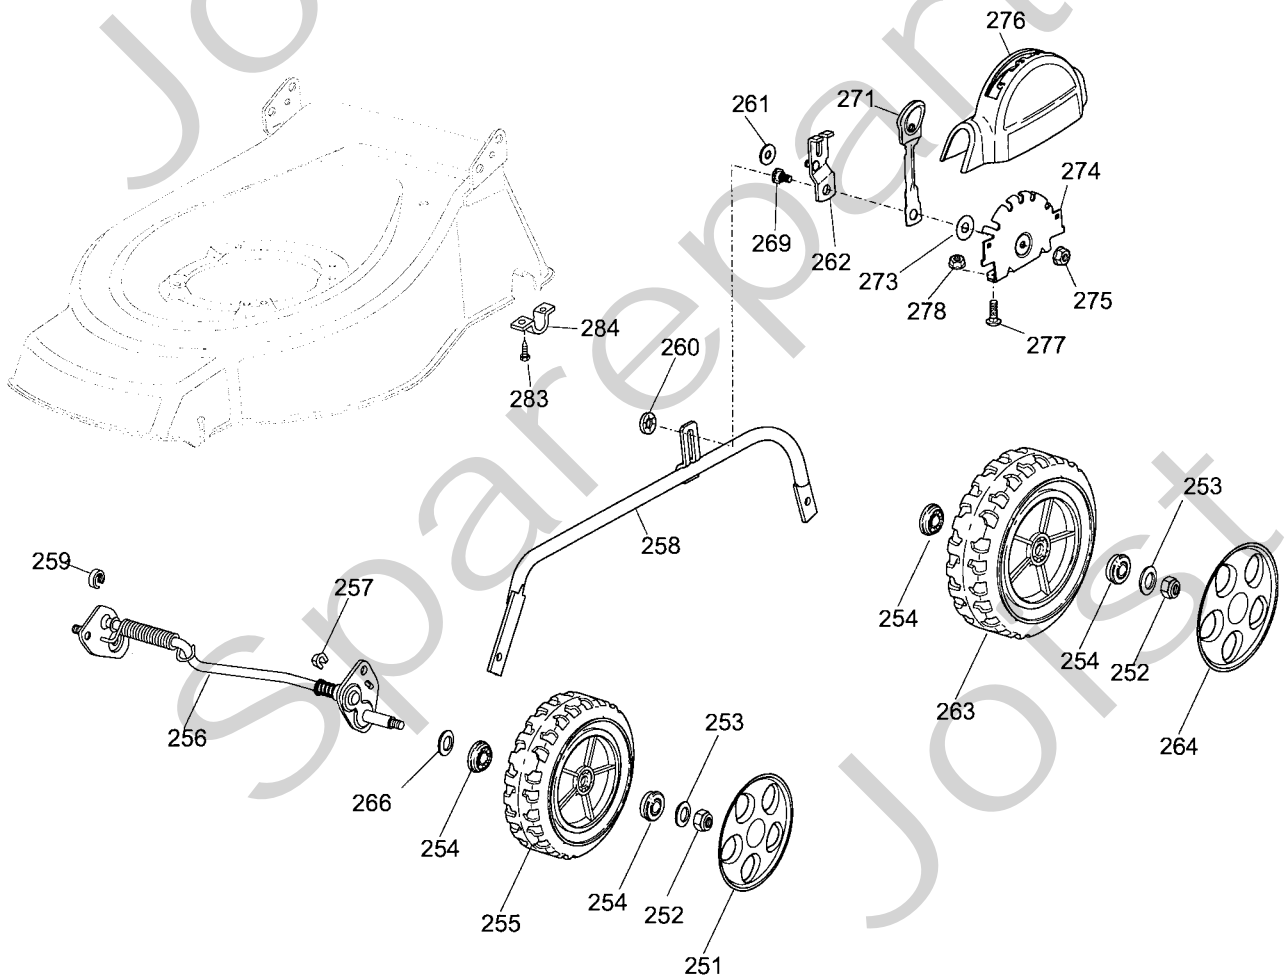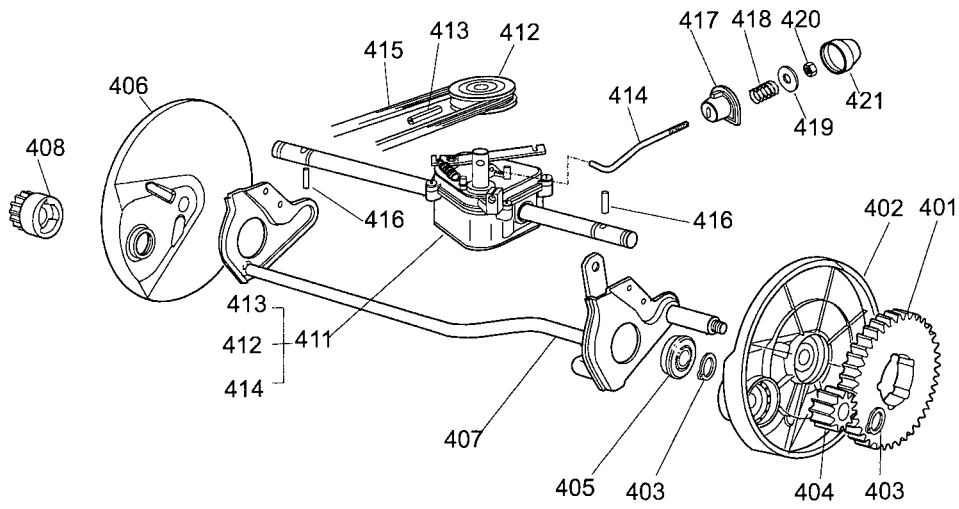

Utgåva Issue		Bildnr Picture No		TURBO 53S COMBI TURBO 53SE COMBI TRANSMISSION HJULUPPHÄNGNING		TURBO 53S COMBI TURBO 53SE COMBI TRANSMISSION WHEEL SUSPENSION		Sida Page	
2006-12		2126						144	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	5286 -15	5298 -15							
X 251	2	2		1136-2423-01	Navkapsel-grå.....	Hub cap-grey.....			
252	4	4		9747-0831-02	Mutter.....	Lock nut.....			
253	4	4		9699-0028-02	Planbricka.....	Flat washer.....			
254	8	8		1136-0655-01	Kullager.....	Ball bearing.....			
255	2	2		1136-1520-01	Hjul.....	Wheel.....			
256	1	1		1136-0712-01	Framaxel.....	Front wheel axle.....			
257	2	2		1136-0009-01	Låsplatta.....	Lock plate.....			
258	1	1		1136-1758-01	Höjdinställn.stag.....	Height adjust rod.....			
259	1	1		1136-0658-01	Distans.....	Spacer.....			
260	1	1		9675-0009-02	Starlock.....	Starlock.....			
261	1	1		1136-0006-01	Fjäderbricka.....	Elastic washer.....			
262	1	1		1136-1757-01	Fäste.....	Attachment.....			
263	2	2		1136-0772-01	Hjul.....	Wheel.....			
X 264	2	2		1136-2333-01	Navkapsel-grå.....	Hub cap-grey.....			
266	4	4		1136-0609-01	Fjäderbricka.....	Elastic washer.....			
269	1	1		1136-1732-01	Ansatsbult.....	Shoulder bolt.....			
271	1	1		1136-1903-01	Höjdinställn.spak.....	Height adjust lever.....			
273	1	1		1136-0089-01	Bricka.....	Washer.....			
274	1	1		1136-1740-01	Sektor.....	Height adjust sector.....			
275	1	1		9747-0831-02	Mutter.....	Lock nut.....			
276	1	1		1136-1896-01	Kåpa-gul.....	Cover-yellow.....			
277	2	2		9898-0616-16	Skruv.....	Screw.....			
278	2	2		9799-0631-02	Mutter.....	Nut.....			
283	4	4		9847-8119-16	Skruv.....	Screw.....			
284	2	2		1136-0682-01	Bygel.....	Plate.....			
401	2	2		1136-0653-01	Kuggkrans.....	Ring gear.....			
402	1	1		1136-0690-01	Hjulskydd.....	Wheel protection.....			
403	4	4		9650-0012-04	Seegersäkring.....	Circlip.....			
404	1	1		1136-0685-01	Drev-vä.....	Pinion-LH.....			
405	2	2		1136-0632-01	Lager.....	Bearing.....			
406	1	1		1136-0689-01	Hjulskydd.....	Wheel protection.....			
407	1	1		1136-0713-01	Bakaxel.....	Rear wheel axle.....			
408	1	1		1136-0684-01	Drev-hö.....	Pinion-RH.....			
411	1	1		1136-1456-01	Transmission kpl (sv).....	Gearbox assy (black).....		Inkl. pos 412 - 414	
412	1	1		1136-0692-01	• Remskiva.....	• Pulley.....			
413	1	1		1136-0612-01	• Stift.....	• Pin.....			
414	1	1		1136-1454-01	• Justerstång.....	• Adjustment rod.....			
415	1	1		1111-9124-01	Drivrem.....	Belt.....			
416	2	2		1136-0697-01	Stift.....	Pin.....			
417	1	1		1136-0638-01	Busning.....	Bush.....			
418	1	1		1136-0668-01	Fjäder.....	Spring.....			
419	1	1		1136-0091-01	Bricka.....	Washer.....			
420	1	1		9747-0631-02	Låsmutter.....	Lock nut.....			
421	1	1		1136-0081-01	Navkapsel.....	Hub cap.....			

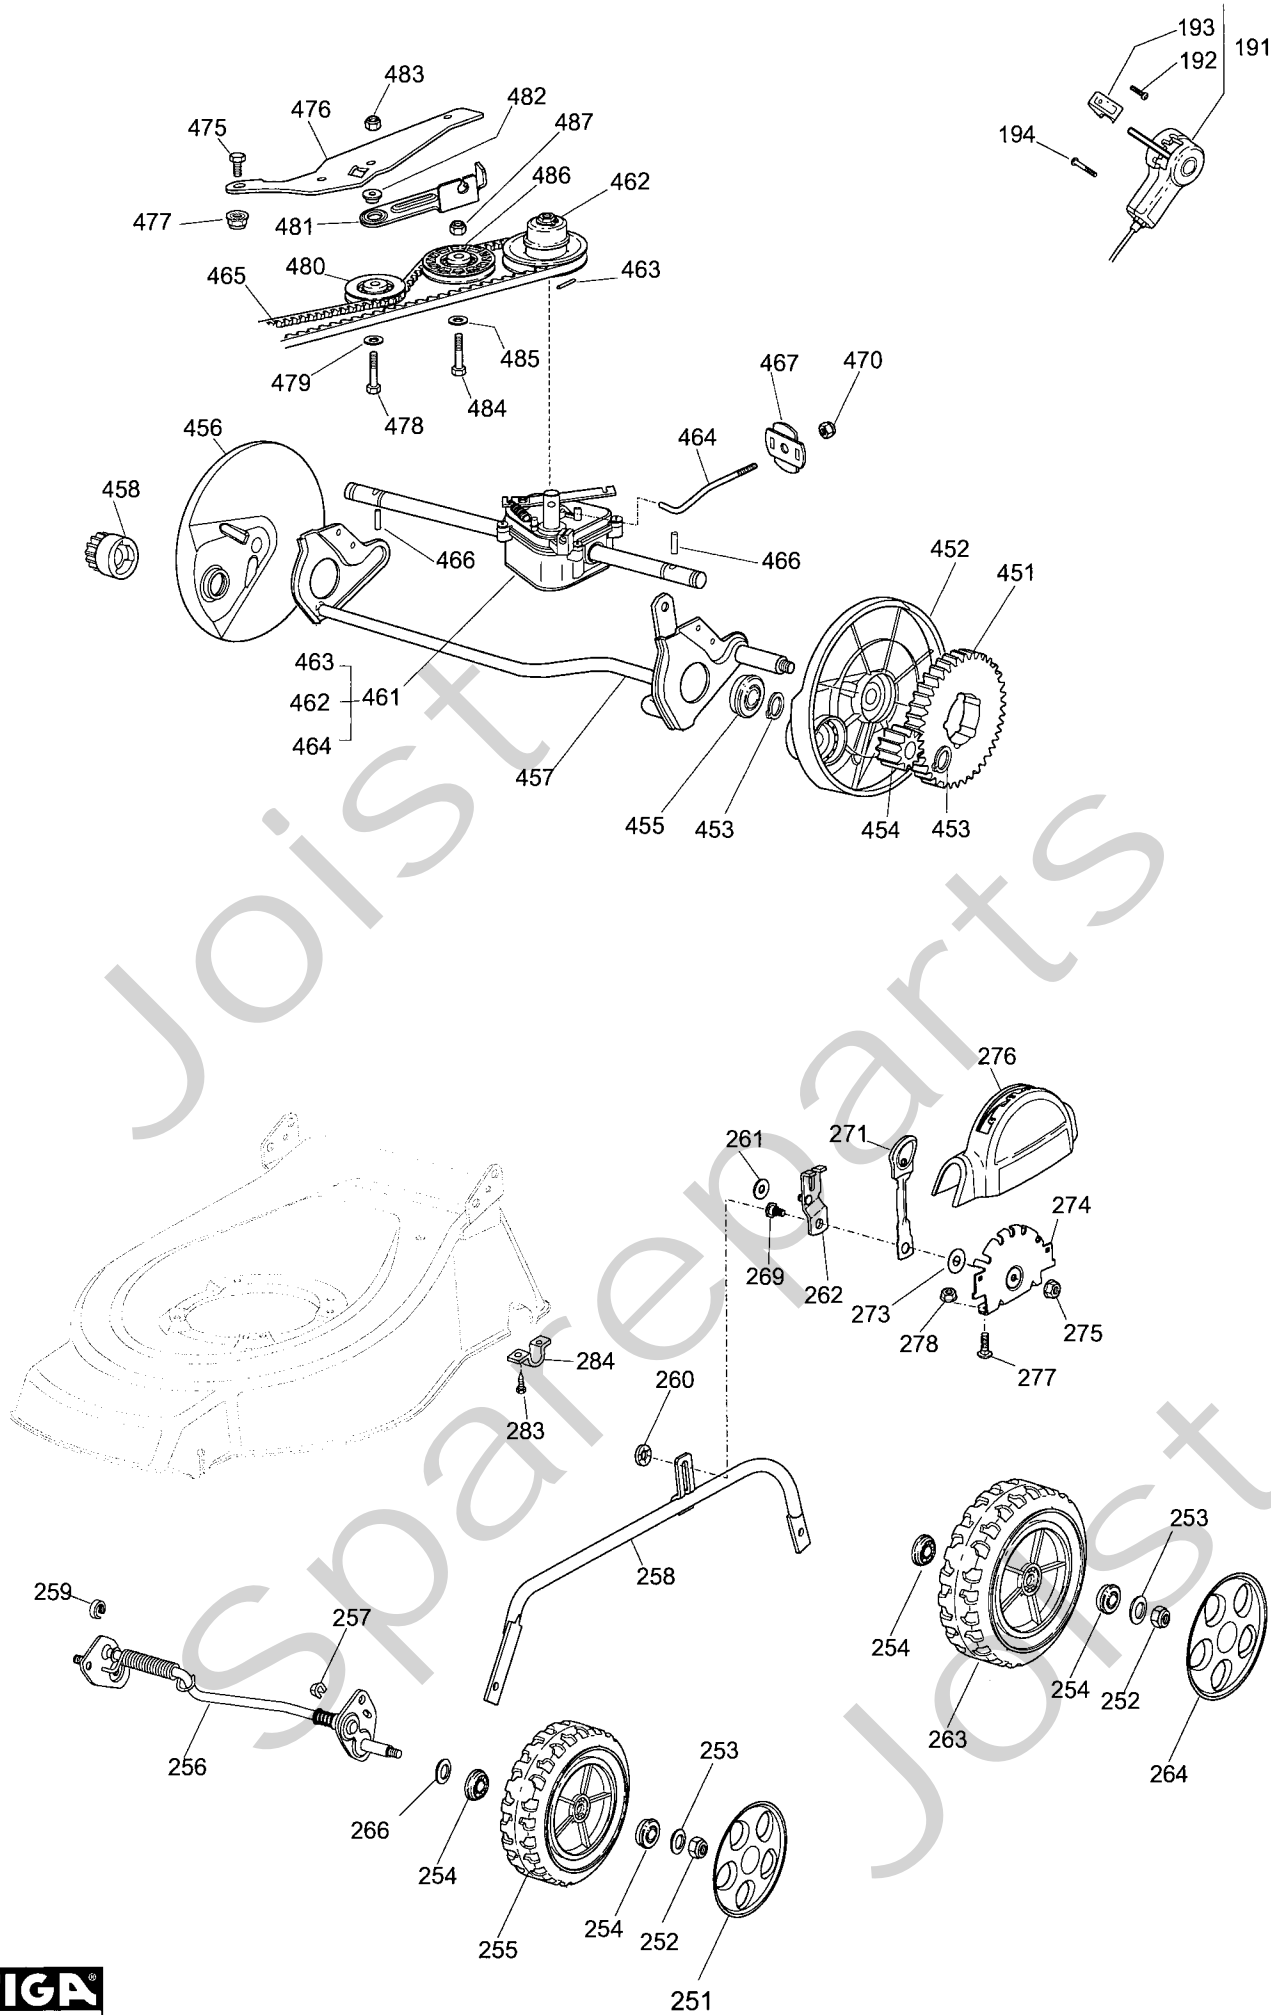

Utgåva Issue		Bildnr Picture No		TURBO 53S COMBI TRANSMISSION HJULUPPHÄNGNING		TURBO 53S COMBI TRANSMISSION WHEEL SUSPENSION		Sida Page	
2006- 12		2127						146	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	5230 -15								
X	191	1		1136-2432-01	Variatorreglage	Speed control.....		Inkl. pos 192 - 193	
	192	1		9838-9522-12	• Skruv	• Screw			
	193	1		1111-2941-01	• Reglageknopp.....	• Knob			
	194	2		9838-9540-12	Skruv	Screw			
X	251	2		1136-2423-01	Navkapsel- grå.....	Hub cap- grey.....			
	252	4		9747-0831-02	Mutter.....	Lock nut			
	253	4		9699-0028-02	Planbricka.....	Flat washer.....			
	254	8		1136-0655-01	Kullager	Ball bearing			
	255	2		1136-1520-01	Hjul	Wheel.....			
	256	1		1136-0712-01	Framaxel.....	Front wheel axle			
	257	2		1136-0009-01	Låsplatta	Lock plate			
	258	1		1136-1758-01	Höjdinställn.stag.....	Height adjust rod			
	259	1		1136-0658-01	Distans	Spacer.....			
	260	1		9675-0009-02	Starlock	Starlock			
	261	1		1136-0006-01	Fjäderbricka	Elastic washer			
	262	1		1136-1757-01	Fäste.....	Attachment.....			
	263	2		1136-0772-01	Hjul	Wheel.....			
X	264	2		1136-2333-01	Navkapsel- grå.....	Hub cap- grey.....			
	266	4		1136-0609-01	Fjäderbricka	Elastic washer			
	269	1		1136-1732-01	Ansatsbult	Shoulder bolt			
	271	1		1136-1903-01	Höjdinställn.spak	Height adjust lever			
	273	1		1136-0089-01	Bricka.....	Washer.....			
	274	1		1136-1740-01	Sektor	Height adjust sector			
	275	1		9747-0831-02	Mutter.....	Lock nut			
	276	1		1136-1896-01	Kåpa- gul	Cover- yellow			
	277	2		9898-0616-16	Skruv	Screw			
	278	2		9799-0631-02	Mutter.....	Nut			
	283	4		9847-8119-16	Skruv	Screw			
	284	2		1136-0682-01	Bygel	Plate			
	451	1		1136-0653-01	Kuggkrans	Ring gear			
	452	1		1136-0690-01	Hjulskydd.....	Wheel protection.....			
	453	4		9650-0012-04	Seegersäkring.....	Circlip			
	454	1		1136-0685-01	Drev- vä	Pinion- LH			
	455	2		1136-0632-01	Lager	Bearing.....			
	456	1		1136-0689-01	Hjulskydd.....	Wheel protection.....			
	457	1		1136-0713-01	Bakaxel	Rear wheel axle			
	458	1		1136-0684-01	Drev- hö	Pinion- RH.....			
X	461	1		1136-2433-01	Transmission kpl	Transmission assy			Inkl. pos 462 - 464
	462	1		1111-3001-01	• Variator	• Variator assy			
	463	1		9594-0026-00	• Spännstift	• Locating pin			
X	464	1		1136-2434-01	Justerstång.....	Adjustment rod			
X	465	1		1136-2435-01	Drivrem	Drive belt.....			
	466	2		1136-0697-01	Stift.....	Pin			
X	467	2		1136-2436-01	Bricka	Washer.....			
	470	1		9747-0631-02	Låsmutter	Lock nut			
	475	1		9997-0616-16	Skruv	Screw			
X	476	1		1136-2437-01	Stöd.....	Support.....			
	477	1		9739-0631-22	Mutter.....	Nut			
	478	1		9997-0640-12	Skruv	Screw			
	479	1		9699-0085-02	Planbricka.....	Flat washer.....			
	480	1		1111-2747-01	Spännrulle	Tension roller			
X	481	1		1136-2438-01	Stöd.....	Support.....			
	482	1		1111-2423-01	Distans	Spacer.....			
	483	1		9747-0631-02	Låsmutter	Lock nut			
	484	1		9997-0635-12	Skruv	Screw			
	485	1		9699-0085-02	Planbricka.....	Flat washer.....			
	486	1		1111-2746-01	Remskiva.....	Belt pulley			
	487	1		9747-0631-02	Låsmutter	Lock nut			

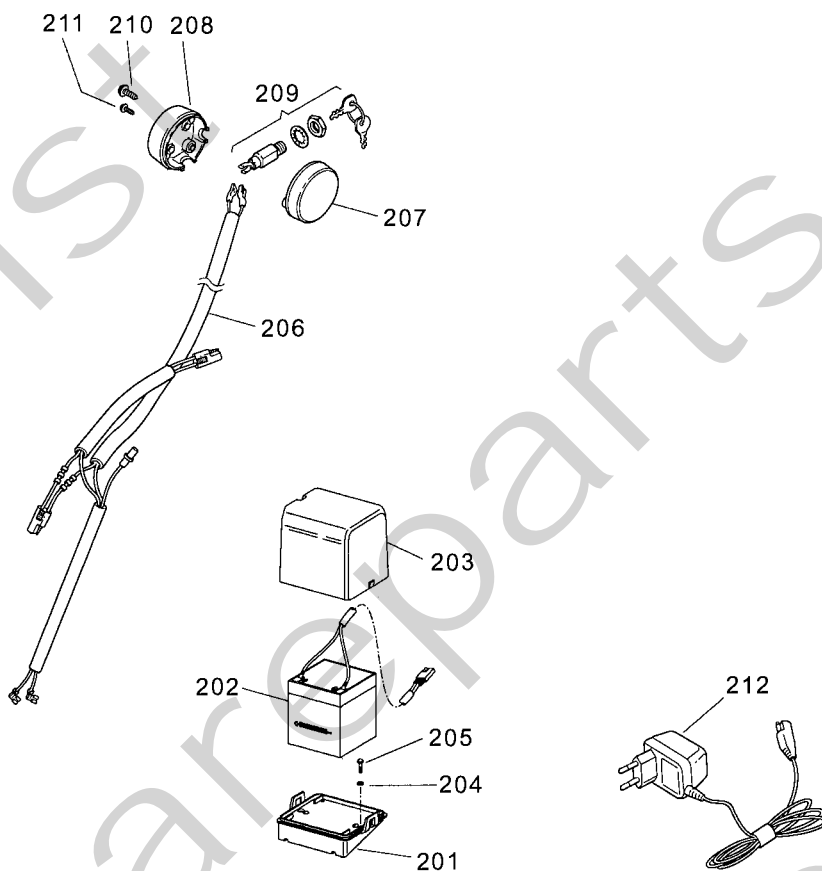

Utgåva Issue 2006- 12	Bildnr Picture No 1930	TURBO 53SE COMBI ELSTART	TURBO 53SE COMBI ELECTRIC STARTER	Sida Page 148
-----------------------------	------------------------------	-----------------------------	--------------------------------------	---------------------

Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	5298 -15								
201	1				1136- 1353- 01	Batteriplatta	Battery support		
202	1				1136- 1320- 01	Batteri	Battery		
203	1				1136- 1334- 01	Lock	Cover		
204	2				9699- 0021- 02	Bricka	Washer		
205	2				1136- 1313- 01	Skruv	Screw		
206	1				1136- 0625- 01	Startkabel	Start cable		
207	1				1111- 2021- 01	Lock	Cover		
208	1				1111- 2020- 01	Hus	Housing		
209	1				9400- 0186- 00	Tändningslås kpl.	Starting switch assy		
209A	1				1134- 2848- 01	• Tändningsnyckel	• Ignition key		
210	2				9838- 9540- 12	Skruv	Screw		
211	1				9836- 9216- 12	Skruv	Screw		
212	1				1136- 1321- 01	Batteriladdare	Charger		