



Genuine Spare Parts



Spareparts
Joist

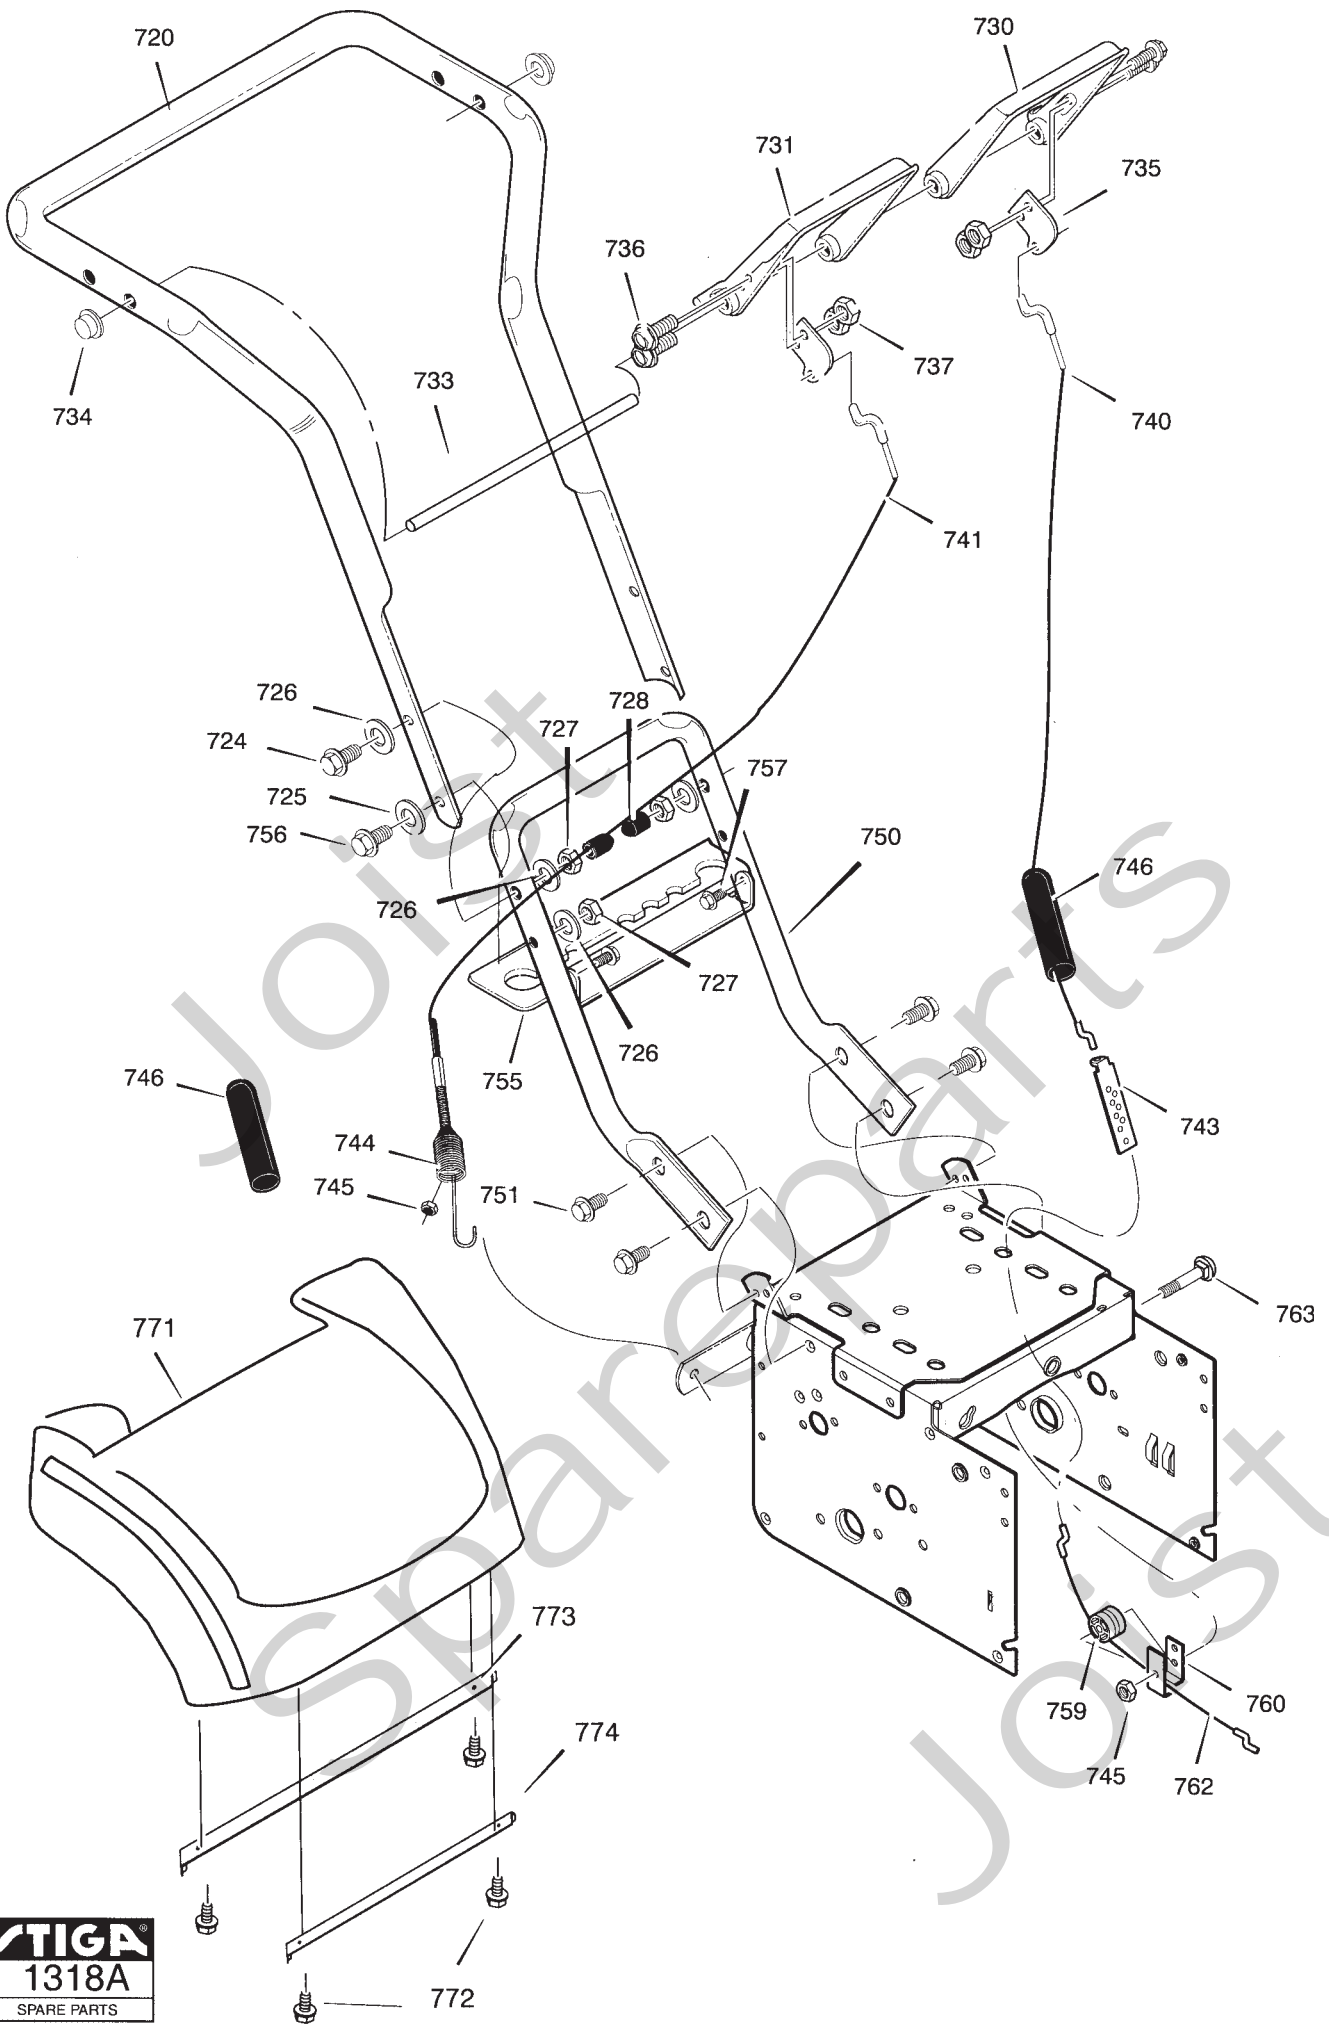


Utgåva Issue 2005-14		Bildnr Picture No 1318A		SNOW STORM SNOW BLIZZARD STYRE	SNOW STORM SNOW BLIZZARD HANDLE	Sida Page 32		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2827	2830						
	720	1	1	1812-1395-01	Styre-överdel	Handle- upper		
	724	2	2	9988-3670-12	Skruv	Screw		
	725	2	2	9699-0029-02	Planbricka	Flat washer		
	726	6	6	9683-0030-02	Låsbricka	Lock washer		
	727	4	4	1812-1759-01	Mutter	Nut		
	728	2	2	1812-0941-01	Plastknopp	Plastic stop		
	730	1	1	1812-0932-01	Kopplingshandtag- vä	Clutch handle- LH		
	731	1	1	1812-0933-01	Kopplingshandtag- hö	Clutch handle- RH		
	733	1	1	1812-0934-01	Handtagsaxel	Clutch handle rod		
	734	2	2	1812-0513-01	Låsning	Retainer		
X	735	2	2	1812-2100-01	Wirefäste	Cable pivot plate		
	736	4	4	9988-3525-16	Skruv	Screw		
	737	4	4	1812-0812-01	Låsmutter	Locking nut		
	740	1	1	1812-1728-01	Kopplingswire	Clutch cable- drive		
	741	1	1	1812-1518-01	Reglagewire- snöskruv	Control cable- auger		
X	741	1	1	1812-2068-01	Reglagewire- snöskruv	Control cable- auger		
	743	1	1	1133-0977-01	Wirefäste	Cable adjust bracket		
	744	1	1	1812-0254-01	Fjäder	Spring		
	745	2	2	1812-1760-01	Mutter	Nut		
	746	2	2	1133-0968-01	Wirehylsa	Clutch spring boot		
	750	1	1	1812-1323-01	Styre- underdel	Handle- lower		
	751	4	4	1812-1833-01	Skruv	Screw		
	755	1	1	1812-1398-01	Växelväljarplåt	Gear selector plate		
	756	2	2	9988-3651-12	Skruv	Screw		
	757	2	2	9988-3516-16	Skruv	Screw		
	759	1	1	1812-1205-01	Spole	Spool		
	760	1	1	1812-1702-01	Fäste	Bracket		
	762	1	1	1812-1727-01	Reglagewire- nedre	Drive cable- lower		
	763	1	1	1812-1772-01	Skruv	Screw		
	771	1	1	1812-1870-01	Panel	Panel		
	772	4	4	1812-1394-01	Skruv	Screw		
	773	1	1	1812-1869-01	Fäste- övre	Bracket- top		
	774	1	1	1812-1868-01	Fäste- undre	Bracket- bottom		
X	998	1	1	8218-2201-13	Bruksanvisning	Owner's manual		Ej ill/not ill.

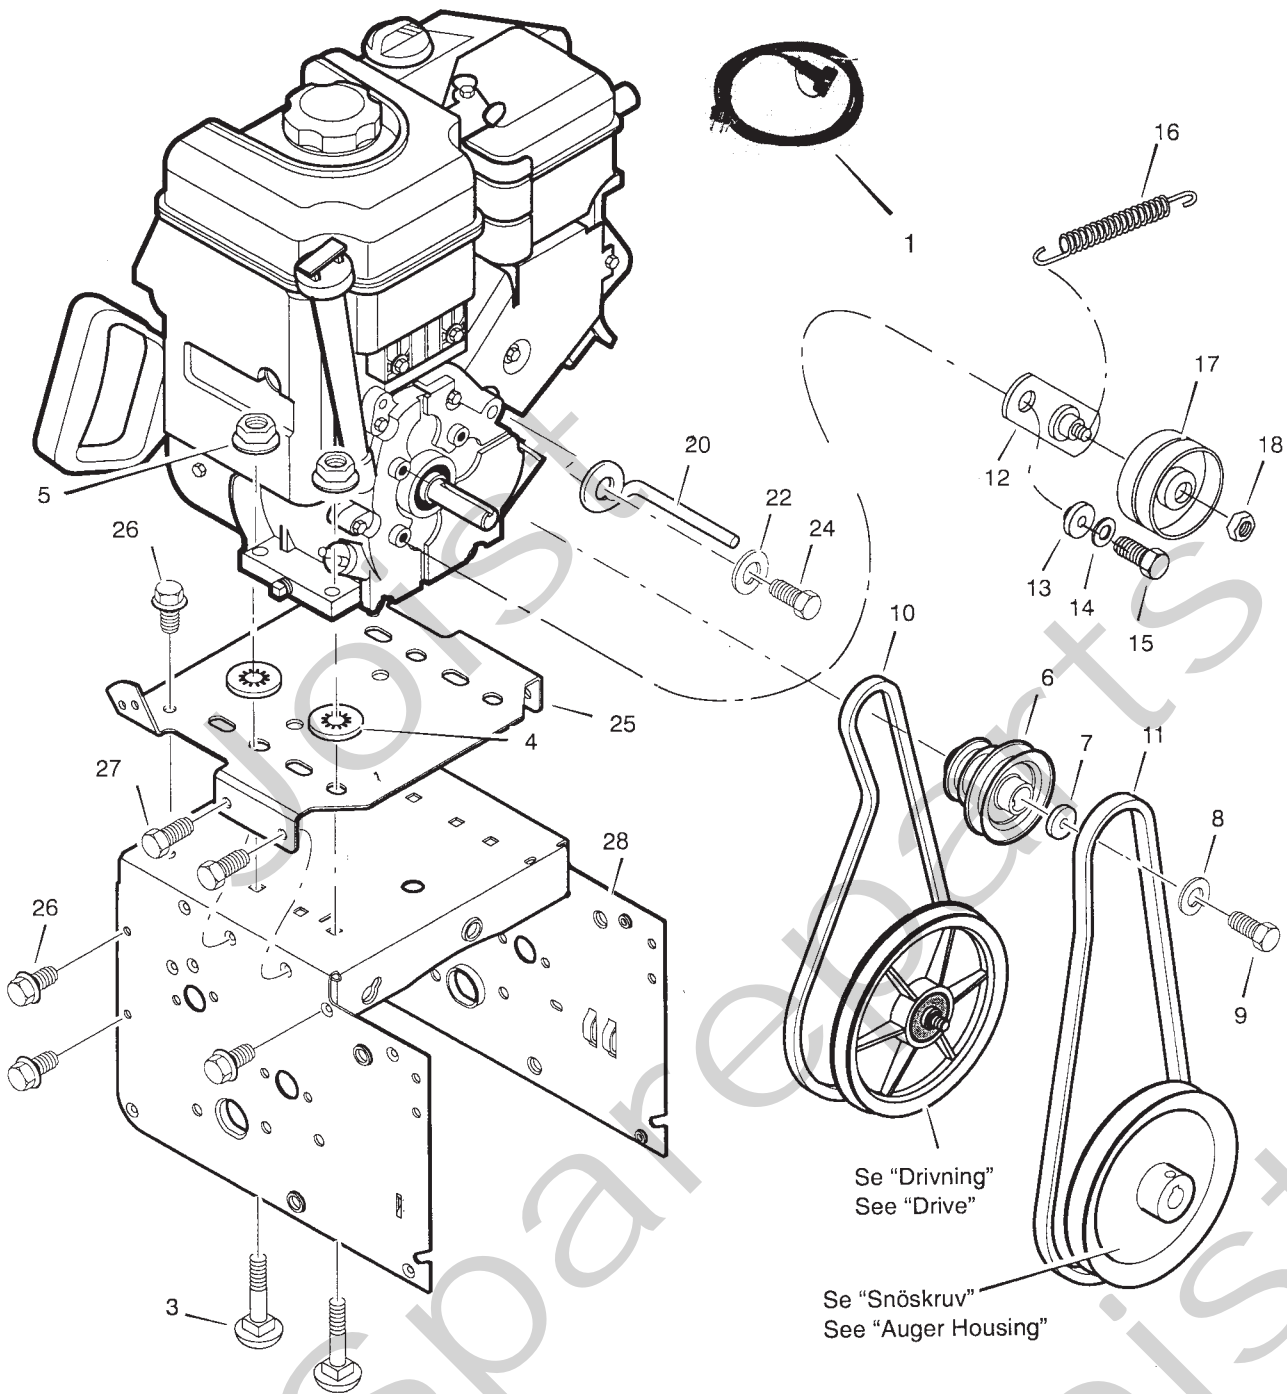


Utgåva Issue		Bildnr Picture No		SNOW STORM SNOW BLIZZARD MOTOR		SNOW STORM SNOW BLIZZARD ENGINE		Sida Page	
2005-14		1776A						34	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830							
1		1		1812-1615-01	Förlängningssladd	Extension cord			
3	4	4		1812-1678-01	Vagnsbult	Carriage bolt			
4	4	4		1812-1681-01	Hållare	Retainer			
5	4	4		9795-3631-02	Mutter	Nut			
6	1	1		1812-1719-01	Motorremskiva	Engine pulley			
7	1	1		1812-1691-01	Bricka	Washer			
8	1	1		9683-0035-02	Låsbricka	Lock washer			
9	1	1		1133-0762-01	Skruv	Screw			
10	1	1		1812-9016-01	Drivrem	Drive belt			
11	1	1		1812-9020-01	Drivrem	Drive belt			
12	1	1		1812-1722-01	Spännrullsfäste	Idler bracket			
13	1	1		1812-1705-01	Bussning	Bushing			
14	1	1		9683-0030-02	Låsbricka	Lock washer			
15	1	1		9987-5119-16	Skruv	Screw	L = 19 mm		
16	1	1		1812-0329-01	Fjäder	Spring			
17	1	1		1812-2077-01	Spännrulle	Tension roller			
18	1	1		9743-3721-32	Mutter	Nut			
20	1	1		1812-1742-01	Remstyrning	Belt guide			
22	1	1		9683-0030-02	Låsbricka	Lock washer			
24	2	2		9987-5119-16	Skruv	Screw	L = 19 mm		
25	1	1		1812-1703-01	Motorplatta	Engine mount plate			
26	6	6		9988-3516-16	Skruv	Screw			
27	4	4		1812-1832-01	Skruv	Screw			
28		1		1812-1695-01	Motorchassi	Engine box frame			
28	1			1812-1849-01	Motorchassi	Engine box frame			


X

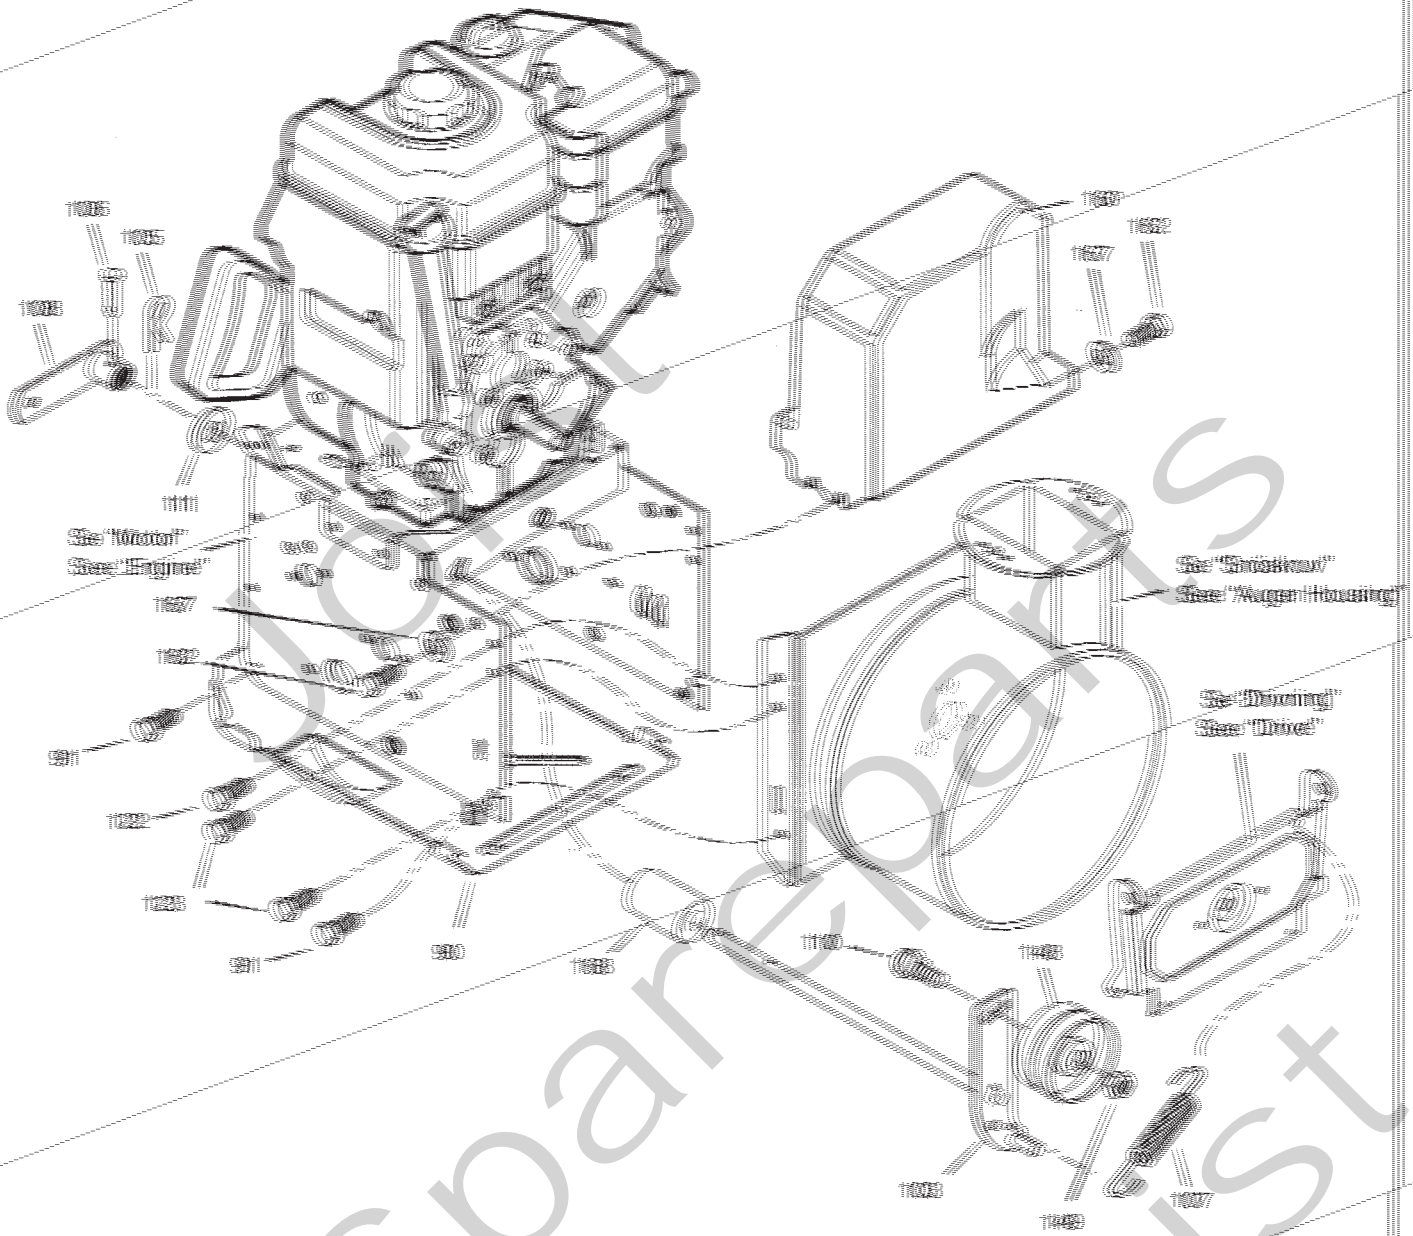


Utgåva Issue		Bildnr Picture No		SNOW STORM SNOW BLIZZARD RAM	SNOW STORM SNOW BLIZZARD FRAME	Sida Page		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2827	2830						
	90	1	1	1812-1700-01	Bottenplåt	Bottom cover		
	91	4	4	9988-3516-16	Skruv	Screw		
	103		1	1812-1747-01	Spännarm	Idler		
X	103	1		1812-2085-01	Spännarm	Idler		
	105	1	1	1812-1511-01	Låsstift	Hair pin		
	106	1	1	1812-1533-01	Pinne	Klik pin		
	107	1	1	1812-1676-01	Fjäder	Tension spring		
	108	1	1	1812-1693-01	Fjäderfäste	Spring attachment		
	110	1	1	9899-3732-16	Skruv	Screw		
	111	1	1	1812-1509-01	Planbricka	Flat washer		
	122	2	2	1812-1832-01	Skruv	Screw		
	123	4	4	1812-1833-01	Skruv	Screw		
X	148	1	1	1812-2077-01	Spännrulle	Tension roller		
	149	1	1	9743-3721-32	Mutter	Nut		
X	160	1	1	1812-2078-01	Remskydd	Belt cover		
	162	4	4	1812-1680-01	Skruv	Screw		
	167	4	4	9699-0028-02	Planbricka	Flat washer		
X	168	1	1	1812-2075-01	Distans	Spacer		

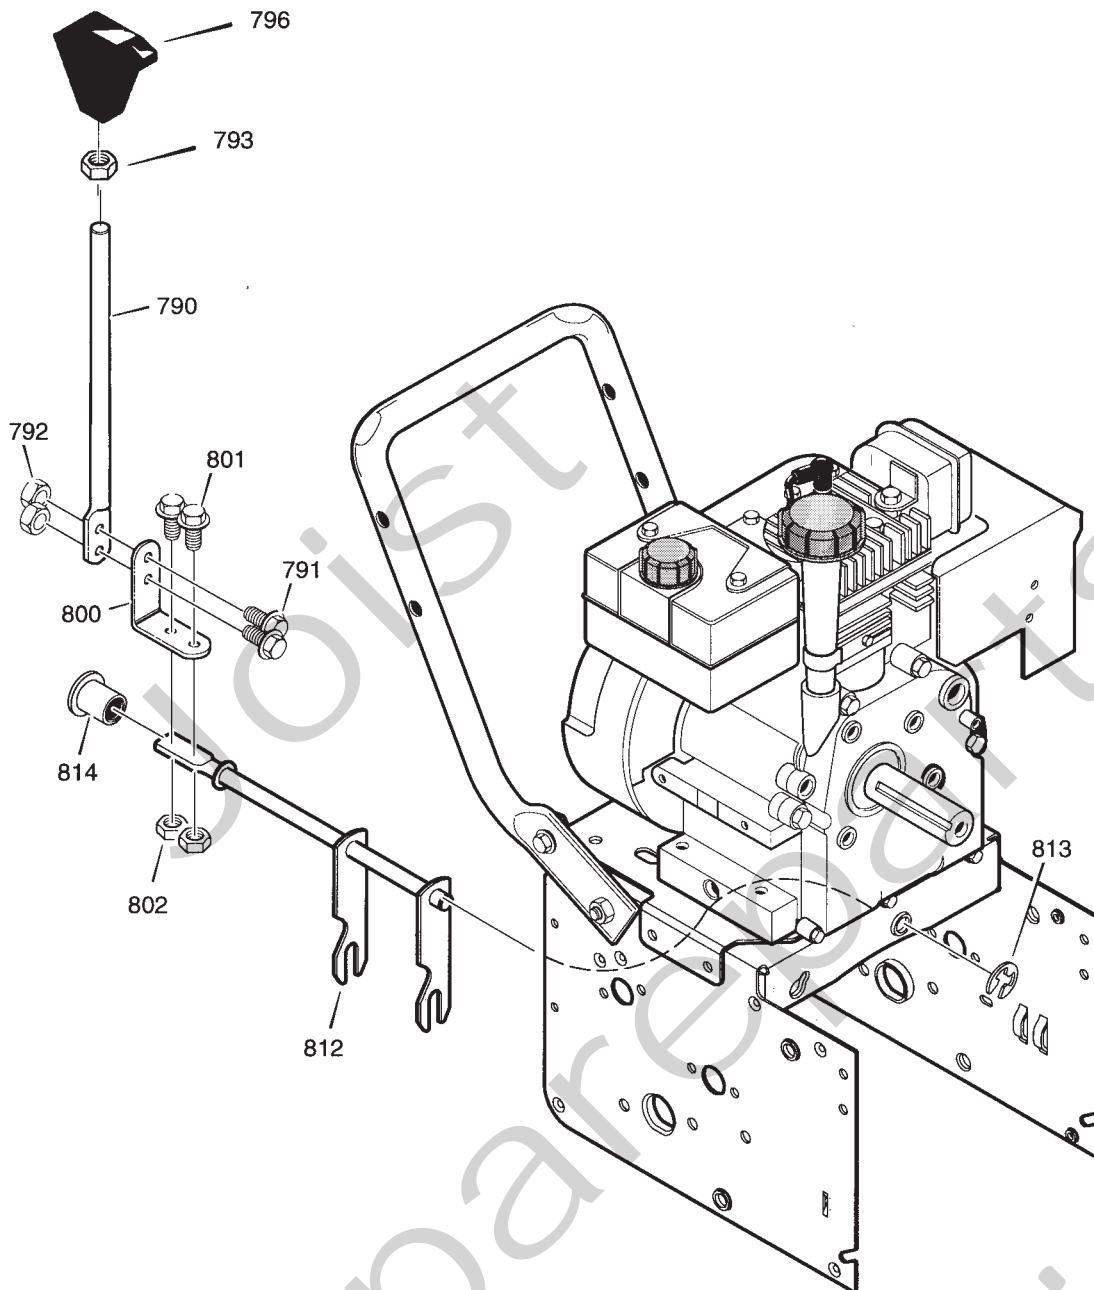

Utgåva Issue		Bildnr Picture No		SNOW STORM SNOW BLIZZARD VÄXELSPAK	SNOW STORM SNOW BLIZZARD SHIFT YOKE	Sida Page		
2005-14		1319				38		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2827	2830						
790	1	1		1812-1420-01	Växelspak	Shift rod		
791	2	2		9988-3519-16	Skruv	Screw		
792	2	2		1812-0812-01	Låsmutter	Locking nut		
793	1	1		9795-3931-00	Mutter	Nut		
796	1	1		1812-1308-01	Reglageknopp	Shift knob		
800	1	1		1812-1444-01	Spakfjäder	Lever spring		
801	2	2		9988-3519-16	Skruv	Screw		
802	2	2		1812-0812-01	Låsmutter	Locking nut		
812	1	1		1812-1710-01	Växelstång	Shift rod		
813	1	1		1812-1672-01	Låsring	Retainer ring		
814	1	1		1812-1219-01	Plastbussning	Plastic bushing		

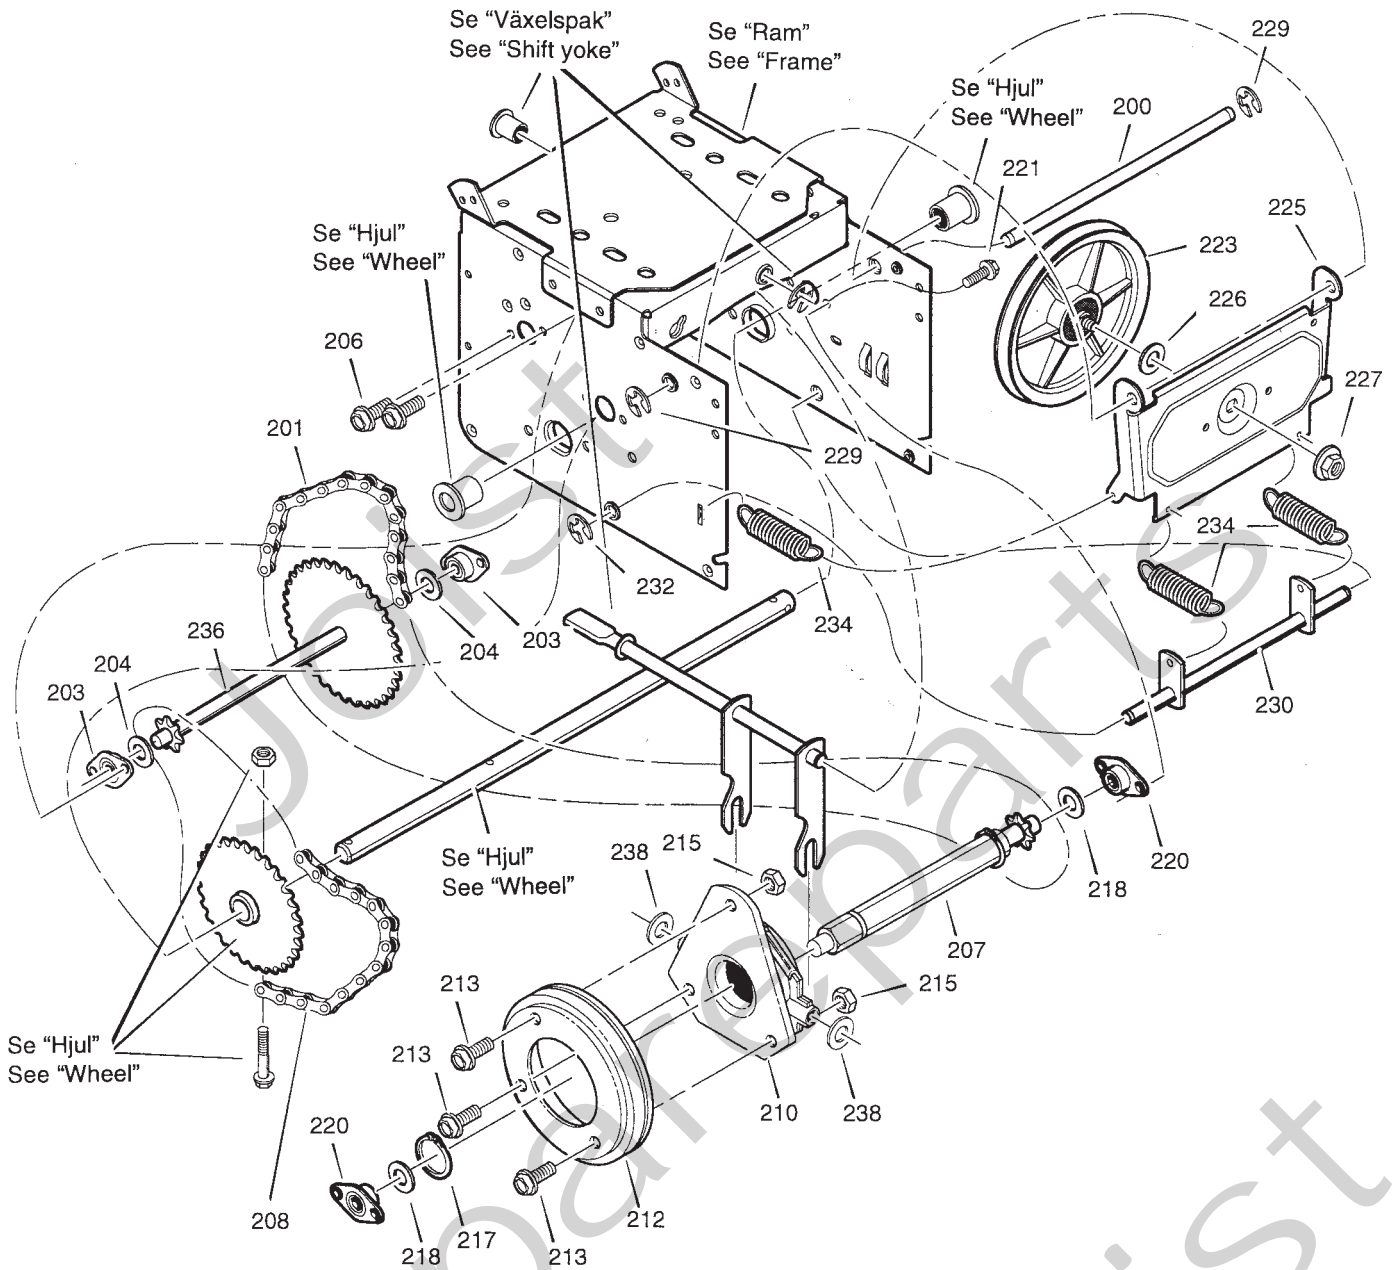


Utgåva Issue		Bildnr Picture No		SNOW STORM DRIVNING	SNOW STORM DRIVE	Sida Page		
2005- 14		1316				40		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2827							
200	1			1812-1713-01	Axel- svängplatta	Axle- swing plate		
201	1			1812-1686-01	Kedja	Chain		
203	2			1812-1178-01	Glidlager m.hållare.....	Bearing & retainer.....		
204	2			1812-1204-01	Bricka	Washer.....		
206	4			1812-1832-01	Skruv	Screw		
207	1			1812-1750-01	Sexkantsaxel.....	Hex shaft.....		
208	1			1812-1688-01	Kedja	Chain		
210	1			1812-1313-01	Lager	Trunion bearing.....		
212	1			1812-9028-01	Friktionshjul.....	Friction disc wheel		
213	3			9988-3516-16	Skruv	Screw		
215	3			9795-3531-02	Mutter.....	Nut		
217	1			1812-1687-01	Låsring	Retext ring		
218	2			1812-1204-01	Bricka	Washer.....		
220	2			1812-1178-01	Glidlager m.hållare.....	Bearing & retainer.....		
221	4			1812-1832-01	Skruv	Screw		
223	1			1812-1725-01	Friktionsremskiva	Friction pulley		
225	1			1812-1701-01	Svängplatta.....	Swing plate		
226	1			1812-1739-01	Distans	Spacer.....		
227	1			1812-1674-01	Flänslåsmutter	Flange lock nut.....		
229	2			1812-1672-01	Låsring	Retainer ring		
X 230	1			1812-2076-01	Fjäderlänkarm	Spring link.....		
232	2			1812-1672-01	Låsring	Retainer ring		
234	3			1812-1675-01	Fjäder.....	Spring		
236	1			1812-1712-01	Kedjedrev.....	Sprocket.....	33T/7T	
238	2			9699-0038-02	Planbricka.....	Flat washer.....		

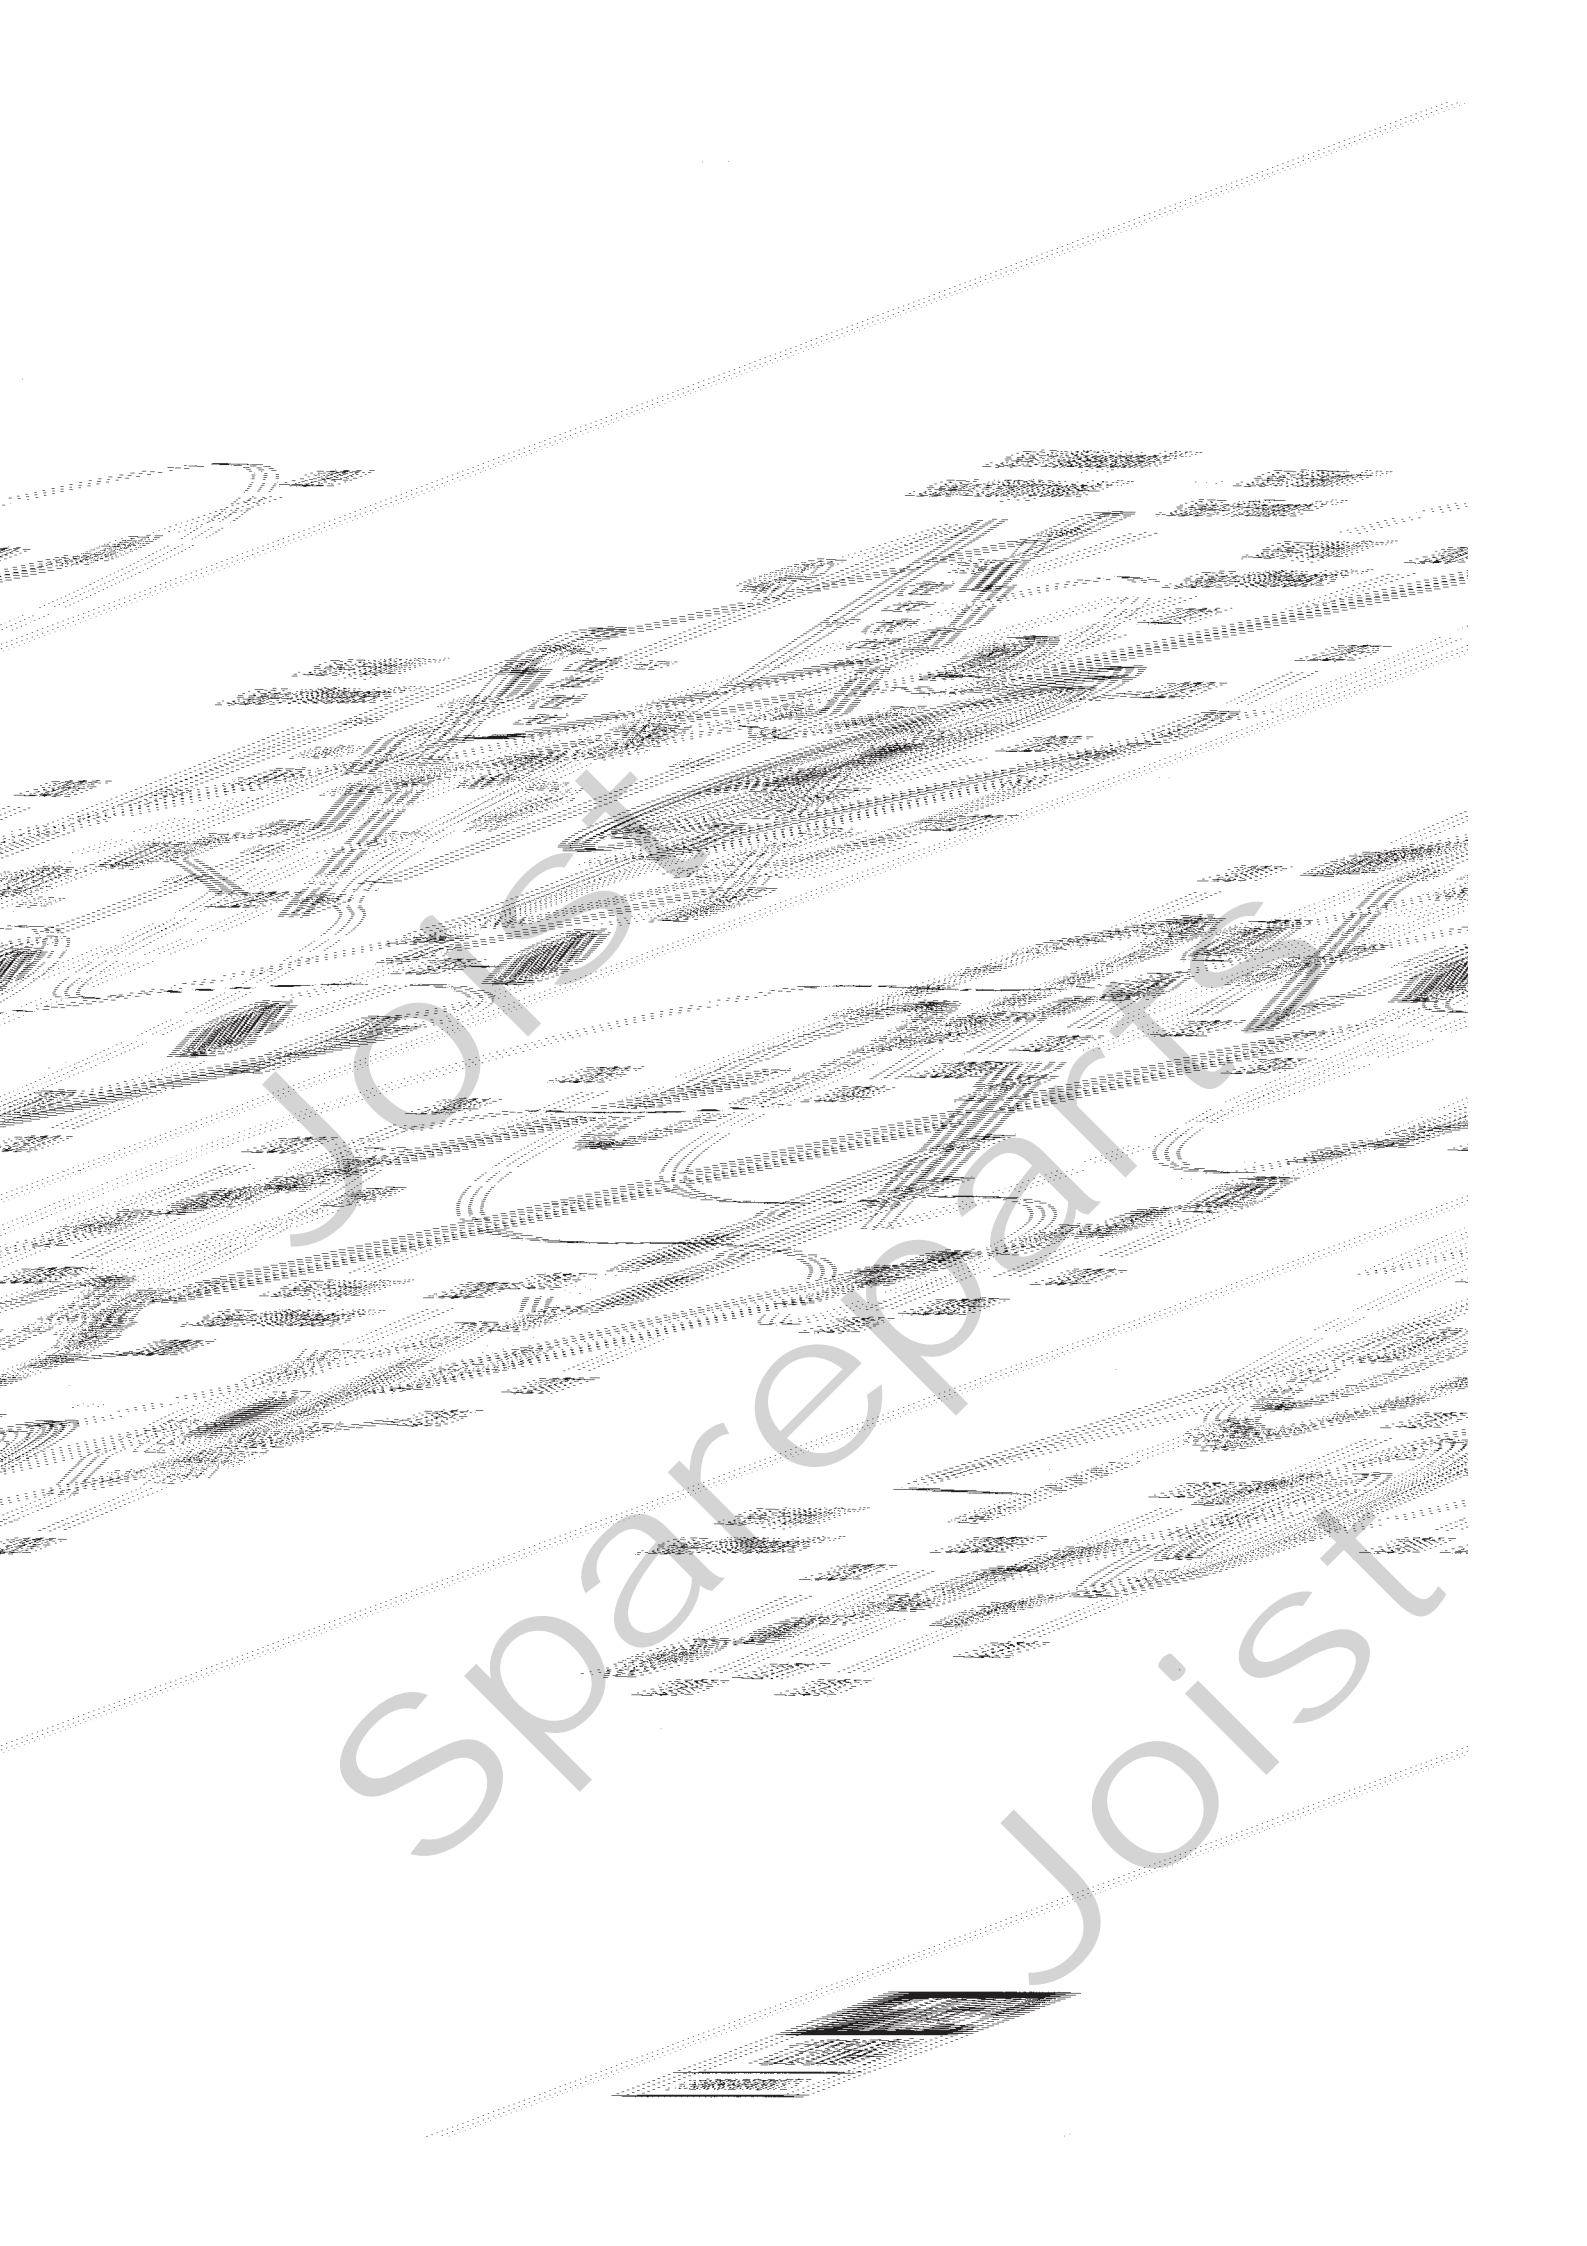


Utgåva Issue		Bildnr Picture No		SNOW BLIZZARD DRIVNING	SNOW BLIZZARD DRIVE	Sida Page		
2005-14		1316A				42		
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2830							
200	1			1812-1713-01	Axel-svängplatta	Axle-swing plate		
201	1			1812-1686-01	Kedja	Chain		
203	4			1812-1200-01	Lagerhållare.....	Bearing retainer.....		
203B	4			1812-1207-01	Kullager	Ball bearing		
204	2			1812-1204-01	Bricka	Washer		
206	4			1812-1832-01	Skruv	Screw		
207	1			1812-1714-01	Sexkantsaxel.....	Hex shaft		
208	1			1812-1688-01	Kedja	Chain		
210	1			1812-1313-01	Lager	Trunion bearing.....		
212	1			1812-9028-01	Friktionshjul.....	Friction disc wheel		
213	3			9988-3516-16	Skruv	Screw		
215	3			9795-3531-02	Mutter	Nut		
217	1			1812-1687-01	Låsring	Retext ring		
218	2			1812-1204-01	Bricka	Washer		
221	4			1812-1832-01	Skruv	Screw		
223	1			1812-1725-01	Friktionsremskiva.....	Friction pulley		
225	1			1812-1701-01	Svängplatta.....	Swing plate		
226	1			1812-1739-01	Distans	Spacer		
227	1			1812-1674-01	Flänslåsmutter	Flange lock nut.....		
229	2			1812-1672-01	Låsring	Retainer ring		
230	1			1812-2076-01	Fjäderlänkarm	Spring link.....		
232	2			1812-1672-01	Låsring	Retainer ring		
234	3			1812-1675-01	Fjäder.....	Spring		
236	1			1812-1715-01	Mellanaxel m.drev	Intermed. sprocket.....	33T/7T	
238	2			9699-0038-02	Planbricka.....	Flat washer.....		

X

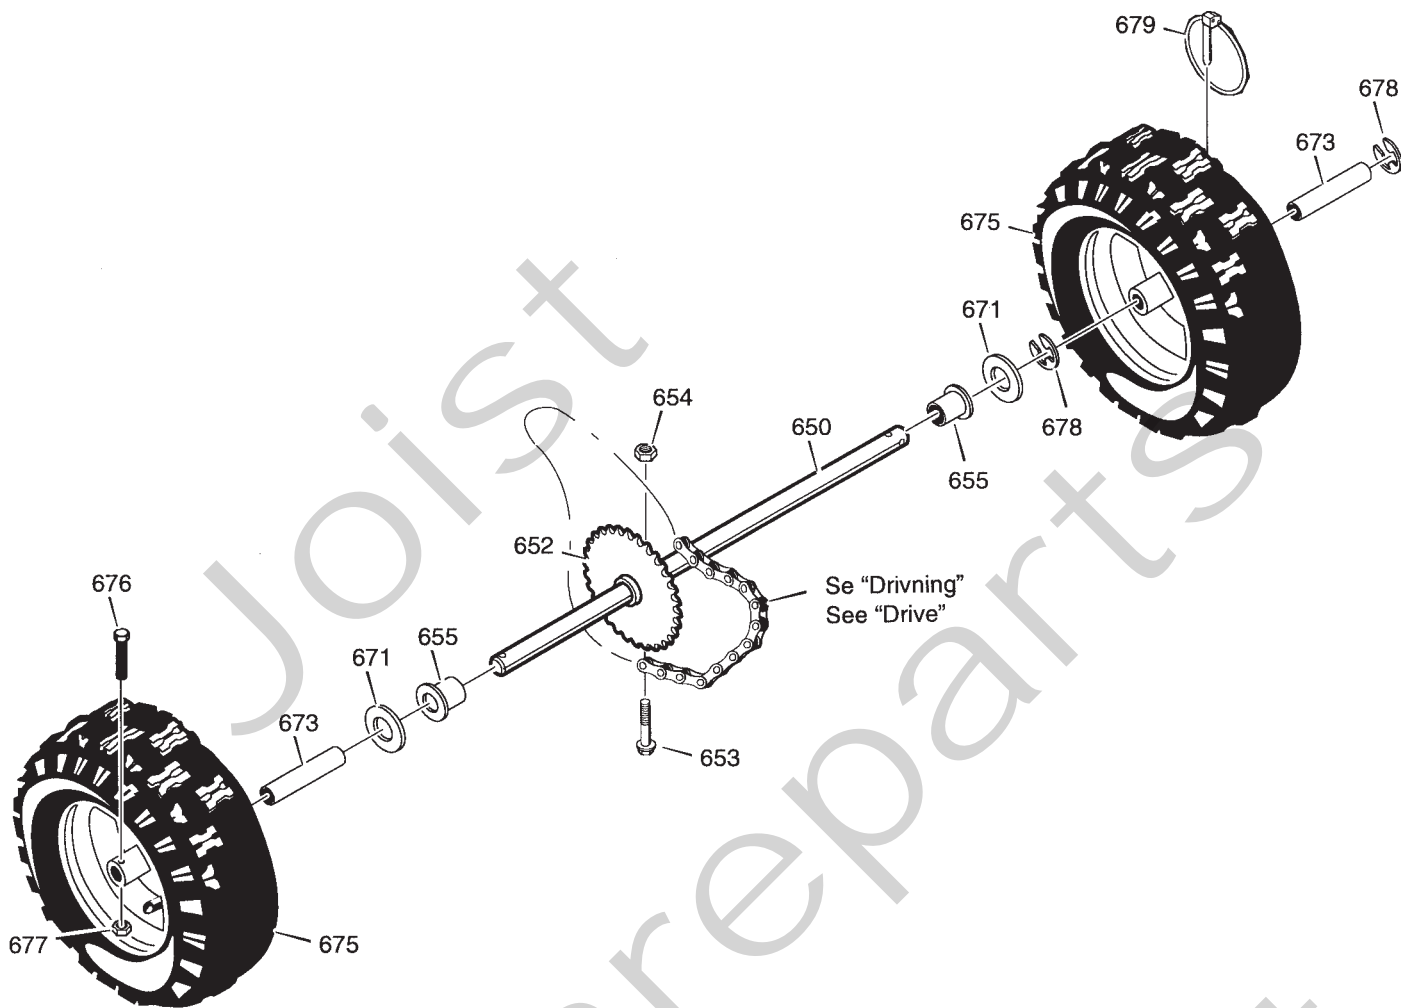

Utgåva Issue 2005-14		Bildnr Picture No 1317		SNOW STORM HJUL		SNOW STORM WHEELS		Sida Page 44	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827								
X	650	1		1812-1862-01	Hjulaxel.....	Axle shaft.....			
	652	1		1812-1712-01	Kedjedrev.....	Sprocket.....			
	653	1		1812-1755-01	Skruv.....	Screw.....			
	654	1		1812-1760-01	Mutter.....	Nut.....			
	655	2		1812-1724-01	Lager.....	Axle bearing.....			
	671	2		1812-2059-01	Bricka.....	Washer.....			
	673	2		1812-1734-01	Hjulbussning.....	Wheel bushing.....			
	675	2		1812-1173-01	Hjul.....	Wheel.....		13 x 5.00-6	
	676	1		1812-1114-01	Bult.....	Bolt.....			
	677	1		1812-1760-01	Mutter.....	Nut.....			
	678	2		1812-0567-01	Låsring.....	Retaining ring.....			
	679	1		1812-0408-01	Låssprint.....	Click pin.....			

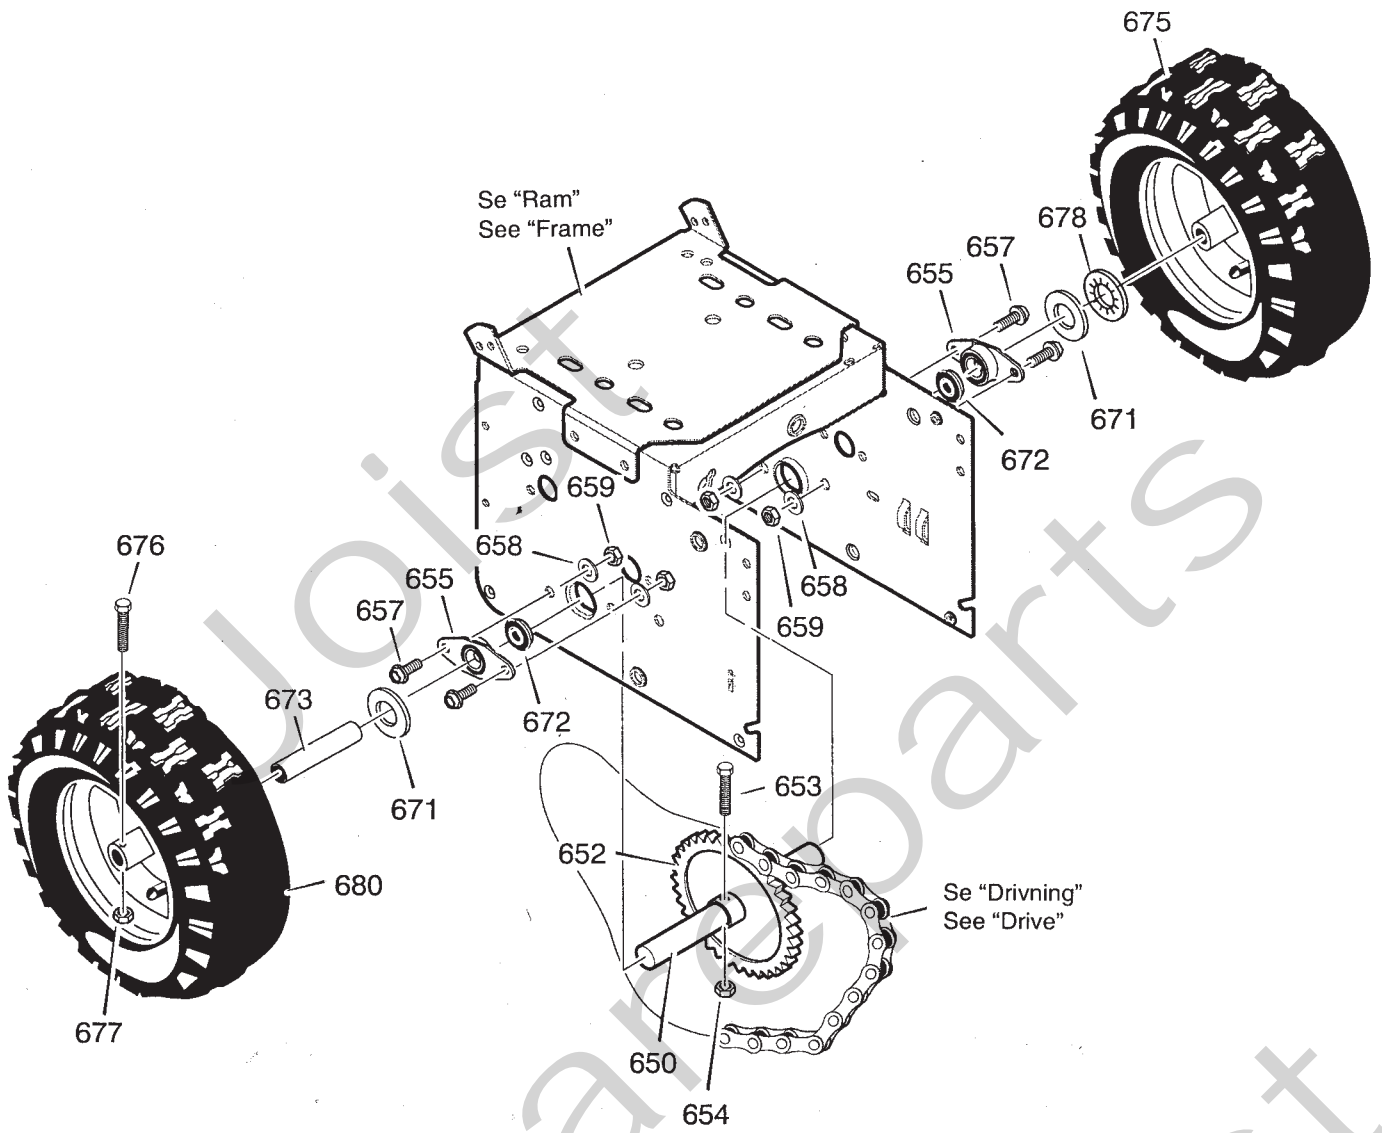


Joist

Spareparts


Joist




Utgåva Issue 2005- 14		Bildnr Picture No 1325B		SNOW STORM SNOW BLIZZARD SNÖSKRUV		SNOW STORM SNOW BLIZZARD AUGER HOUSING		Sida Page 48	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830							
480	1	1		1812-1854-01	Remskiva- snöskruv	Auger pulley			
481	2	2		1812-1119-01	Skruv	Bolt			
482	1	1		1812-1609-01	Kil	Key			
485	1	1		1812-1739-01	Distans	Spacer			
490	1	1		1812-1690-01	Kullagerhållare	Ball bearing retainer			
491	1	1		1812-1858-01	Kullager	Ball bearing			
493	3	3		9988-3616-16	Skruv	Screw			
499	3	3		9795-3631-02	Mutter	Nut			
500	1			1812-1942-01	Snöskruvhus	Auger housing			
X 500		1		1812-2095-01	Snöskruvhus	Auger housing			
510		1		1812-1450-01	Skrapskär	Scraper blade			
510	1			1812-1843-01	Skrapskär	Scraper blade			
511	5	5		9899-3622-16	Skruv	Screw			
514	5	5		9795-3631-02	Mutter	Nut			
X 520	1			1812-2084-01	Snöskruv- vä	Auger- LH			
X 520		1		1812-2097-01	Snöskruv- vä	Auger- LH			
X 521	1			1812-2083-01	Snöskruv- hö	Auger- RH			
X 521		1		1812-2096-01	Snöskruv- hö	Auger- RH			
522	1	1		1812-9005-01	Brytbultsats	Shear bolt kit			
523	2	2		1812-0531-01	• Distans	• Spacer			
524	2	2		1812-0812-01	• Låsmutter	• Locking nut			
525	2	2		1812-0878-01	Lager	Bearing			
526	6	6		9743-3621-32	Mutter	Nut			
527	6	6		9988-3619-16	Skruv	Screw			
540	2	2		1812-1391-01	Släpsko	Height adjustor skid			
541	4	4		9899-3622-16	Skruv	Screw			
544	4	4		9795-3631-02	Mutter	Nut			
550	1	1		1812-1930-01	Rengöringsborste	Clean- out brush			
551	2	2		1812-1939-01	Hållare	Clips			
552	2	2		1812-1917-01	Skruv	Screw			
553	2	2		1812-1912-01	Mutter	Nut			
554	2	2		1812-1317-01	Ledknut	Universal pivot block			

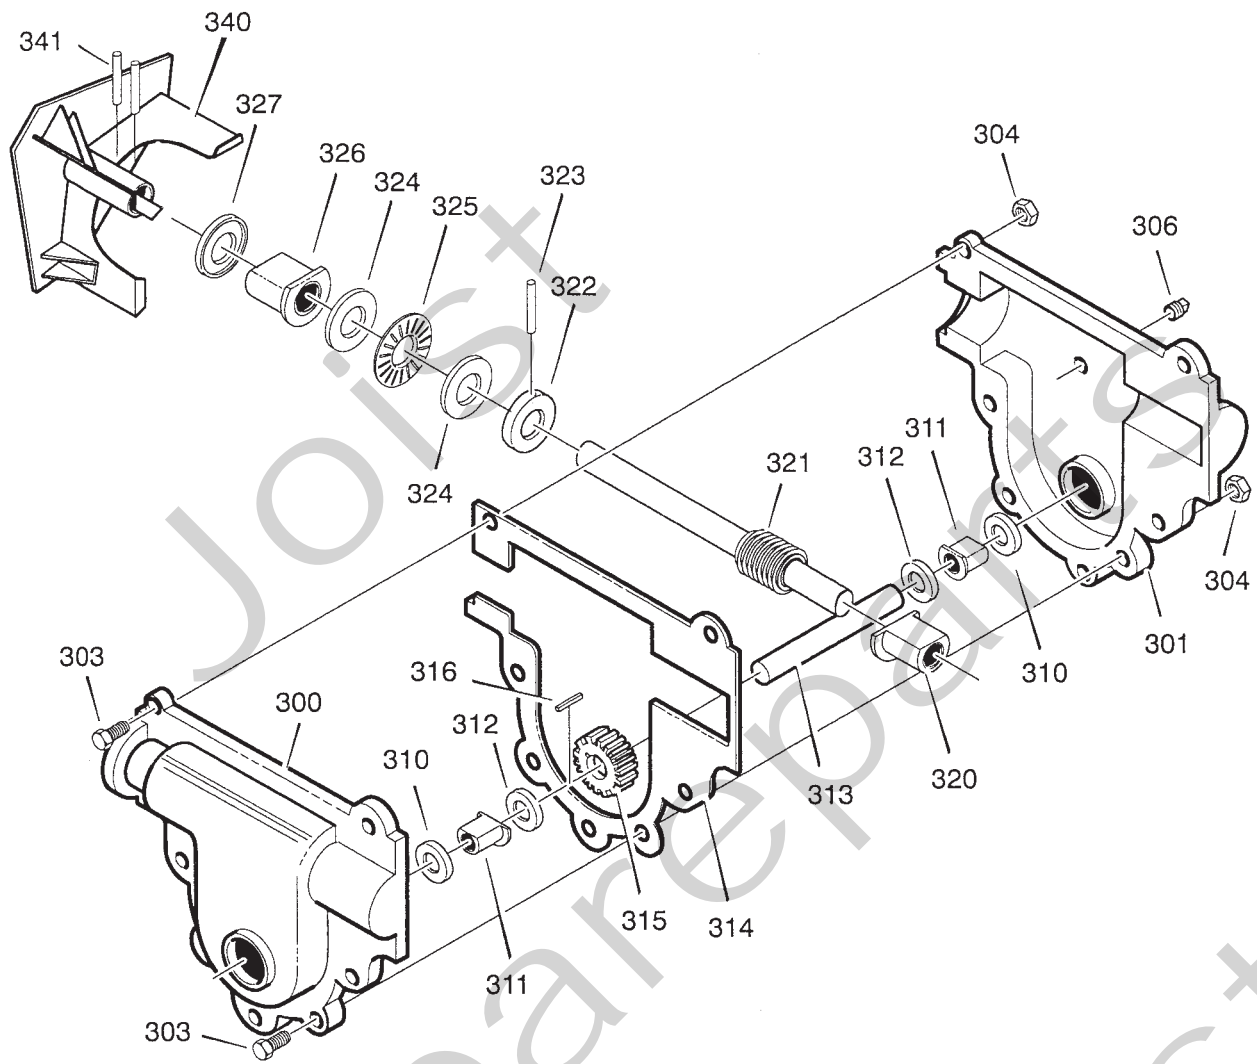

Utgåva Issue 2005-14		Bildnr Picture No 1323B		SNOW STORM SNOW BLIZZARD SNÄCKVÄXEL		SNOW STORM SNOW BLIZZARD GEAR CASE		Sida Page 50	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830							
300	1	1		1812-0909-01	Snäckväxelhus- hö	Gear case- RH			
301	1	1		1812-0908-01	Snäckväxelhus- vä	Gear case- LH			
303	7	7		9988-3519-16	Skruv	Screw			
304	7	7		1812-1758-01	Mutter	Nut			
306	1	1		1812-0856-01	Skruv	Screw			
310	2	2		1812-0881-01	Tätningring	Oil seal			
311	2	2		1812-1360-01	Flänslager	Flange bearing			
312	2	2		1812-0857-01	Bricka	Thrust washer			
313	1			1812-1852-01	Snöskruvaxel	Auger shaft			
X 313		1		1812-2086-01	Snöskruvaxel	Auger shaft			
314	1	1		1812-1361-01	Packning	Gasket			
315	1	1		1812-0862-01	Snäckdrev	Worm gear			
316	1	1		1812-1371-01	Kil	Woodruff key			
320	1	1		1812-1359-01	Bussning	Bushing			
321	1	1		1812-1853-01	Ingående axel	Input shaft			
322	1	1		1812-1321-01	Distans	Thrust collar			
323	1	1		1133-0395-01	Stift	Roll pin			
324	2	2		1812-0857-01	Bricka	Thrust washer			
325	1	1		1812-0285-01	Nållager	Needle bearing			
326	1	1		1812-1360-01	Flänslager	Flange bearing			
327	1	1		1812-0881-01	Tätningring	Oil seal			
340	1	1		1812-1851-01	Fläkt	Impeller			
341	2	2		1133-0395-01	Stift	Roll pin			

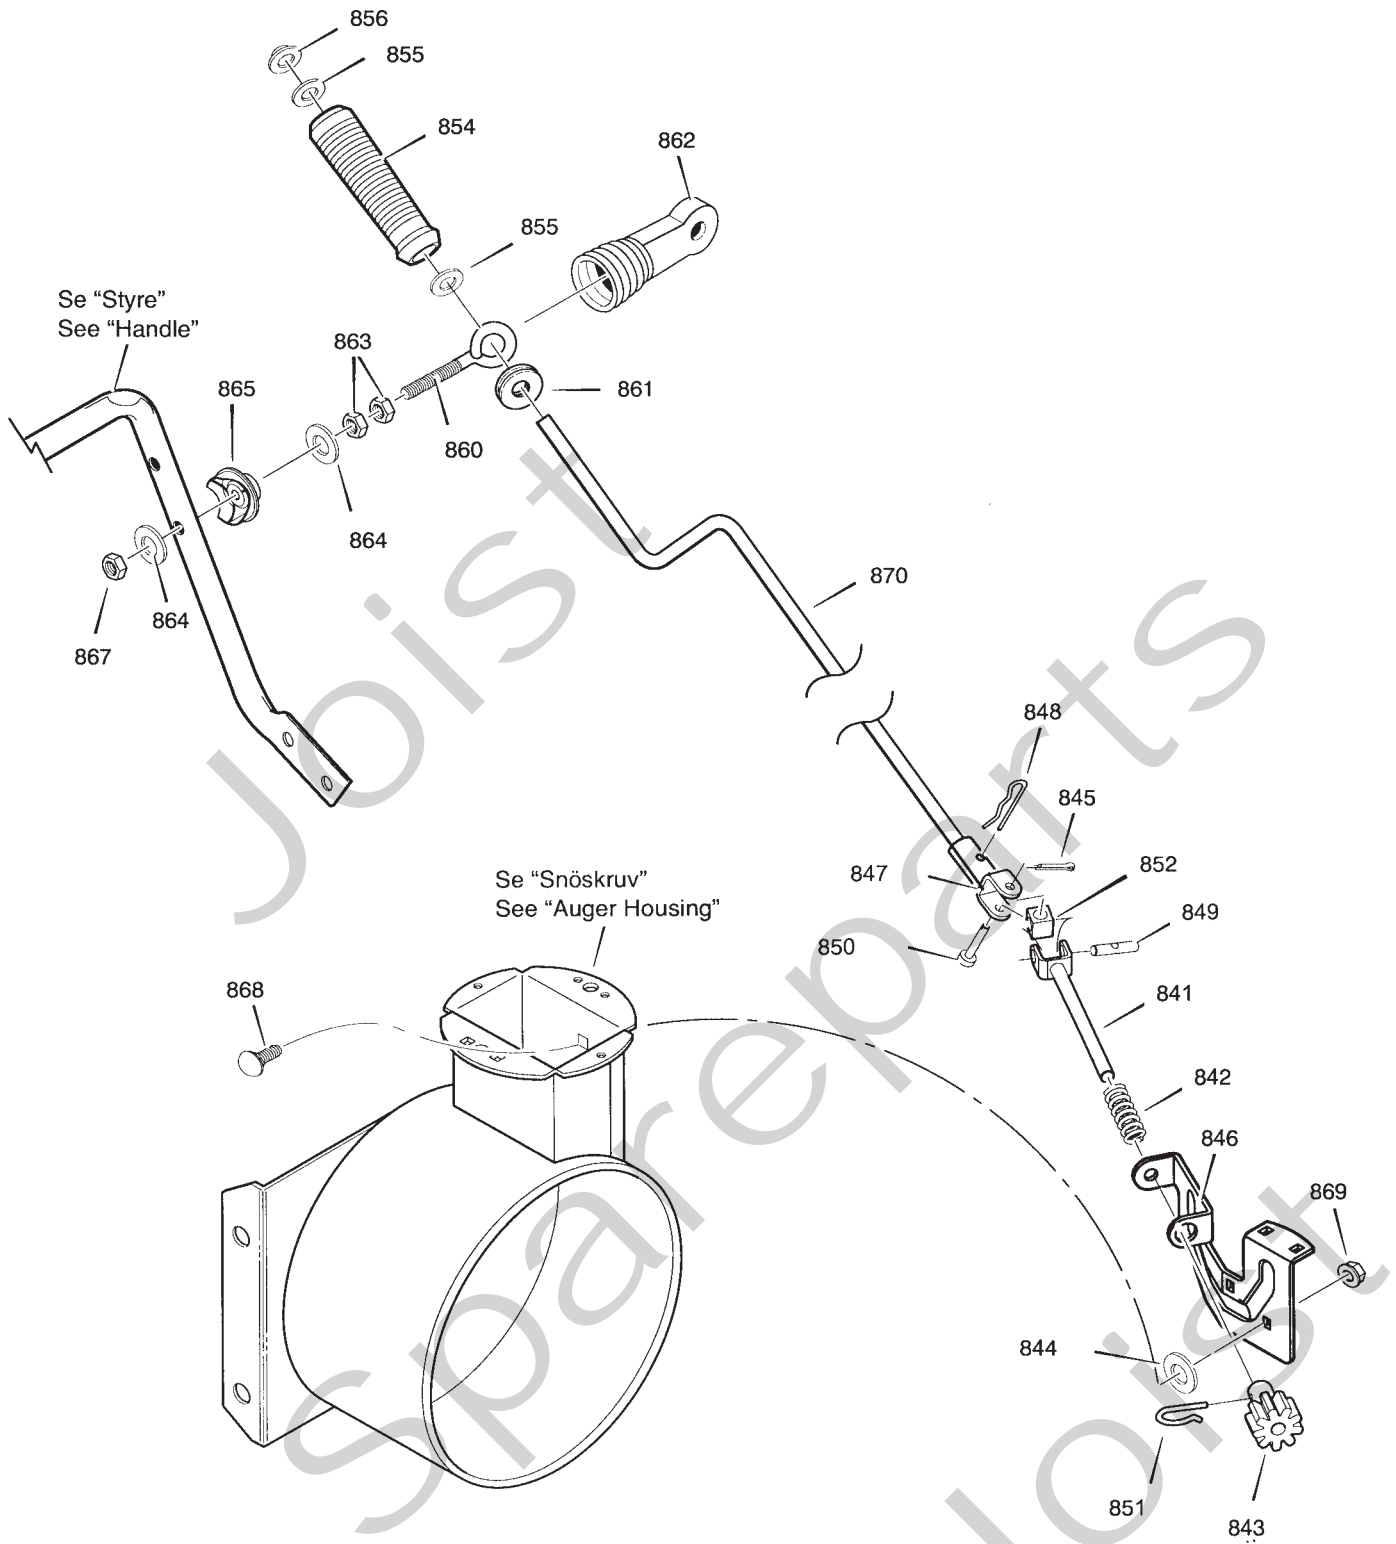

Utgåva Issue		Bildnr Picture No		SNOW STORM SNOW BLIZZARD INSTÄLLNINGSVEV	SNOW STORM SNOW BLIZZARD CHUTE ROD	Sida Page	
2005- 14		1535C				52	
Pos. Fig.	Antal/Quantity		Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2827	2830					
841	1	1	1812-1826-01	Gaffelstång	Yoke and rod		
842	1	1	1812-1761-01	Fjäder.....	Spring		
843	1	1	1812-1706-01	Drev.....	Gear		9T
844	1		1812-1677-01	Bricka	Washer.....		
845	1	1	9599-0033-00	Saxsprint	Split pin.....		
846	1	1	1812-1793-01	Fäste	Bracket.....		
847	1	1	1812-1708-01	Gaffel.....	Yoke adapter		
848	1	1	1812-1511-01	Låsstift.....	Hair pin		
849	1	1	1812-1316-01	Axel	Universal pin		
850	1	1	1812-1318-01	Sprint.....	Clevis pin		
851	1	1	1812-1791-01	Låsnål	Hair pin		
852	1	1	1812-1317-01	Ledknut	Universal pivot block.....		
854	1	1	1812-1168-01	Handtag	Handle		
855	2	2	1812-1171-01	Bricka	Washer.....		
856	1	1	1812-1483-01	Låsning.....	Retainer		
860		1	1812-0394-01	Öglebult.....	Eyebolt		L = 6.0"
860	1		1812-1821-01	Öglebult.....	Eye bolt		L = 6.5"
861	1	1	1812-0203-01	Hylsa	Grommet.....		
862		1	1812-1170-01	Hylsa-öglebult.....	Boot-eye bolt		
862	1		1812-1822-01	Hylsa-öglebult.....	Boot-eye bolt		
863	2	2	9743-3721-32	Mutter.....	Nut		
864	2	2	9699-0035-02	Planbricka.....	Flat washer.....		
865	1	1	1812-1172-01	Adapter.....	Boot adaptor		
867	1	1	9743-3721-32	Mutter.....	Nut		
868	1	1	1812-1831-01	Skruv	Screw		
869	1	1	1812-1760-01	Mutter	Nut		
870	1	1	1812-1707-01	Inställningsvev.....	Chute crank.....		

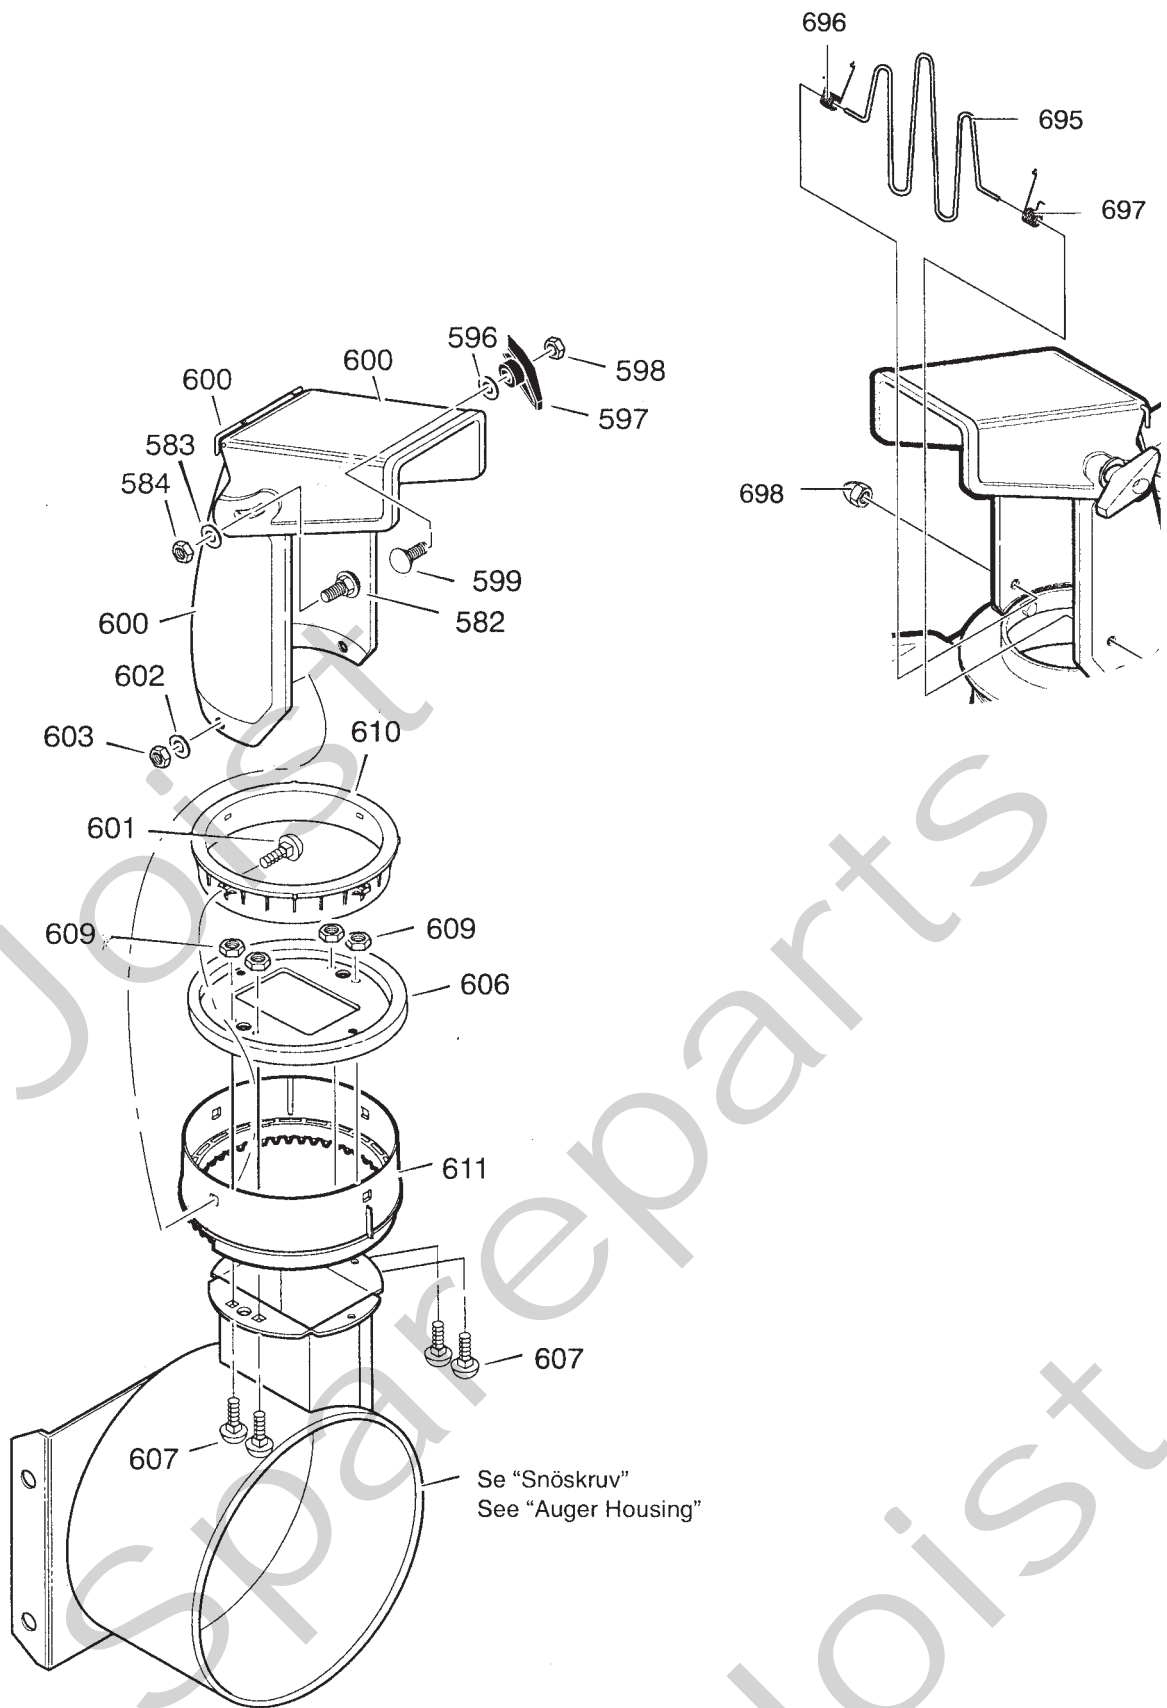

Utgåva Issue 2005-14		Bildnr Picture No 1780		SNOW STORM SNOW BLIZZARD UTKAST		SNOW STORM SNOW BLIZZARD DISCHARGE CHUTE		Sida Page 54	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830							
582	1	1		9899-3625-16	Skruv	Screw			
583	1	1		9699-0029-02	Planbricka	Flat washer			
584	1	1		9743-3621-32	Mutter	Nut			
596	1	1		9699-0029-02	Planbricka	Flat washer			
597	1	1		1133-0932-01	Låsraff	T- knob			
598	1	1		1812-1759-01	Mutter	Nut			
599	1	1		1812-1678-01	Vagnsbult	Carriage bolt			
600	1	1		1812-2074-01	Utkast kpl	Chute assy			
601	3	3		9899-3625-16	Skruv	Screw			
602	3	3		9699-0029-02	Planbricka	Flat washer			
603	3	3		9743-3621-32	Mutter	Nut			
606	1	1		1812-1983-01	Utkastplatta	Chute rotate collar			
607	4	4		1812-1831-01	Skruv	Screw			
609	4	4		1812-1760-01	Mutter	Nut			
610	1	1		1812-1366-01	Utkastring- inre	Chute rot. ring- inner			
611	1	1		1812-1787-01	Utkastring- yttre	Retainer ring- outer			
695	1	1		1133-0970-01	Utkastskydd	Wire chute guide			
696	1	1		1133-0944-01	Fjäder	Torsion chute spring			
697	1	1		1133-0945-01	Fjäder	Torsion chute spring			
698	2	2		1133-0937-01	Hattlåsning	Acorn nut			

X

Joist Spareparts Joist