

# Genuine Spare Parts

www.stiga.com

## SNOW STORM-BLIZZARD-HURRICANE Model Year 2003/04

includes:


- 18-2827-24 Snow Storm
- 18-2830-24 Snow Blizzard
- 18-2840-24 Snow Hurricane

- Use GLOBAL GARDEN PRODUCT Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative and might not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair and/or replacement, make sure that the illustrated parts list is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

COPYRIGHT by GLOBAL GARDEN PRODUCTS


All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from GLOBAL GARDEN PRODUCTS.

**STIGA**®



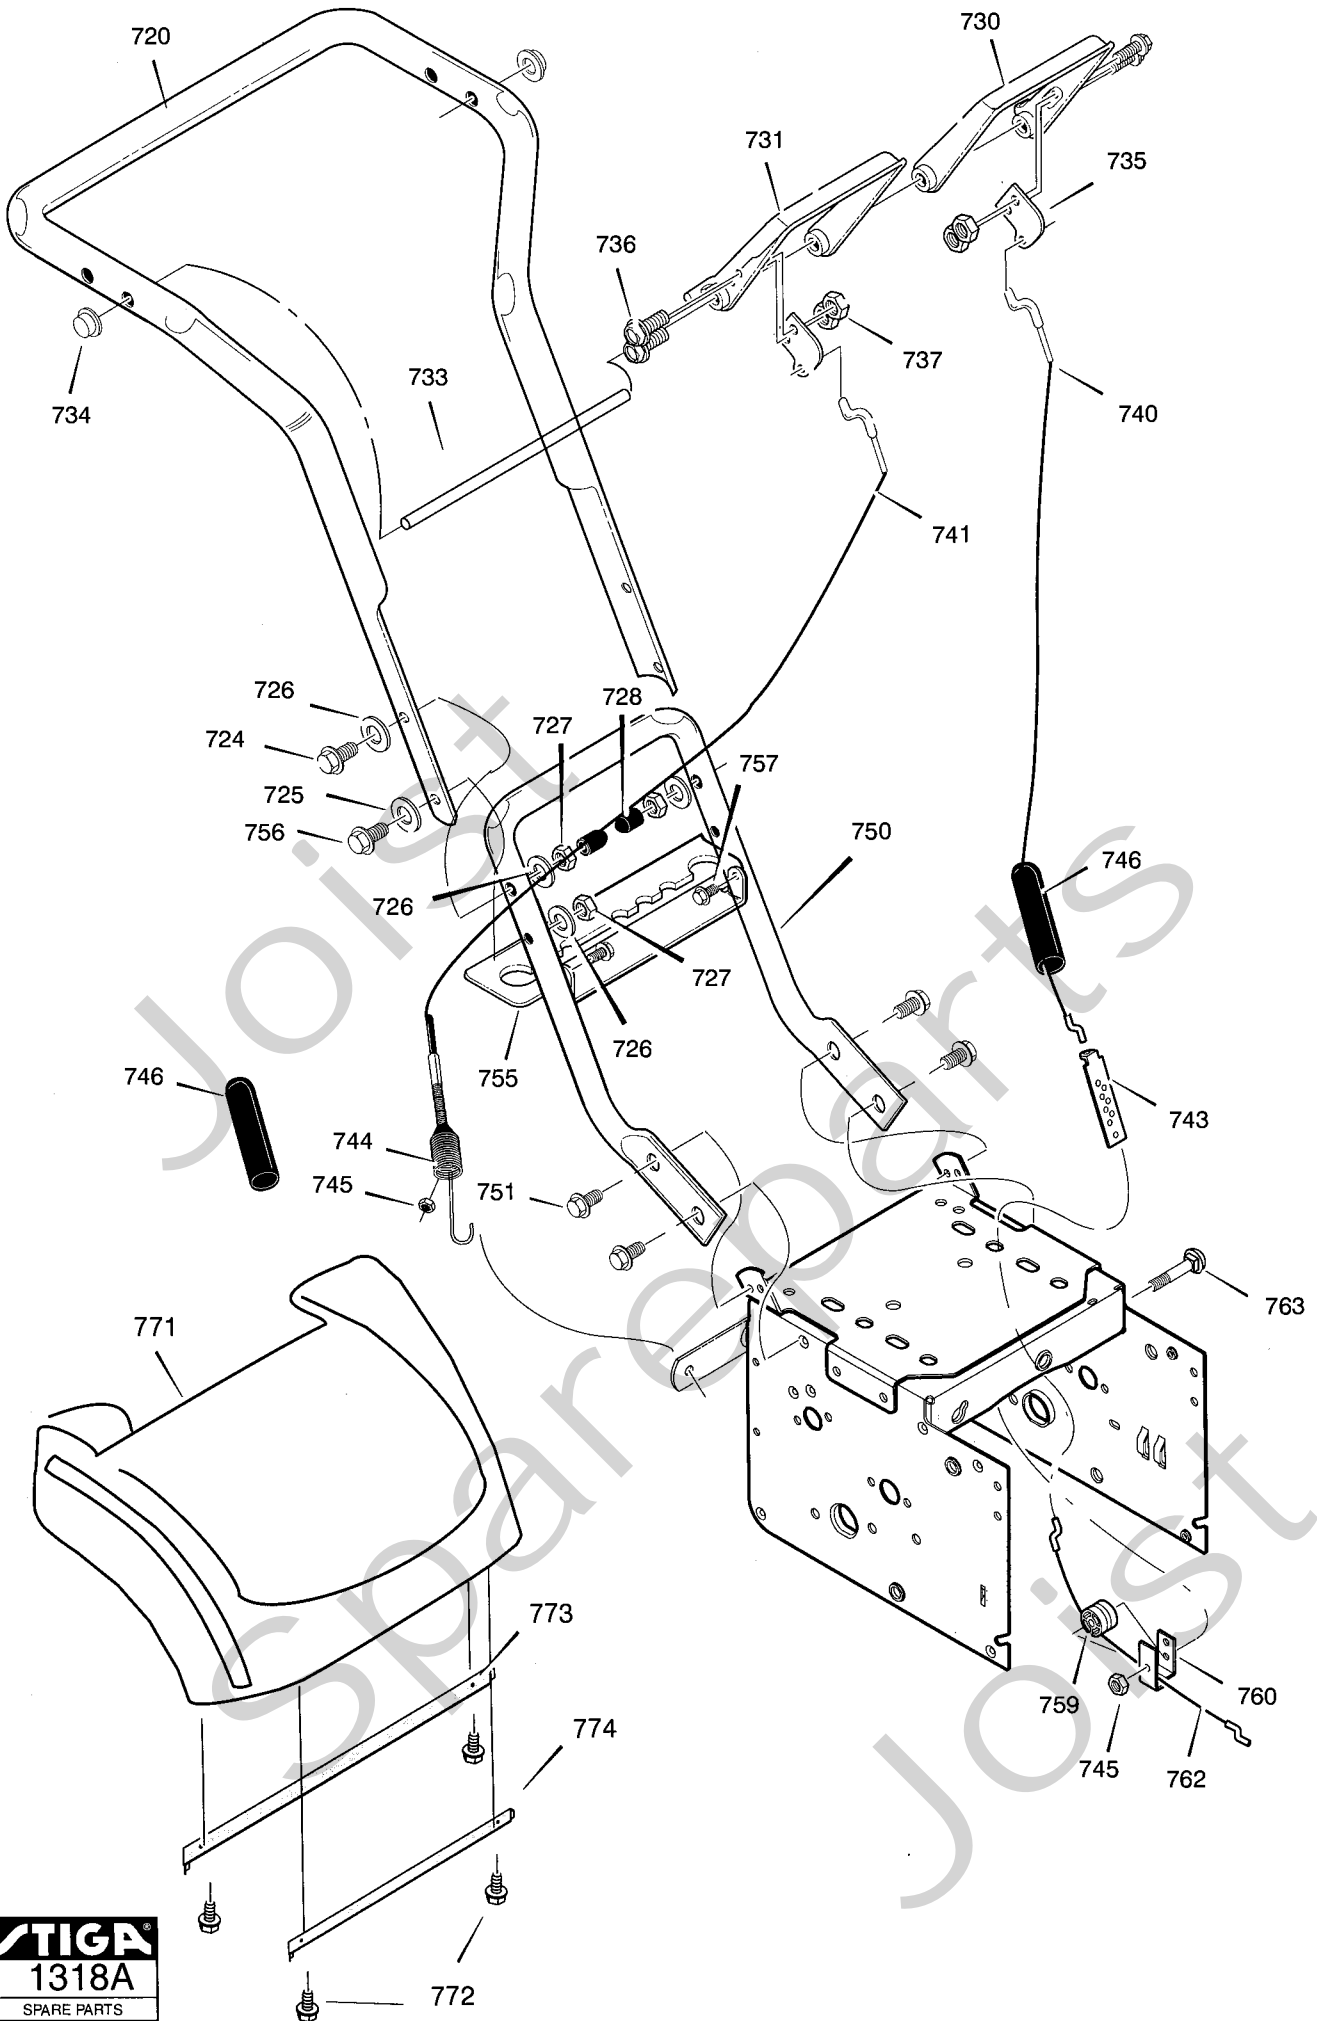


**STIGA**  
**1318A**  
 SPARE PARTS

Utgåva Issue 2003-59		Bildnr Picture No 1318A		SNOW STORM SNOW BLIZZARD SNOW HURRICANE STYRE		SNOW STORM SNOW BLIZZARD SNOW HURRICANE HANDLE		Sida Page 32	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830	2840						
X 720	1	1	1	1812-1395-01	Styre- överdel .....	Handle- upper.....			
724	2	2	2	9988-3670-12	Skruv .....	Screw .....			
725	2	2	2	9699-0029-02	Planbricka.....	Flat washer.....			
726	6	6	6	9683-0030-02	Låsbricka .....	Lock washer.....			
727	4	4	4	1812-1759-01	Mutter.....	Nut .....			
728	2	2	2	1812-0941-01	Plastknopp.....	Plastic stop .....			
730		1	1	1812-0932-01	Kopplingshandtag- vä .....	Clutch handle- L.H.....			
X 730	1			1812-1836-01	Kopplingshandtag- sats .....	Clutch handle- kit .....			
X 731		1	1	1812-0933-01	Kopplingshandtag- hö .....	Clutch handle- R.H.....			
731	1			1812-1836-01	Kopplingshandtag- sats .....	Clutch handle- kit .....			
733	1	1	1	1812-0934-01	Handtagsaxel .....	Clutch handle rod.....			
734	2	2	2	1812-0513-01	Låsning.....	Retainer .....			
735	2	2	2	1812-0946-01	Wirefäste .....	Cable pivot plate.....			
736	4	4	4	9988-3525-16	Skruv .....	Screw .....			
737	4	4	4	1812-0812-01	Låsmutter .....	Locking nut .....			
740	1	1	1	1812-1728-01	Kopplingswire.....	Clutch cable .....			
741	1	1	1	1812-1518-01	Reglagewire.....	Control wire .....			
743	1	1	1	1133-0977-01	Wirefäste .....	Cable adjust bracket.....			
744	1	1	1	1812-0254-01	Fjäder.....	Spring .....			
745	2	2	2	1812-1760-01	Mutter .....	Nut .....			
746	2	2	2	1133-0968-01	Wirehylsa.....	Clutch spring boot .....			
750	1	1	1	1812-1323-01	Styre- underdel .....	Handle- lower .....			
X 751	4	4	4	1812-1833-01	Skruv .....	Screw .....			
755	1	1	1	1812-1398-01	Växelväljarplåt .....	Gear selector plate .....			
756	2	2	2	9988-3651-12	Skruv .....	Screw .....			
757	2	2	2	9988-3516-16	Skruv .....	Screw .....			
759	1	1	1	1812-1205-01	Spole .....	Spool .....			
760	1	1	1	1812-1702-01	Fäste .....	Bracket.....			
762	1	1	1	1812-1727-01	Reglagewire- nedre.....	Drive cable-lower .....			
763	1	1	1	1812-1772-01	Skruv .....	Screw .....			
X 771	1	1	1	1812-1870-01	Panel .....	Panel .....			
772	4	4	4	1812-1394-01	Skruv .....	Screw .....			
X 773	1	1	1	1812-1869-01	Fäste- övre .....	Bracket- top.....			
X 774	1	1	1	1812-1868-01	Fäste- undre.....	Bracket- bottom .....			
X 998	1	1	1	8218-2201-11	Bruksanvisning .....	Owner's manual .....		Ej ill/not ill.	
X 999		1	1	1812-1873-01	Tbh- påse.....	Parts bag.....		Ej ill/not ill.	
X 999	1			1812-1877-01	Tbh- påse.....	Parts bag.....		Ej ill/not ill.	

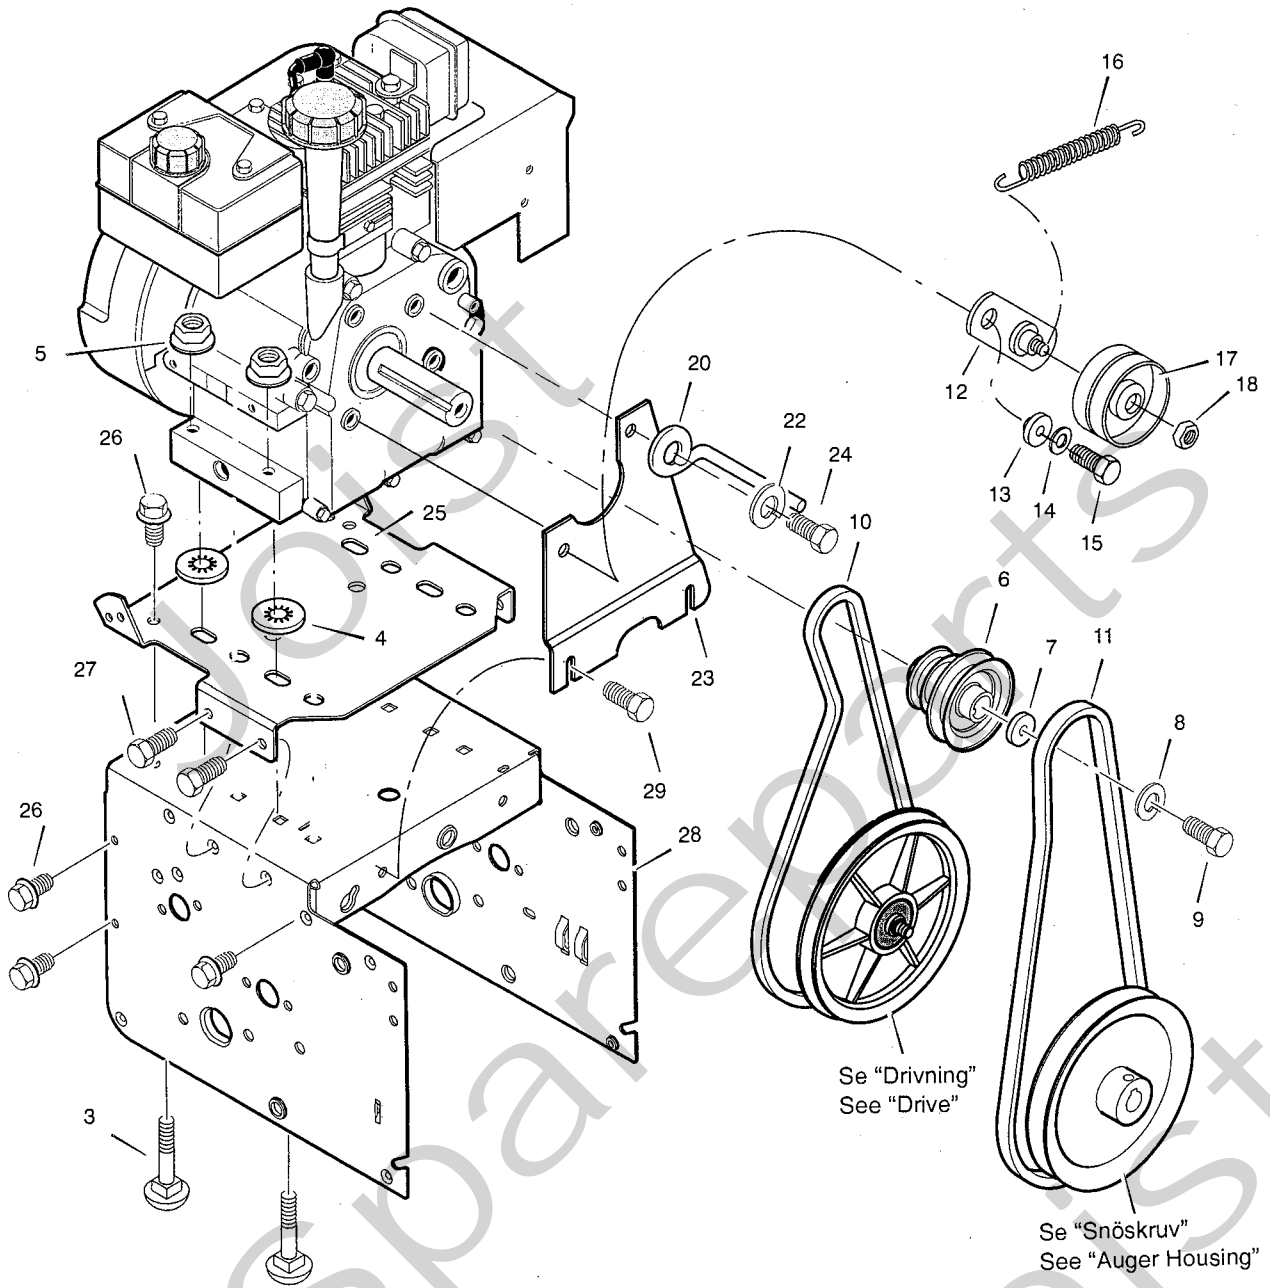


Utgåva Issue		Bildnr Picture No		SNOW STORM SNOW BLIZZARD SNOW HURRICANE MOTOR		SNOW STORM SNOW BLIZZARD SNOW HURRICANE ENGINE		Sida Page	
2003-59		1314B						34	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830	2840						
	3	4	4	1812-1678-01	Vagnsbult .....	Carriage bolt .....			
	4	4	4	1812-1681-01	Hållare .....	Retainer .....			
	5	4	4	9795-3631-02	Mutter .....	Nut .....			
	6	1	1	1812-1719-01	Motorremskiva .....	Engine pulley .....			
	7	1	1	1812-1691-01	Bricka .....	Washer .....			
	8	1	1	9683-0035-02	Låsbricka .....	Lock washer .....			
	9	1	1	1133-0762-01	Skruv .....	Screw .....			
	10	1	1	1812-9016-01	Drivrem .....	Drive belt .....			
	11	1	1	1812-9020-01	Drivrem .....	Drive belt .....			
	12	1	1	1812-1722-01	Spännrullsfäste .....	Idler bracket .....			
	13	1	1	1812-1705-01	Bussning .....	Bushing .....			
	14	1	1	9683-0030-02	Låsbricka .....	Lock washer .....			
	15	1		9987-5119-16	Skruv .....	Screw .....		L = 19 mm	
	15		1	9987-5125-16	Skruv .....	Screw .....		L = 25 mm	
	16	1		1812-0329-01	Fjäder .....	Spring .....			
X	16		1	1812-1830-01	Fjäder .....	Spring .....			
	17	1	1	1812-0305-01	Spännrulle .....	Tension roller .....			
	18	1	1	9743-3721-32	Mutter .....	Nut .....			
	20	1	1	1812-1742-01	Remstyrning .....	Belt guide .....			
	22	1	1	9683-0030-02	Låsbricka .....	Lock washer .....			
	23		1	1812-1824-01	Anti-vibrationsplatta .....	Anti-vibration plate .....			
	24	1		9987-5119-16	Skruv .....	Screw .....		L = 19 mm	
	24		1	9987-5125-16	Skruv .....	Screw .....		L = 25 mm	
	25	1	1	1812-1703-01	Motorplatta .....	Engine mount plate .....			
	26	6	6	9988-3516-16	Skruv .....	Screw .....			
X	27	4	4	1812-1832-01	Skruv .....	Screw .....			
	28	1	1	1812-1695-01	Motorchassi .....	Engine box frame .....			
	29		1	1812-1768-01	Skruv .....	Screw .....			

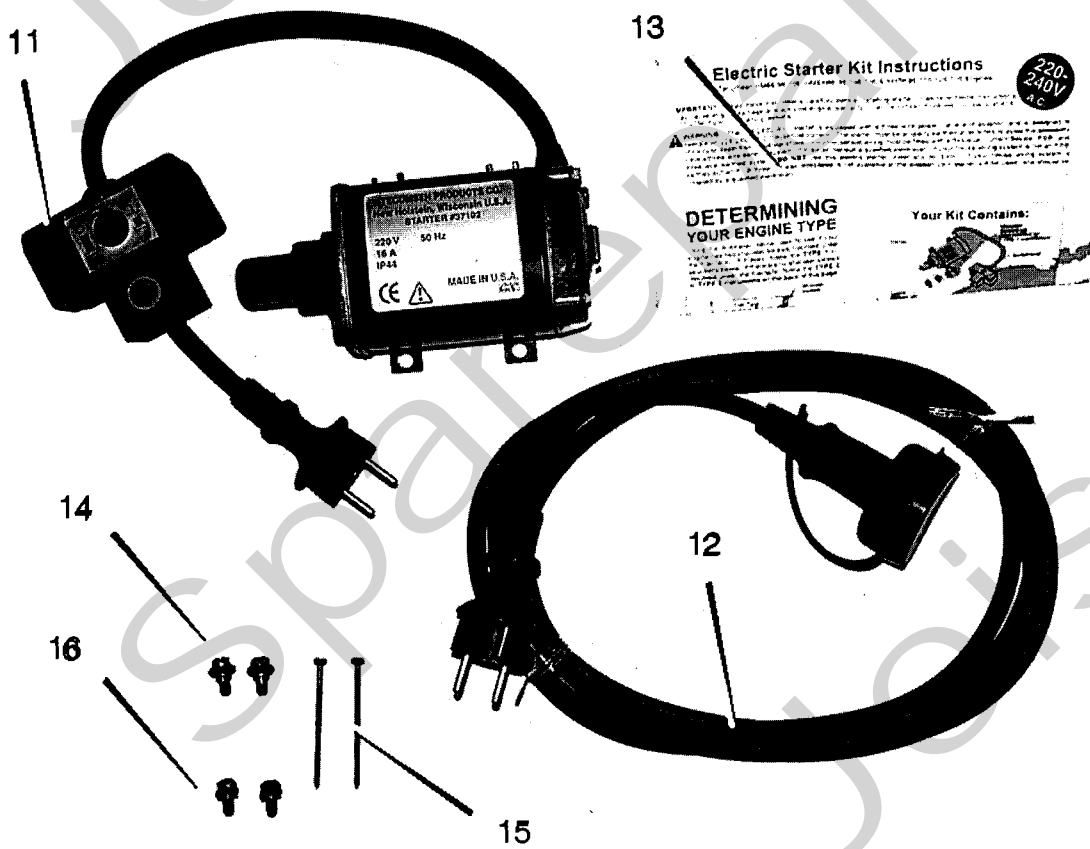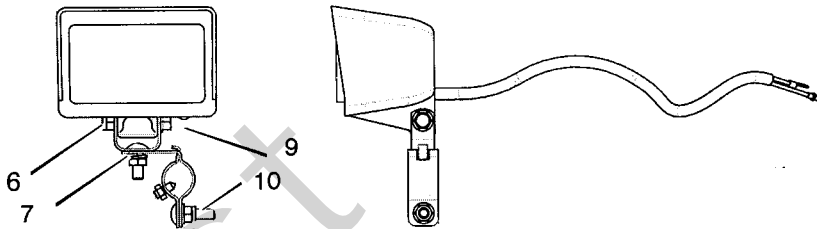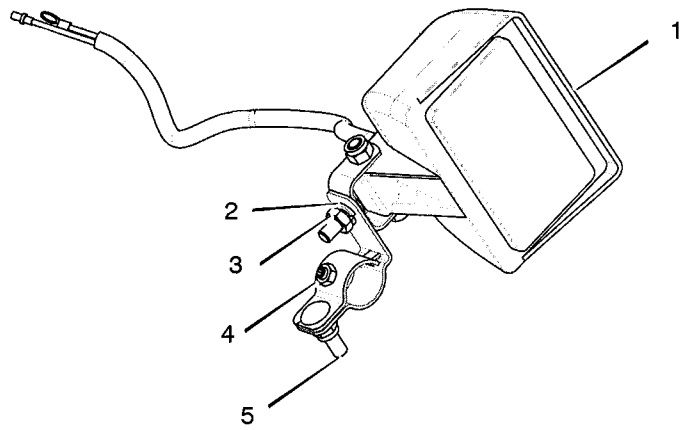


Utgåva Issue 2003-59		Bildnr Picture No 1634		SNOW BLIZZARD SNOW HURRICANE STRÅLKASTARE EL. START		SNOW BLIZZARD SNOW HURRICANE HEADLIGHT EL. STARTER		Sida Page 36	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2830	2840							
X	1	1	1		1812-1872-01	Strålkastare kpl.....	Headlight assy.....		
	2	1	1		9683-0030-02	• Låsbricka.....	• Lock washer.....		
	3	1	1		9795-3631-02	• Mutter.....	• Nut.....		
	4	1	1		9795-3531-02	• Mutter.....	• Nut.....		
	5	1	1		9899-3632-12	• Skruv.....	• Screw.....		
	6	1	1		9743-3621-32	• Mutter.....	• Nut.....		
	7	1	1		9899-3625-16	• Skruv.....	• Screw.....		
	9	1	1		9988-3651-12	• Skruv.....	• Screw.....		
	10	1	1		9743-3621-32	• Mutter.....	• Nut.....		
	11	1	1		37102	Startmotor kpl.....	Starter motor assy.....		Tecumseh
	12	1	1		1812-1615-01	Förlängningssladd.....	Extension cord.....		
X	13	1	1		1812-1846-01	Mont. anvisning.....	Assy instruction.....		
	14	2	2		1812-1356-01	Skruv.....	Screw.....		
	15	2	2		1812-1357-01	Skruv.....	Screw.....		
X	16	2	2		1812-1845-01	Ansatsskruv.....	Shoulder screw.....		

# Snow Storm

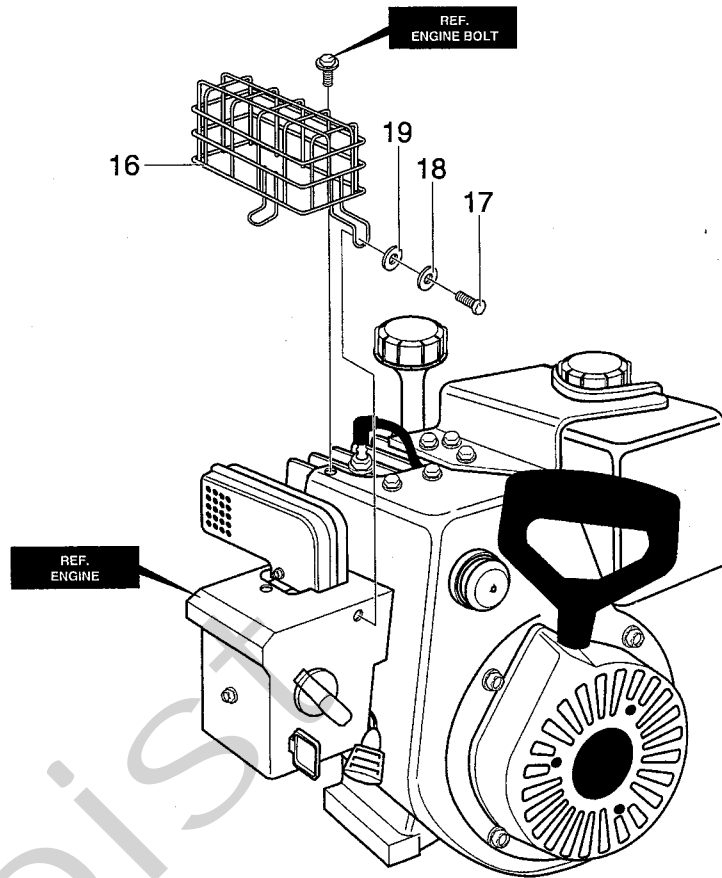


# Snow Blizzard - Snow Hurricane

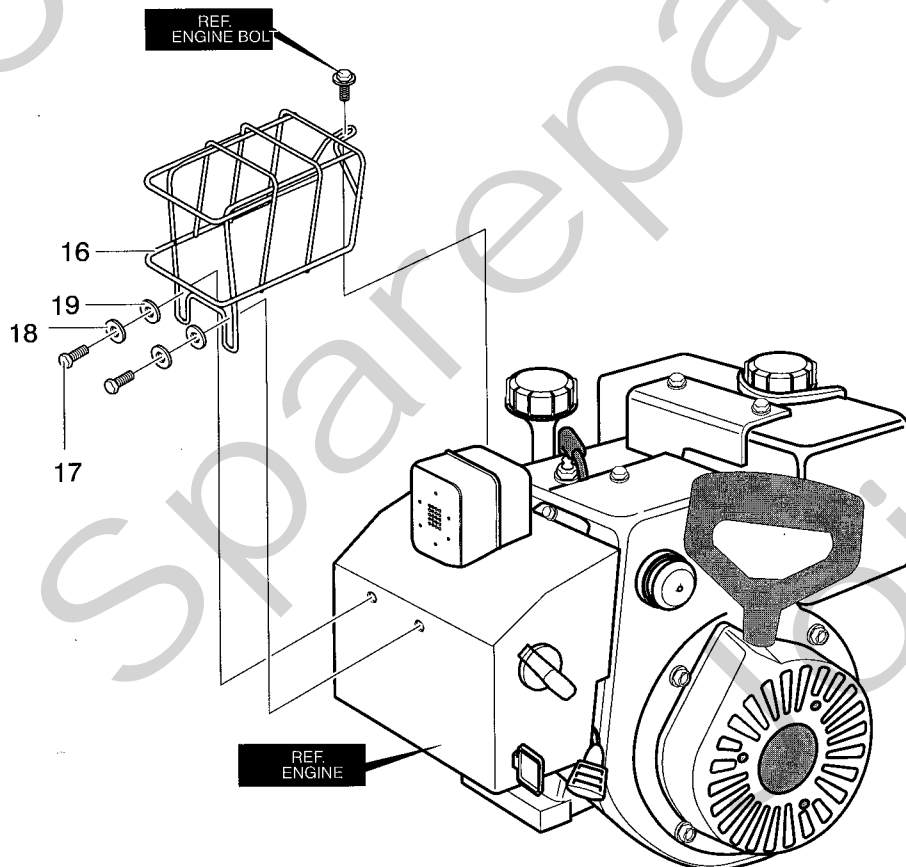





Utgåva Issue 2003-59		Bildnr Picture No 1321A		SNOW STORM SNOW BLIZZARD SNOW HURRICANE LJUDDÄMPARSKYDD		SNOW STORM SNOW BLIZZARD SNOW HURRICANE MUFFLER GUARD		Sida Page 38	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830	2840						
16		1	1	1812-1385-01	Ljuddämparskydd.....	Muffler guard.....			
16	1			1812-1415-01	Ljuddämparskydd.....	Muffler guard.....			
17	2	2	2	1812-1386-01	Skruv.....	Screw.....			
18	2	2	2	1812-1388-01	Bricka.....	Washer.....			
19	2	2	2	1812-1387-01	Planbricka.....	Flat washer.....			

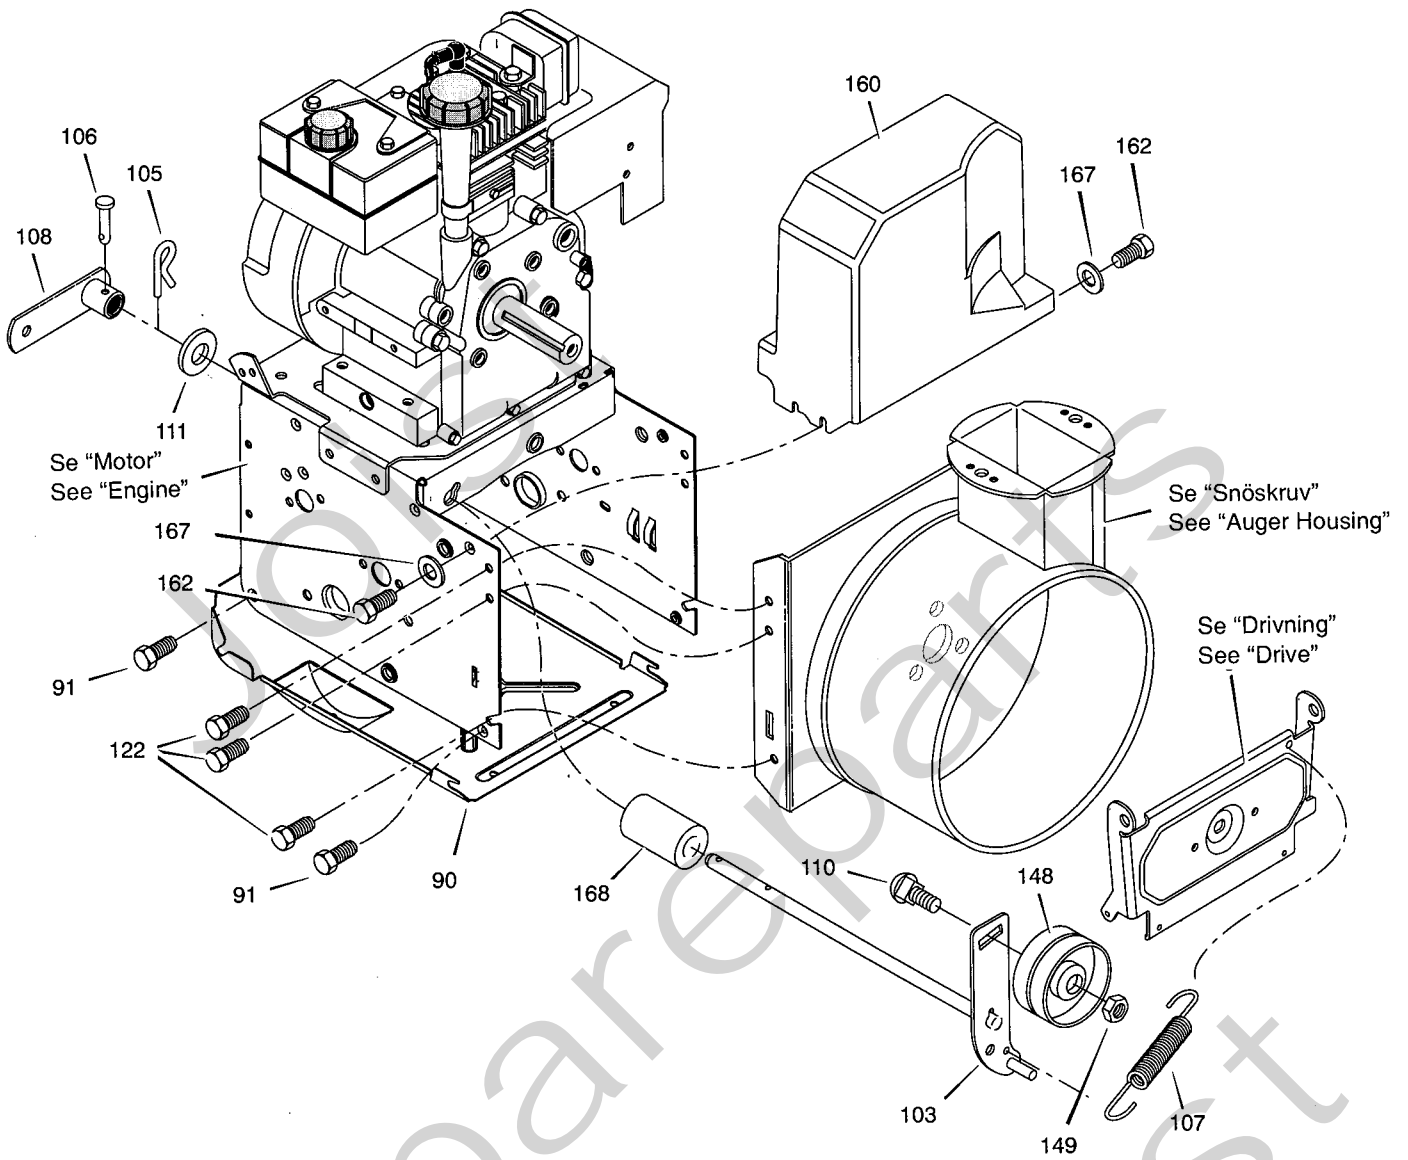


Utgåva Issue 2003-59		Bildnr Picture No 1315A		SNOW STORM SNOW BLIZZARD SNOW HURRICANE RAM		SNOW STORM SNOW BLIZZARD SNOW HURRICANE FRAME		Sida Page 40	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830	2840						
90	1	1	1	1812-1700-01	Bottenplåt .....	Bottom cover .....			
91	4	4	4	9988-3516-16	Skruv .....	Screw .....			
103	1	1	1	1812-1747-01	Spännarm .....	Idler .....			
105	1	1	1	1812-1511-01	Låsstift .....	Hair pin .....			
106	1	1	1	1812-1533-01	Pinne .....	Klik pin .....			
107	1	1	1	1812-1676-01	Fjäder .....	Tension spring .....			
108	1	1	1	1812-1693-01	Fjäderfäste .....	Spring attachment .....			
110	1	1	1	9899-3732-16	Skruv .....	Screw .....			
111	1	1	1	1812-1509-01	Planbricka .....	Flat washer .....			
122	6	6	6	1812-0385-01	Skruv .....	Screw .....			
148	1	1	1	1812-0305-01	Spännrulle .....	Tension roller .....			
149	1	1	1	9743-3721-32	Mutter .....	Nut .....			
160	1	1	1	1812-1698-01	Remskydd .....	Belt cover .....			
162	4	4	4	1812-1680-01	Skruv .....	Screw .....			
167	4	4	4	9699-0028-02	Planbricka .....	Flat washer .....			
168	1	1	1	1812-1741-01	Distans .....	Spacer .....			

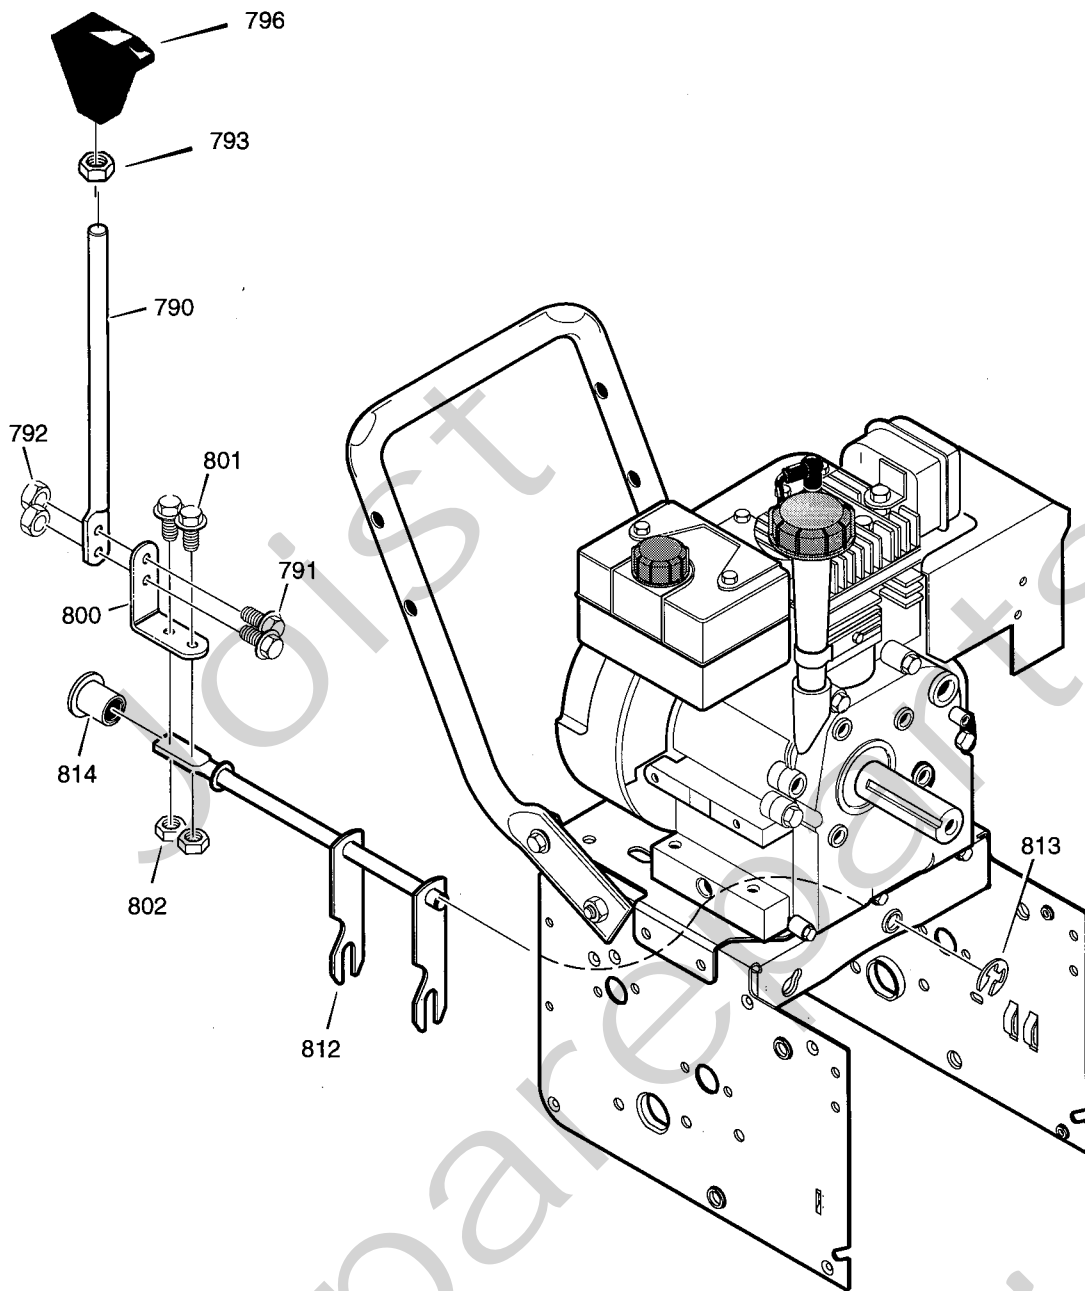

Utgåva Issue		Bildnr Picture No		SNOW STORM SNOW BLIZZARD SNOW HURRICANE VÄXELSPAK		SNOW STORM SNOW BLIZZARD SNOW HURRICANE SHIFT YOKE		Sida Page	
2003-59		1319						42	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830	2840						
790	1	1	1	1812-1420-01	Växelspak .....	Shift rod .....			
791	2	2	2	9988-3519-16	Skruv .....	Screw .....			
792	2	2	2	1812-0812-01	Låsmutter .....	Locking nut .....			
793	1	1	1	9795-3931-00	Mutter .....	Nut .....			
796	1	1	1	1812-1308-01	Reglageknopp .....	Shift knob .....			
800	1	1	1	1812-1444-01	Spakfjäder .....	Lever spring .....			
801	2	2	2	9988-3519-16	Skruv .....	Screw .....			
802	2	2	2	1812-0812-01	Låsmutter .....	Locking nut .....			
812	1	1	1	1812-1710-01	Växelstång .....	Shift rod .....			
813	1	1	1	1812-1672-01	Låsring .....	Retainer ring .....			
814	1	1	1	1812-1219-01	Plastbussning .....	Plastic bushing .....			

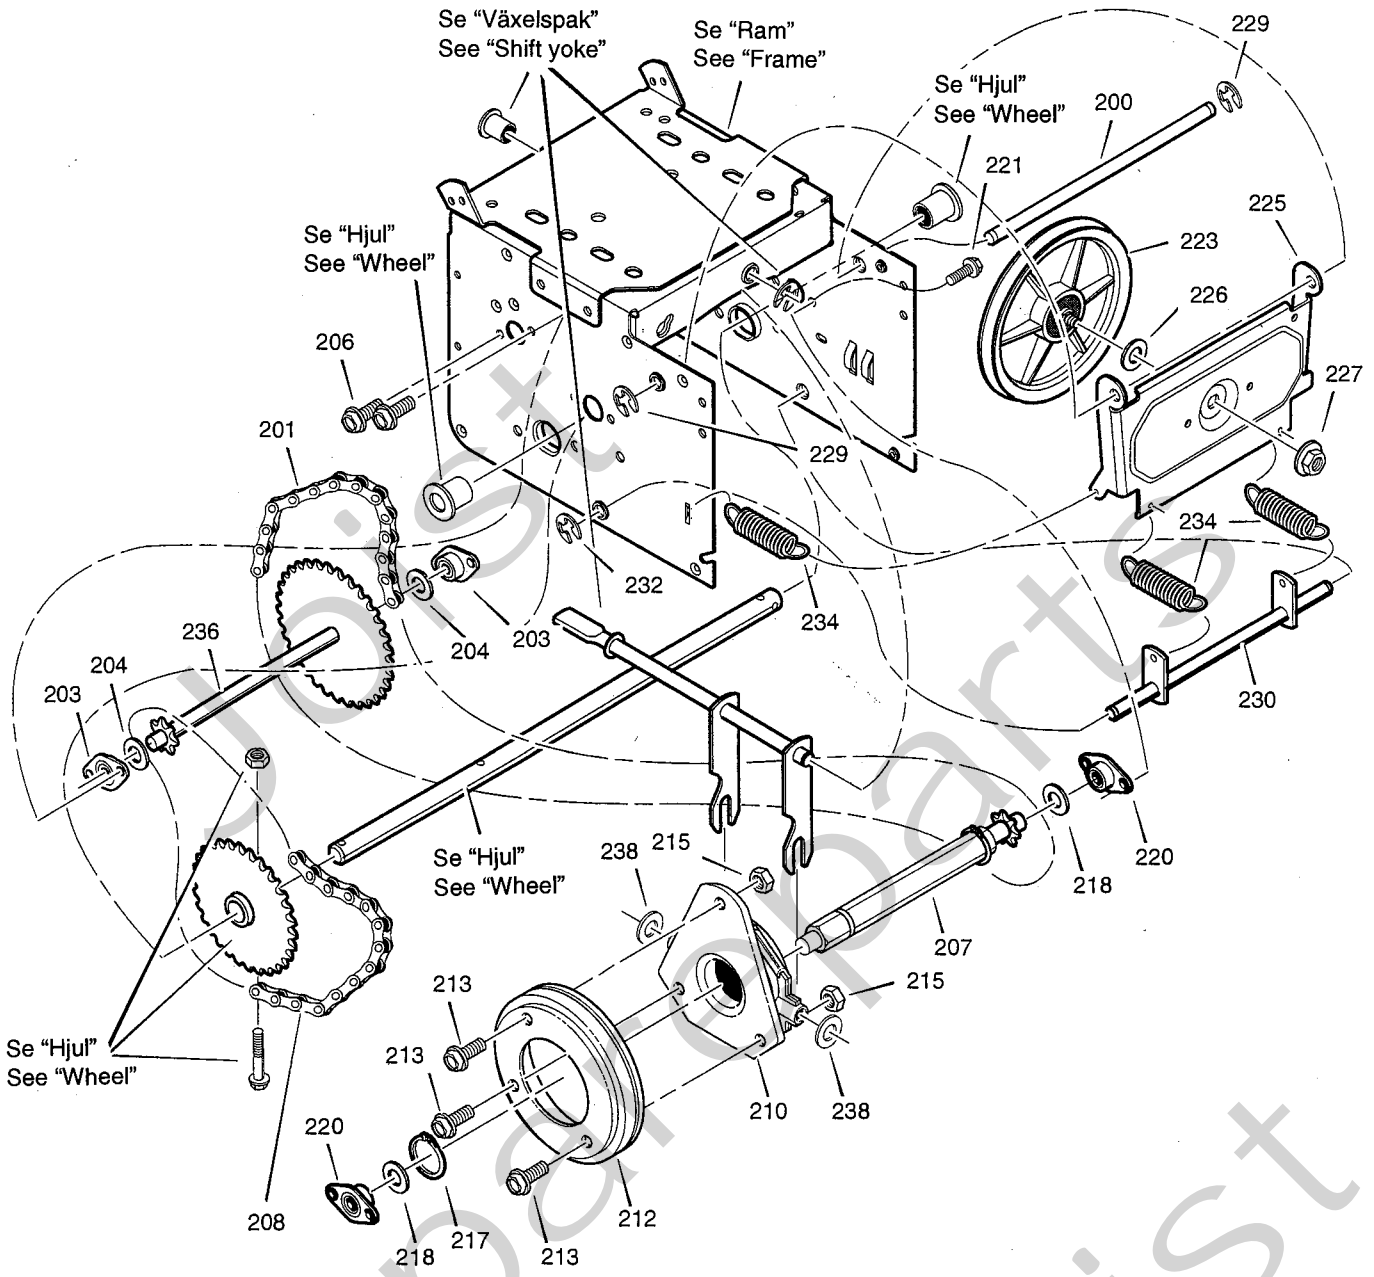


Utgåva Issue		Bildnr Picture No		SNOW STORM SNOW BLIZZARD SNOW HURRICANE DRIVING		SNOW STORM SNOW BLIZZARD SNOW HURRICANE DRIVE		Sida Page	
2003-59		1316						44	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830	2840						
200	1	1	1	1812-1713-01	Axel- svängplatta .....	Axle- swing plate .....			
201	1	1	1	1812-1686-01	Kedja .....	Chain .....			
203	2	2	2	1812-1178-01	Glidlager m.hållare.....	Bearing & retainer .....			
204	2	2	2	1812-1204-01	Bricka .....	Washer .....			
206	4	4	4	1812-0385-01	Skruv .....	Screw .....			
207	1	1	1	1812-1750-01	Sexkantsaxel.....	Hex shaft.....			
208	1	1	1	1812-1688-01	Kedja .....	Chain .....			
210	1	1	1	1812-1313-01	Lager .....	Trunion bearing .....			
212	1	1	1	1812-1817-01	Friktionshjul.....	Friction disc wheel .....			
213	3	3	3	9988-3516-16	Skruv .....	Screw .....			
215	3	3	3	9795-3531-02	Mutter.....	Nut .....			
217	1	1	1	1812-1687-01	Låsring .....	Retext ring .....			
218	2	2	2	1812-1204-01	Bricka .....	Washer.....			
220	2	2	2	1812-1178-01	Glidlager m.hållare.....	Bearing & retainer .....			
221	4	4	4	1812-0385-01	Skruv .....	Screw .....			
223	1	1	1	1812-1725-01	Friktionsremskiva .....	Friction pulley .....			
225	1	1	1	1812-1701-01	Svängplatta.....	Swing plate .....			
226	1	1	1	1812-1739-01	Distans .....	Spacer.....			
227	1	1	1	1812-1674-01	Flänslåsmutter .....	Flange lock nut .....			
229	2	2	2	1812-1672-01	Låsring .....	Retainer ring .....			
230	1	1	1	1812-1718-01	Fjäderlänkarm .....	Spring link.....			
232	2	2	2	1812-1672-01	Låsring .....	Retainer ring .....			
234	3	3	3	1812-1675-01	Fjäder.....	Spring .....			
236	1	1	1	1812-1751-01	Mellanaxel m.drev .....	Intermed. sprocket.....		33T/7T	
238	2	2	2	9699-0038-02	Planbricka.....	Flat washer.....			

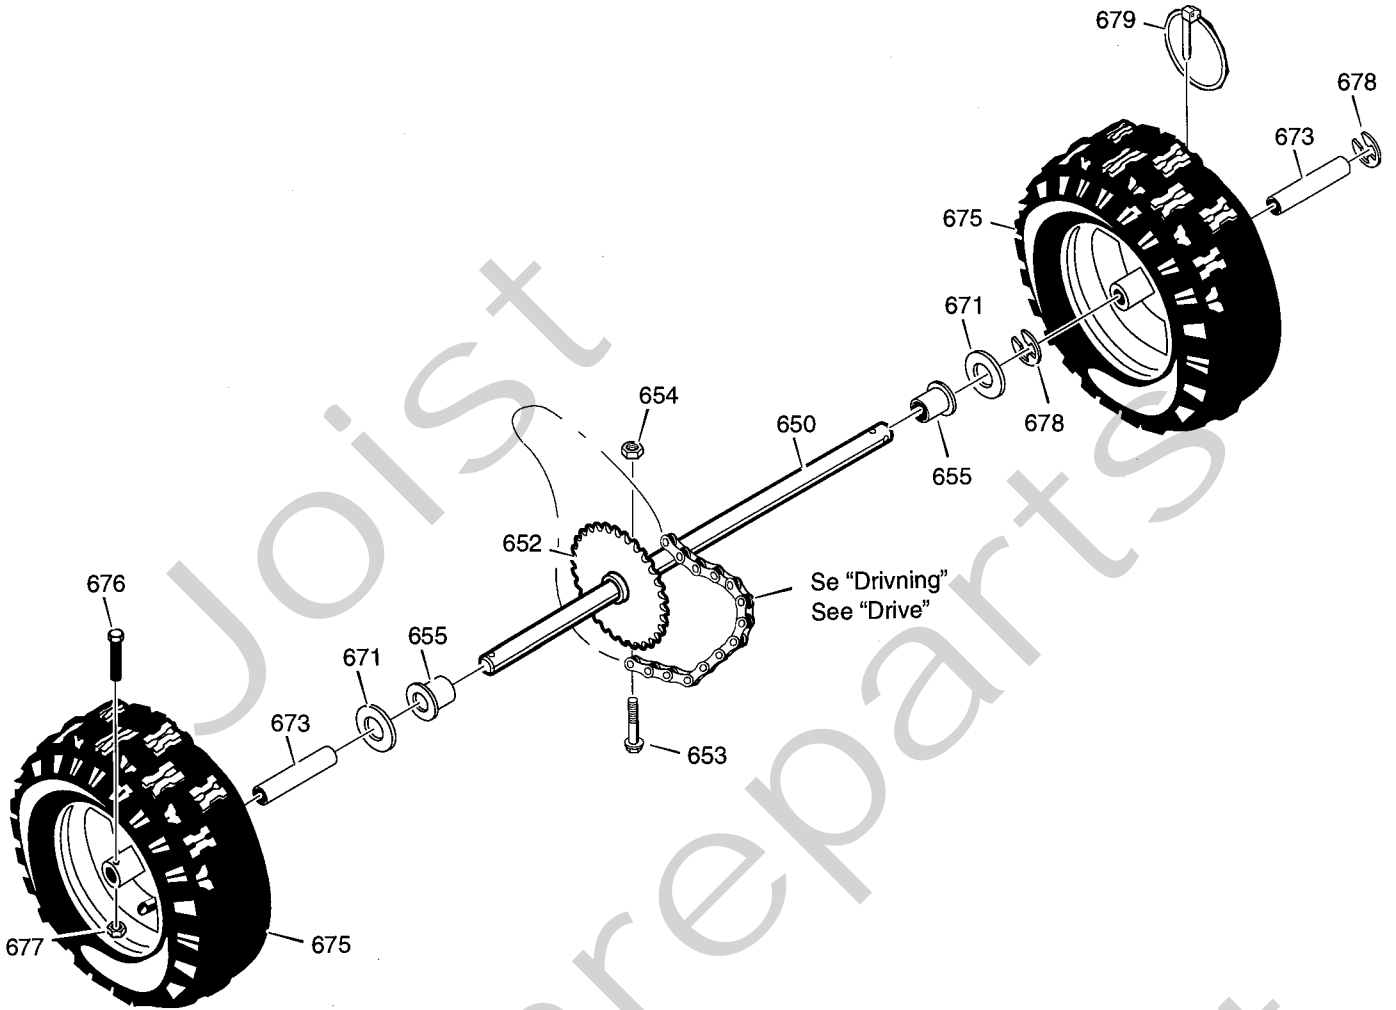




Utgåva Issue 2003-59		Bildnr Picture No 1317		SNOW STORM SNOW BLIZZARD SNOW HURRICANE HJUL		SNOW STORM SNOW BLIZZARD SNOW HURRICANE WHEELS		Sida Page 46	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830	2840						
X	650	1			1812-1862-01 Hjulaxel.....	Axle shaft.....			
X	650		1	1	1812-1863-01 Hjulaxel.....	Axle shaft.....			
	652	1	1	1	1812-1712-01 Kedjedrev.....	Sprocket.....			
	653	1	1	1	1812-1755-01 Skruv.....	Screw.....			
	654	1	1	1	1812-1760-01 Mutter.....	Nut.....			
	655	2	2	2	1812-1724-01 Lager.....	Axle bearing.....			
	671	2	2	2	1812-0407-01 Bricka.....	Washer.....			
	673		2	2	1812-1733-01 Hjulbussning.....	Wheel bushing.....			
	673	2			1812-1734-01 Hjulbussning.....	Wheel bushing.....			
	675	2			1812-1173-01 Hjul.....	Wheel.....		13 x 5.00-6	
	675		2	2	1812-1266-01 Hjul.....	Wheel.....		4.00/4.80-8 (16x4")	
	676	1	1	1	1812-1114-01 Bult.....	Bolt.....			
	677	1	1	1	1812-1760-01 Mutter.....	Nut.....			
	678	2	2	2	1812-0567-01 Låsring.....	Retaining ring.....			
	679	1	1	1	1812-0408-01 Låssprint.....	Click pin.....			

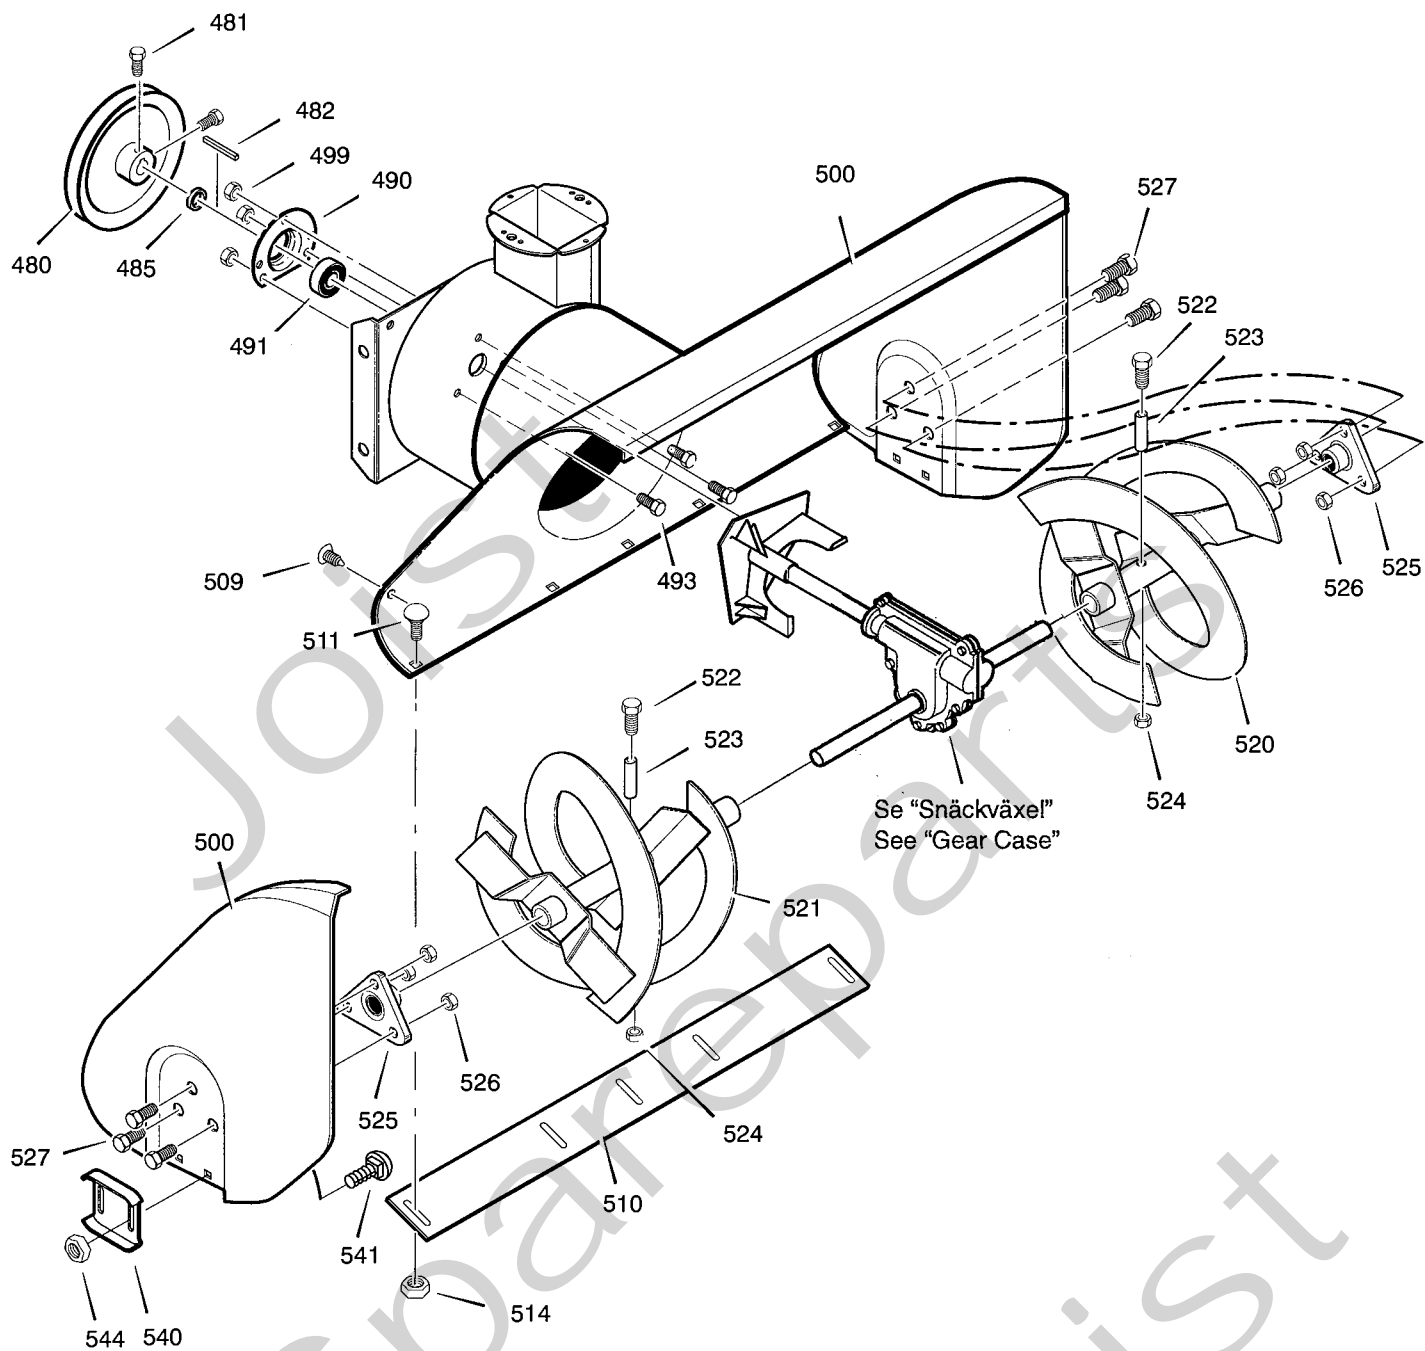


Utgåva Issue 2003-59	Bildnr Picture No 1325A	SNOW STORM SNÖSKRUV	SNOW STORM AUGER HOUSING	Sida Page 48
----------------------------	-------------------------------	------------------------	-----------------------------	--------------------


Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes
	2827								
X 480	1				1812-1854-01	Remskiva- snöskruv .....	Auger pulley .....		
481	2				1812-1119-01	Skruv .....	Bolt .....		
482	1				1812-1609-01	Kil .....	Key .....		
485	1				1812-1739-01	Distans .....	Spacer .....		
490	1				1812-1690-01	Kullagerhållare .....	Ball bearing retainer .....		
X 491	1				1812-1858-01	Kullager .....	Ball bearing .....		
493	3				9988-3613-16	Skruv .....	Screw .....		
499	3				9795-3631-02	Mutter .....	Nut .....		
X 500	1				1812-1850-01	Snöskruvhus .....	Auger housing .....		
509	2				1812-1430-01	Plugg .....	Plug .....		
X 510	1				1812-1843-01	Skrapskär .....	Scraper blade .....		
511	5				9899-3622-16	Skruv .....	Screw .....		
514	5				9795-3631-02	Mutter .....	Nut .....		
X 520	1				1812-1860-01	Snöskruv- vä .....	Auger- LH .....		
X 521	1				1812-1859-01	Snöskruv- hö .....	Auger- RH .....		
522	1				1812-9005-01	Brytbultsats .....	Shear bolt kit .....		
523	2				1812-0531-01	• Distans .....	• Spacer .....		
524	2				1812-0812-01	• Låsmutter .....	• Locking nut .....		
525	2				1812-0878-01	Lager .....	Bearing .....		
526	6				9743-3621-32	Mutter .....	Nut .....		
527	6				9988-3619-16	Skruv .....	Screw .....		
540	2				1812-1391-01	Släpsko .....	Height adjustor skid .....		
541	4				9899-3622-16	Skruv .....	Screw .....		
544	4				9795-3631-02	Mutter .....	Nut .....		

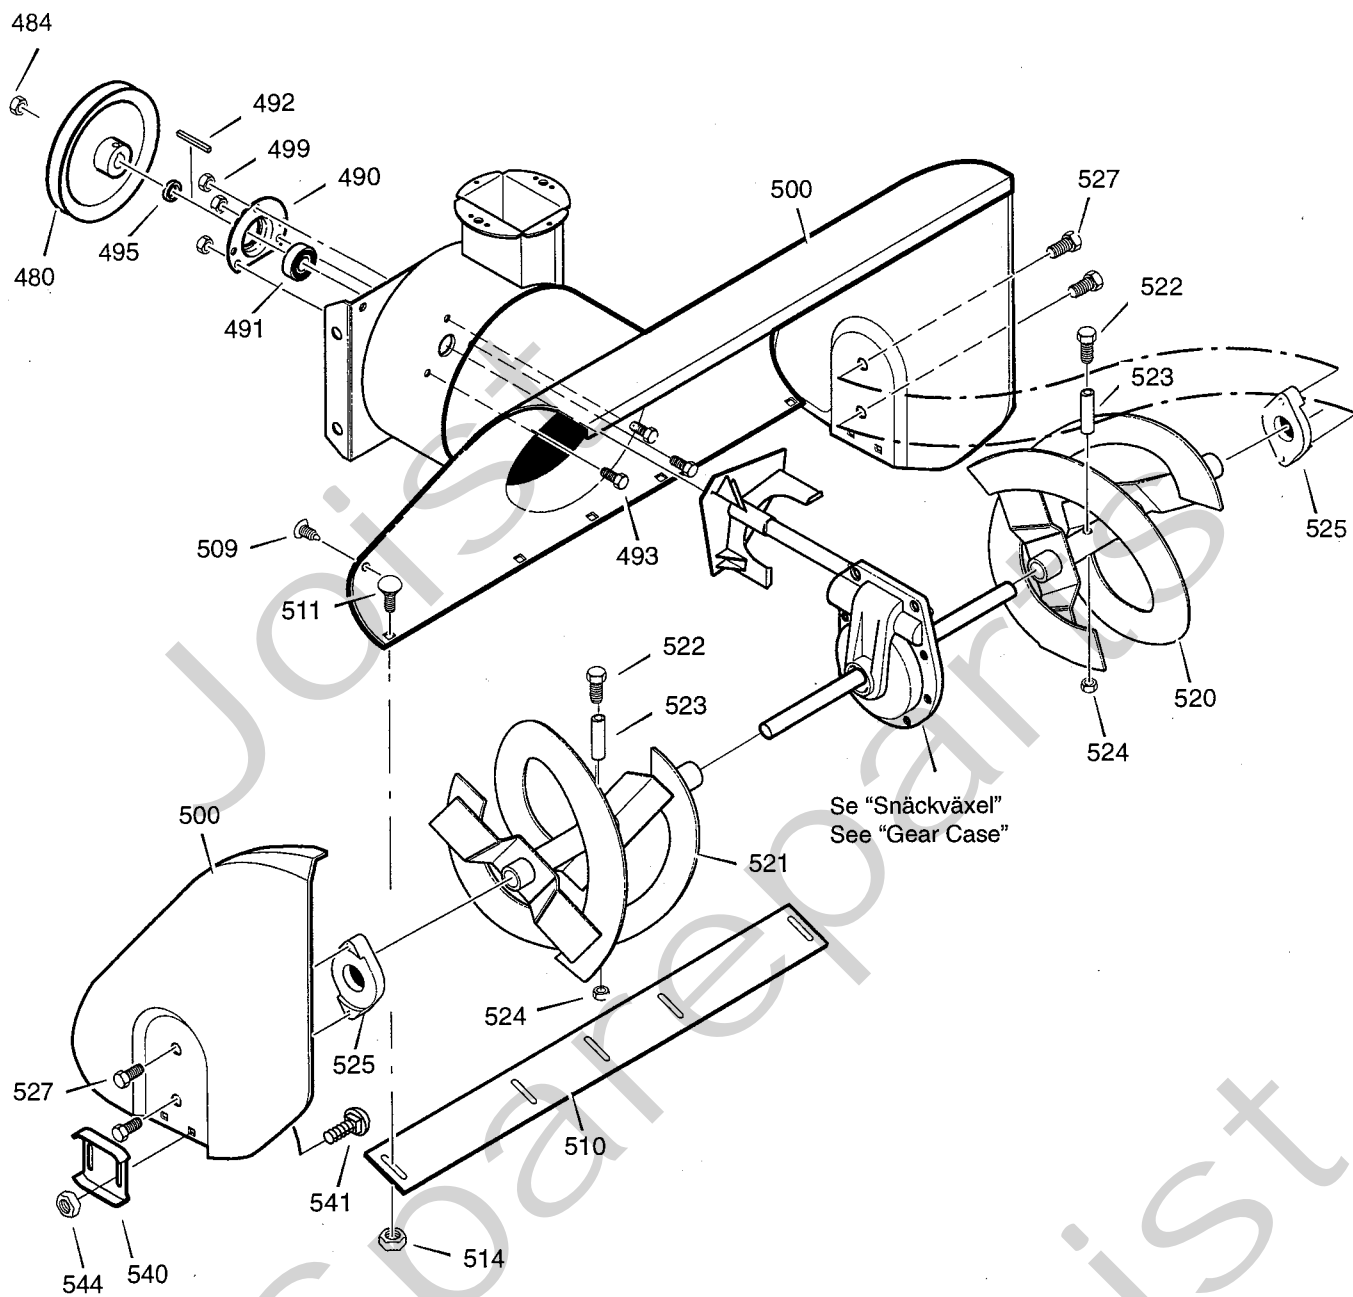

Utgåva Issue		Bildnr Picture No		SNOW BLIZZARD SNOW HURRICANE SNÖSKRUV		SNOW BLIZZARD SNOW HURRICANE AUGER HOUSING		Sida Page	
2003-59		1326						50	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2830	2840							
	480	1	1	1812-1261-01	Remskiva .....	Auger pulley .....			
	484	1	1	1812-1673-01	Mutter .....	Nut .....			
	490	1	1	1812-1690-01	Kullagerhållare .....	Ball bearing retainer .....			
X	491	1	1	1812-1858-01	Kullager .....	Ball bearing .....			
	492	1	1	1812-1609-01	Kil .....	Key .....			
	493	3	3	9988-3613-16	Skruv .....	Screw .....			
	495	1	1	1812-1739-01	Distans .....	Spacer .....			
	499	3	3	9795-3631-02	Mutter .....	Nut .....			
	500	1		1812-1731-01	Snöskruvhus .....	Auger housing .....			
	500		1	1812-1732-01	Snöskruvhus .....	Auger housing .....			
	509	2	2	1812-1430-01	Plugg .....	Plug .....			
	510		1	1812-1449-01	Skrapskär .....	Scraper blade .....			
	510	1		1812-1450-01	Skrapskär .....	Scraper blade .....			
	511	5	5	9899-3622-16	Skruv .....	Screw .....			
	514	5	5	9795-3631-02	Mutter .....	Nut .....			
X	520		1	1812-1837-01	Snöskruv- vä .....	Auger- LH .....			
X	520	1		1812-1841-01	Snöskruv- vä .....	Auger- LH .....			
X	521		1	1812-1838-01	Snöskruv- hö .....	Auger- RH .....			
X	521	1		1812-1842-01	Snöskruv- hö .....	Auger- RH .....			
	522	1	1	1812-9005-01	Brytbultsats .....	Shear bolt kit .....			
	523	2	2	1812-0531-01	• Distans .....	• Spacer .....			
	524	2	2	1812-0812-01	• Låsmutter .....	• Locking nut .....			
	525	2	2	1812-0347-01	Lager .....	Bearing .....			
	527	4	4	1133-0057-01	Skruv .....	Screw .....			
	540	2	2	1812-1391-01	Släpsko .....	Height adjustor skid .....			
	541	4	4	9899-3622-16	Skruv .....	Screw .....			
	544	4	4	9795-3631-02	Mutter .....	Nut .....			

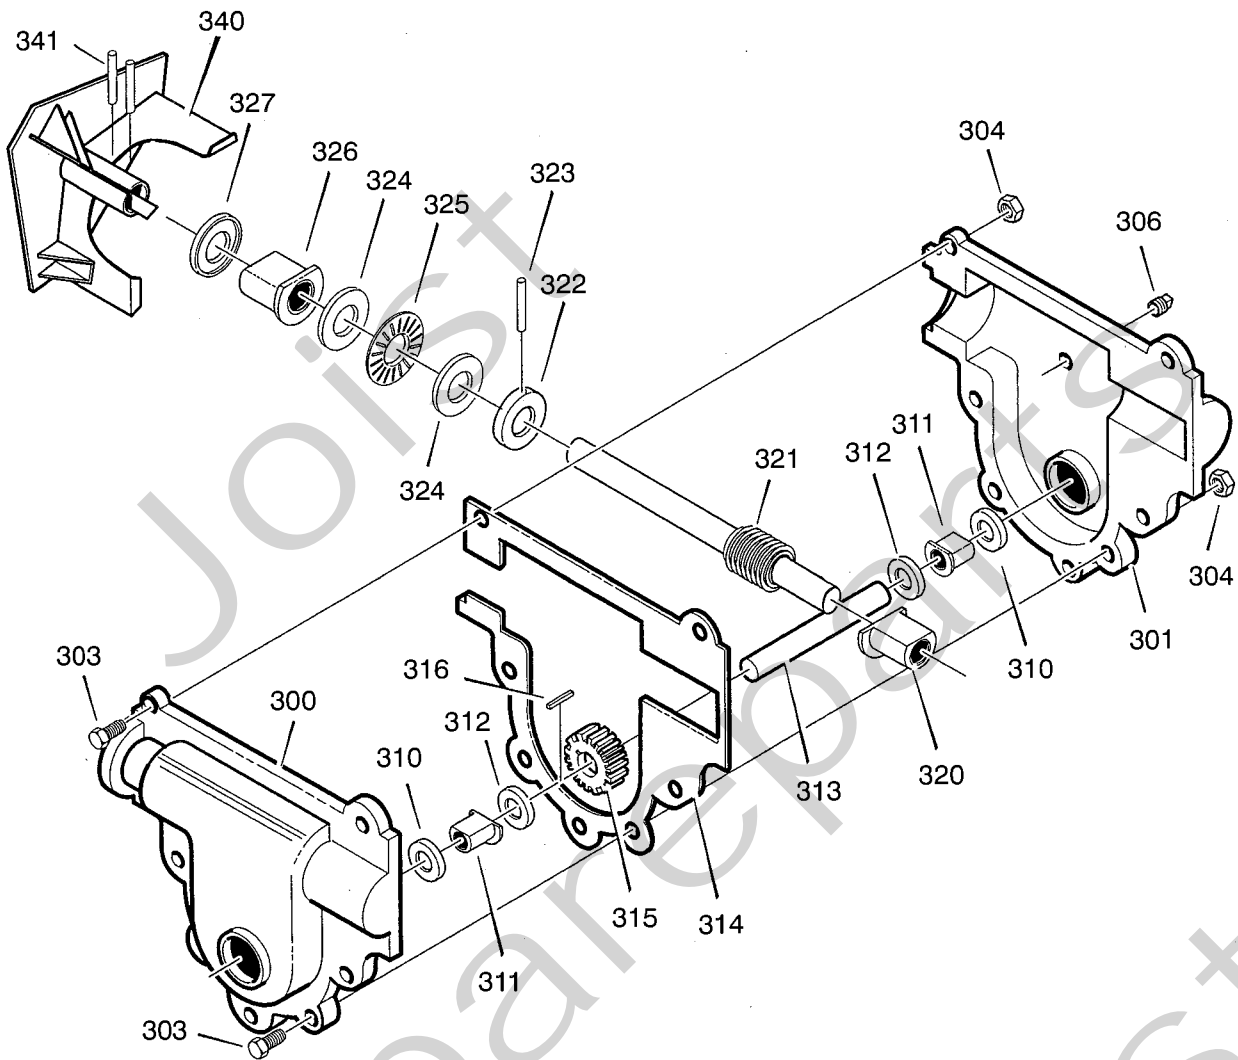


Utgåva Issue		Bildnr Picture No		SNOW STORM SNÄCKVÄXEL		SNOW STORM GEAR CASE		Sida Page	
2003-59		1323B						52	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827								
	300	1		1812-0909-01	Snäckväxelhus- hö .....	Gear case- R.H. ....			
	301	1		1812-0908-01	Snäckväxelhus- vä .....	Gear case- L.H. ....			
	303	7		9988-3519-16	Skruv .....	Screw .....			
	304	7		1812-1758-01	Mutter .....	Nut .....			
	306	1		1812-0856-01	Skruv .....	Screw .....			
	310	2		1812-0881-01	Tätningring .....	Oil seal .....			
	311	2		1812-1360-01	Flänslager .....	Flange bearing .....			
	312	2		1812-0857-01	Bricka .....	Thrust washer .....			
X	313	1		1812-1852-01	Snöskruvaxel .....	Auger shaft .....			
	314	1		1812-1361-01	Packning .....	Gasket .....			
	315	1		1812-0862-01	Snäckdrev .....	Worm gear .....			
	316	1		1812-1371-01	Kil .....	Woodruff key .....			
	320	1		1812-1359-01	Bussning .....	Bushing .....			
X	321	1		1812-1853-01	Ingående axel .....	Input shaft .....			
	322	1		1812-1321-01	Distans .....	Thrust collar .....			
	323	1		1133-0395-01	Stift .....	Roll pin .....			
	324	2		1812-0857-01	Bricka .....	Thrust washer .....			
	325	1		1812-0285-01	Nållager .....	Needle bearing .....			
	326	1		1812-1360-01	Flänslager .....	Flange bearing .....			
	327	1		1812-0881-01	Tätningring .....	Oil seal .....			
X	340	1		1812-1851-01	Fläkt .....	Impeller .....			
	341	2		1133-0395-01	Stift .....	Roll pin .....			

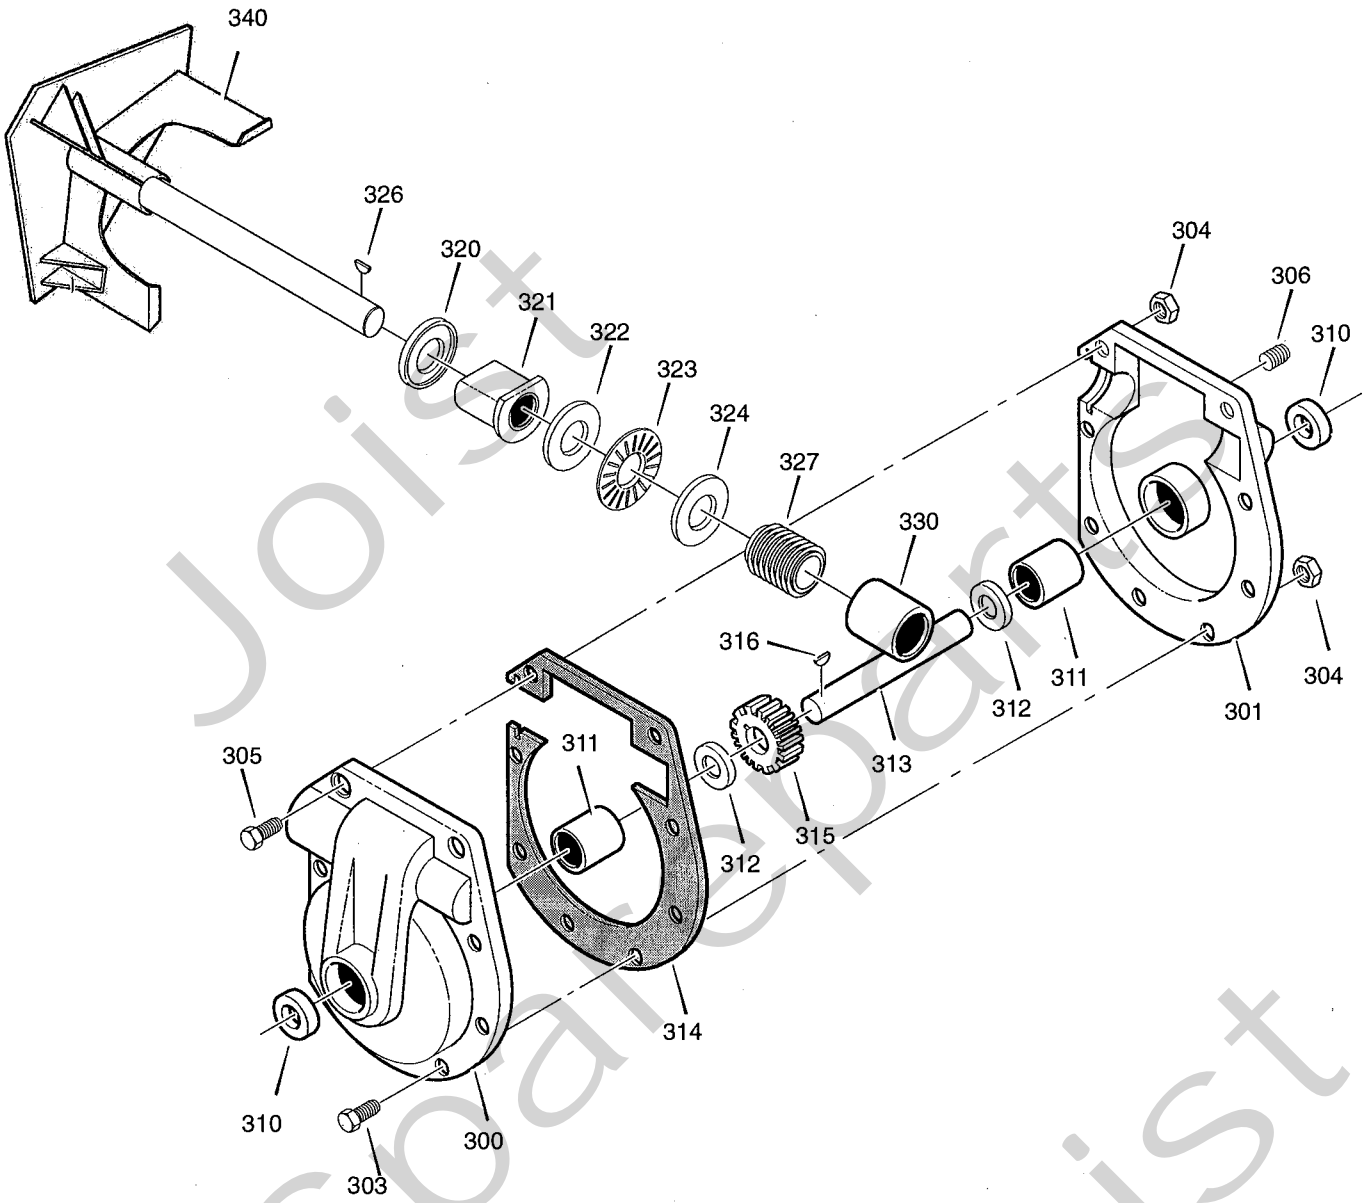




Utgåva Issue 2003-59		Bildnr Picture No 1324		SNOW BLIZZARD SNOW HURRICANE SNÄCKVÄXEL		SNOW BLIZZARD SNOW HURRICANE GEAR CASE		Sida Page 54	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2830	2840							
300	1	1		1812-0228-01	Snäckväxelhus- hö .....	Gear case- R.H. ....			
301	1	1		1812-0227-01	Snäckväxelhus- vä .....	Gear case- L.H. ....			
303	6	6		9987-5125-16	Skruv .....	Screw .....			
304	7	7		9743-5121-02	Mutter .....	Nut .....			
305	1	1		9987-5145-12	Skruv .....	Screw .....			
306	1	1		1812-0346-01	Oljeplugg .....	Oil plug .....			
310	2	2		1812-0344-01	Tätningring .....	Ring .....			
311	2	2		1812-0343-01	Lager .....	Bearing .....			
312	2	2		1812-0345-01	Bricka .....	Washer .....			
313		1		1812-1442-01	Snöskruvaxel .....	Auger shaft .....			
313	1			1812-1443-01	Snöskruvaxel .....	Auger shaft .....			
314	1	1		1812-0226-01	Packning .....	Gasket .....			
315	1	1		1812-0335-01	Drev .....	Worm gear .....			
316	1	1		1812-0409-01	Woodruffkil .....	Woodruffkey .....			
320	1	1		1812-0341-01	Tätningring .....	Ring .....			
321	1	1		1812-1259-01	Flänslager .....	Flange bearing .....			
322	1	1		1812-0857-01	Bricka .....	Thrust washer .....			
323	1	1		1812-0285-01	Nållager .....	Needle bearing .....			
324	1	1		1812-0857-01	Bricka .....	Thrust washer .....			
326	1	1		1812-0307-01	Kil .....	Key .....			
327	1	1		1812-0336-01	Snäckdrev .....	Gear .....			
330	1	1		1812-0297-01	Lager .....	Bearing .....			
340	1	1		1812-1735-01	Fläkt m.fläktaxel .....	Impeller assy .....			

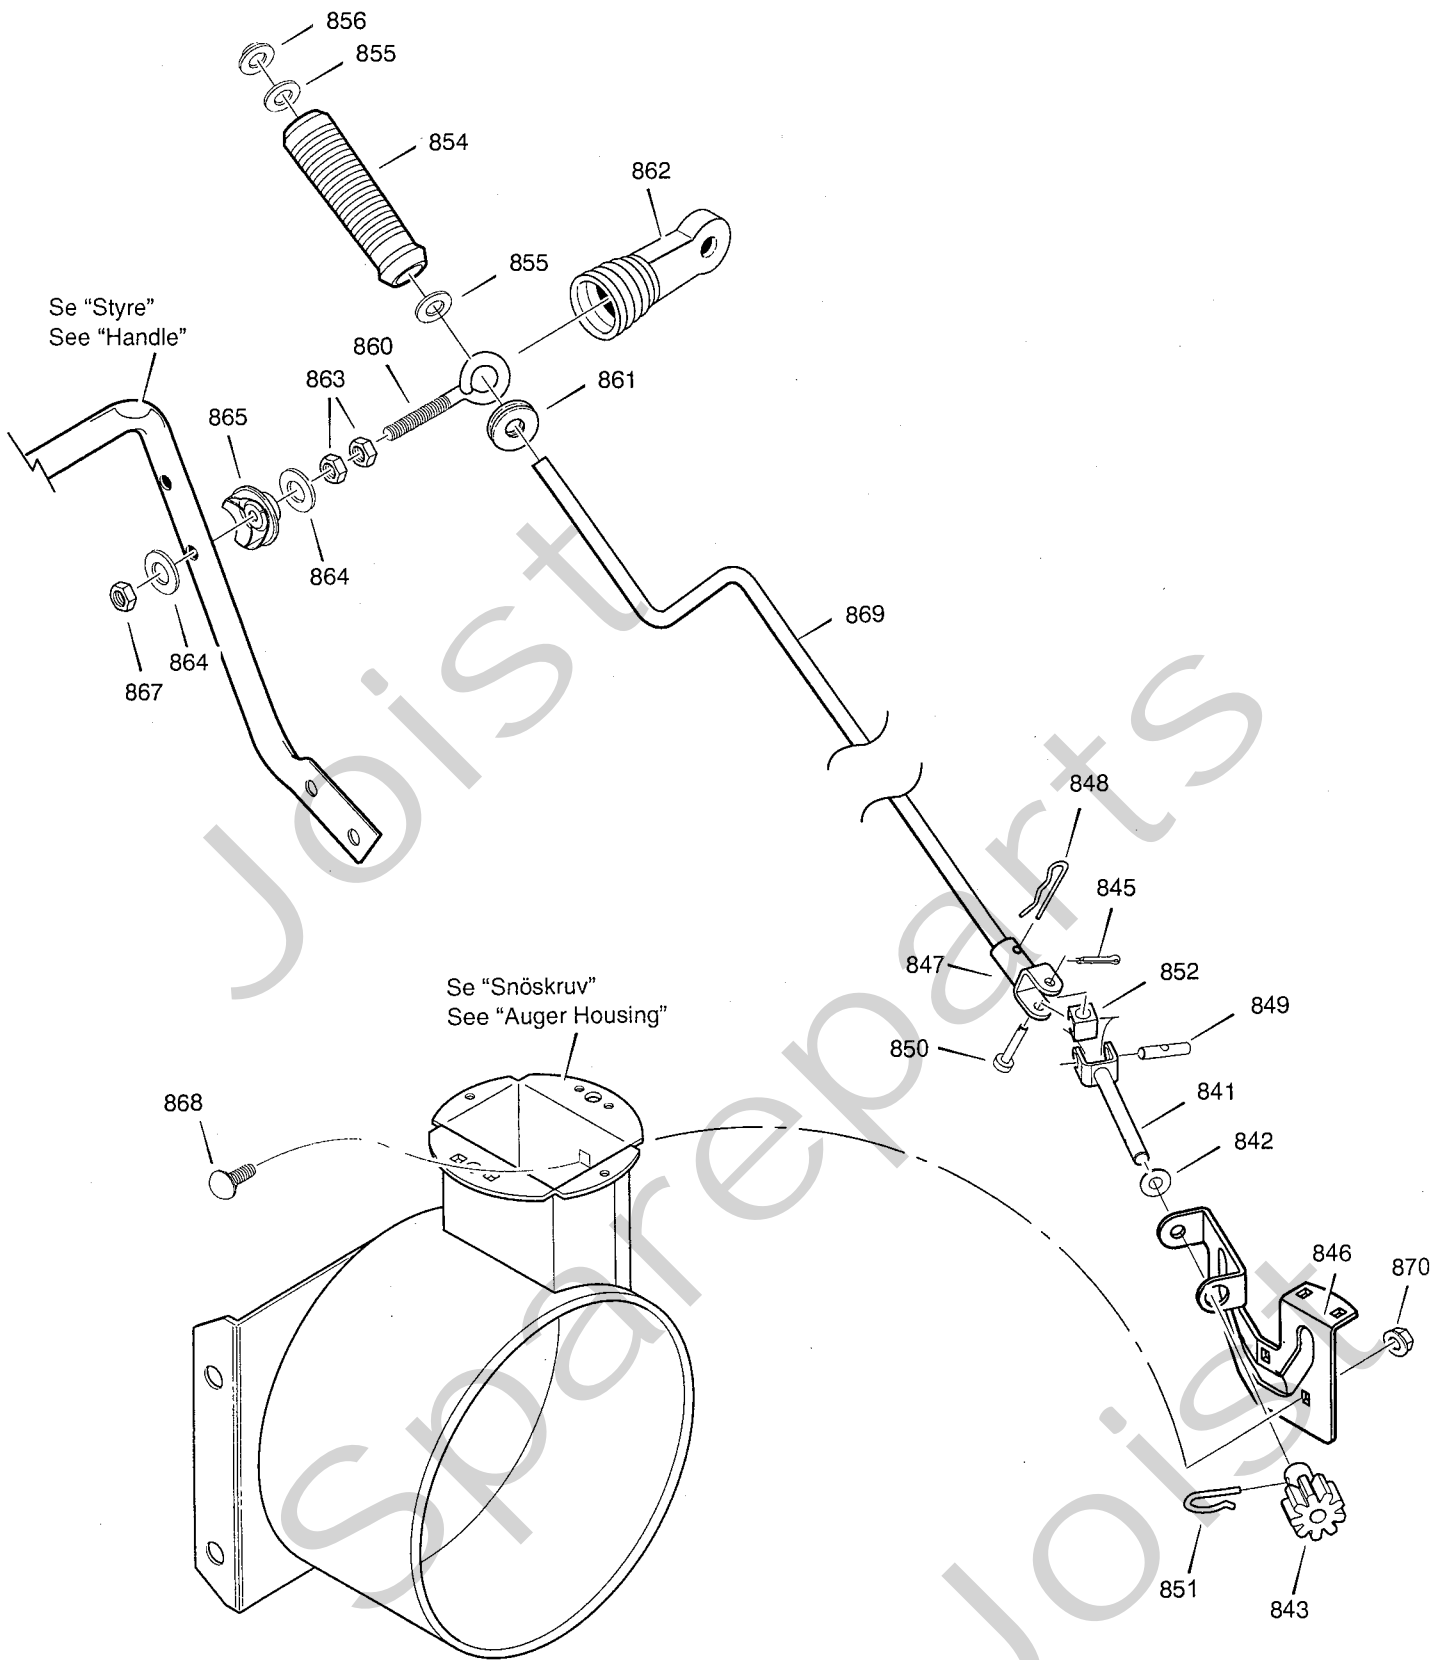

Utgåva Issue		Bildnr Picture No		SNOW STORM SNOW BLIZZARD SNOW HURRICANE INSTÄLLNINGSVEV		SNOW STORM SNOW BLIZZARD SNOW HURRICANE CHUTE ROD		Sida Page	
2003-59		1320B						56	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827	2830	2840						
841	1	1	1	1812-1794-01	Gaffelstäng .....	Yoke and rod .....		9T	
842	1	1	1	1133-0973-01	Kupad fjäderbricka .....	Curved spring washer .....			
843	1	1	1	1812-1706-01	Drev .....	Gear .....			
845	1	1	1	9599-0033-00	Saxsprint .....	Split pin .....			
846	1	1	1	1812-1793-01	Fäste .....	Bracket .....			
847	1	1	1	1812-1708-01	Gaffel .....	Yoke adapter .....			
848	1	1	1	1812-1511-01	Låsstift .....	Hair pin .....			
849	1	1	1	1812-1316-01	Axel .....	Universal pin .....			
850	1	1	1	1812-1318-01	Sprint .....	Clevis pin .....			
851	1	1	1	1812-1791-01	Låsnål .....	Hair pin .....			
852	1	1	1	1812-1317-01	Ledknut .....	Universal pivot block .....			
854	1	1	1	1812-1168-01	Handtag .....	Handle .....			
855	2	2	2	1812-1171-01	Bricka .....	Washer .....			
856	1	1	1	1812-1483-01	Låsning .....	Retainer .....			
860	1	1	1	1812-0394-01	Öglebult .....	Eye bolt .....			
860	1	1	1	1812-1821-01	Öglebult .....	Eye bolt .....			
861	1	1	1	1812-0203-01	Hylsa .....	Grommet .....			
862	1	1	1	1812-1170-01	Hylsa-öglebult .....	Boot-eye bolt .....			
862	1	1	1	1812-1822-01	Hylsa .....	Eye bolt boot .....			
863	2	2	2	9743-3721-32	Mutter .....	Nut .....			
864	2	2	2	9699-0035-02	Planbricka .....	Flat washer .....			
865	1	1	1	1812-1172-01	Adapter .....	Boot adaptor .....			
867	1	1	1	9743-3721-32	Mutter .....	Nut .....			
868	1	1	1	1812-1679-01	Vagnsbult .....	Carriage bolt .....			
869	1	1	1	1812-1707-01	Inställningsvev .....	Chute crank .....			
870	1	1	1	1812-1760-01	Mutter .....	Nut .....			

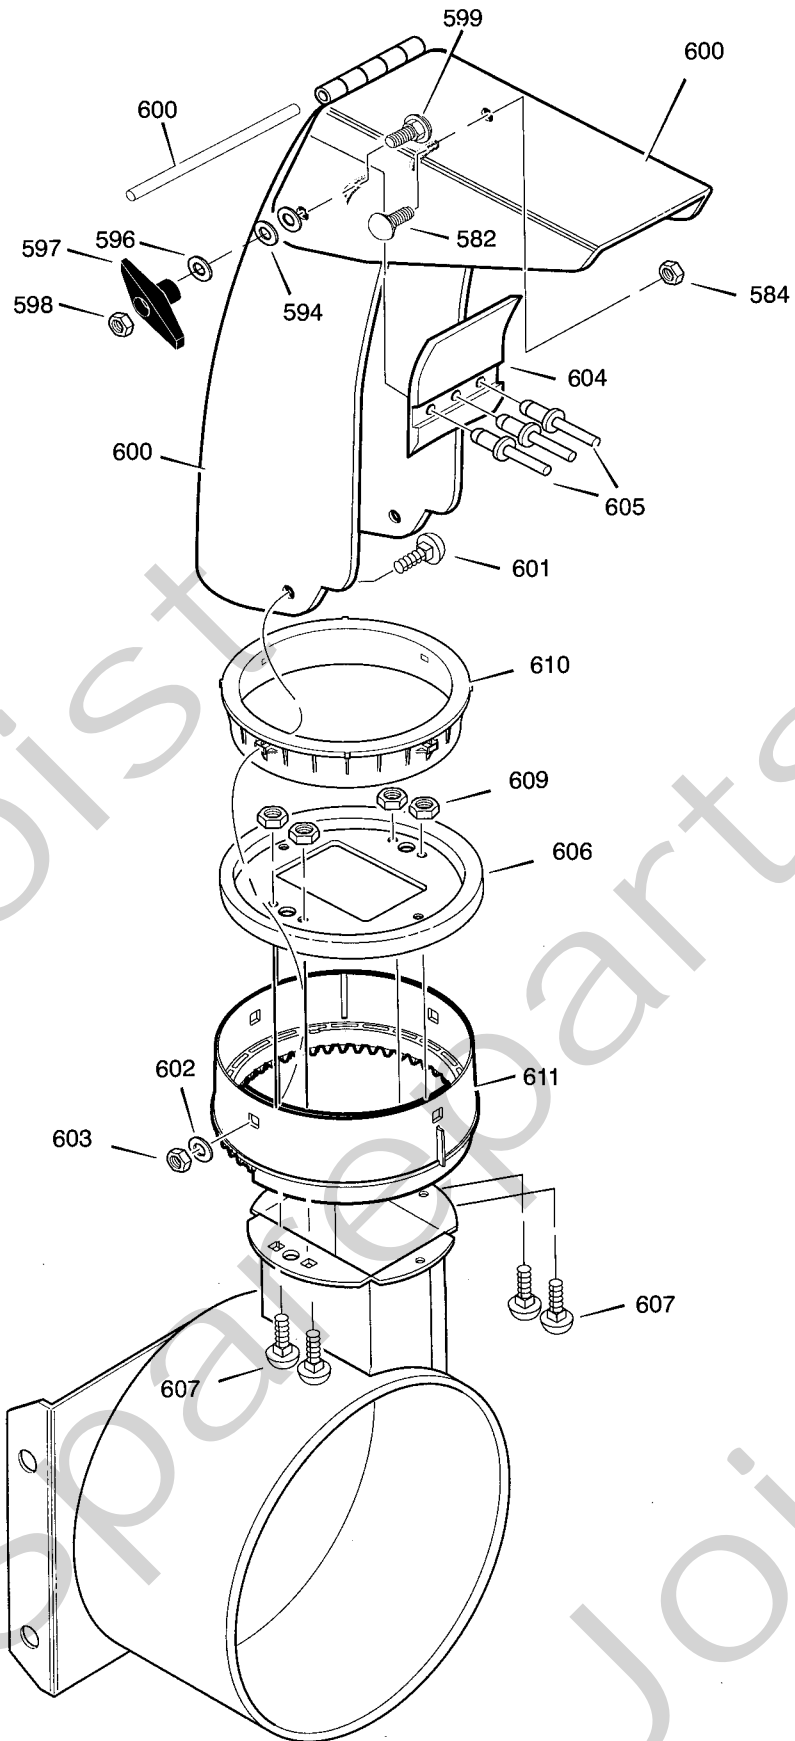

Utgåva Issue		Bildnr Picture No		SNOW STORM UTKAST		SNOW STORM DISCHARGE CHUTE		Sida Page	
2003-59		1327A						58	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2827								
582	1			9899-3625-16	Skruv .....	Screw .....			
584	1			9743-3621-32	Mutter .....	Nut .....			
594	1			9699-0029-02	Planbricka .....	Flat washer .....			
596	1			9699-0029-02	Planbricka .....	Flat washer .....			
597	1			1133-0932-01	Låsrott .....	T-knob .....			
598	1			1812-1759-01	Mutter .....	Nut .....			
599	1			9899-3625-16	Skruv .....	Screw .....			
X 600	1			1812-1866-01	Utkast kpl .....	Chute assy .....			
601	3			9899-3625-16	Skruv .....	Screw .....			
602	3			9699-0029-02	Planbricka .....	Flat washer .....			
603	3			9743-3621-32	Mutter .....	Nut .....			
604	1			1812-1436-01	Utkastskydd .....	Chute flap .....			
605	3			1812-1462-01	Popnit .....	Pop rivet .....			
606	1			1812-1336-01	Utkastplatta .....	Chute rotate collar .....			
X 607	4			1812-1831-01	Skruv .....	Screw .....			
609	4			1812-1760-01	Mutter .....	Nut .....			
610	1			1812-1366-01	Utkastring- inre .....	Chute rot. ring- inner .....			
611	1			1812-1787-01	Utkastring- yttre .....	Retainer ring- outer .....			



Utgåva Issue 2003-59		Bildnr Picture No 1328B		SNOW BLIZZARD SNOW HURRICANE UTKAST		SNOW BLIZZARD SNOW HURRICANE DISCHARGE CHUTE		Sida Page 60	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2830	2840							
580	1	1		1812-1464-01	Utkastskärm .....	Upper chute .....			
582	2	2		1133-1023-01	Skruv .....	Screw .....			
584	2	2		9743-3621-32	Mutter .....	Nut .....			
585	2	2		1133-1023-01	Skruv .....	Screw .....			
586	2	2		1812-0667-01	Plastbricka .....	Plastic washer .....			
593	2	2		1812-0667-01	Plastbricka .....	Plastic washer .....			
594	2	2		9699-0029-02	Planbricka .....	Flat washer .....			
595	2	2		9683-0030-02	Låsbricka .....	Lock washer .....			
597	2	2		1133-0932-01	Lås ratt .....	T-knob .....			
598	2	2		1812-1759-01	Mutter .....	Nut .....			
600	1	1		1812-1472-01	Utkaströr .....	Lower chute .....			
601	3	3		9899-3625-16	Skruv .....	Screw .....			
602	3	3		9699-0029-02	Planbricka .....	Flat washer .....			
603	3	3		9743-3621-32	Mutter .....	Nut .....			
604	1	1		1812-1569-01	Skyddstunga .....	Flap .....			
605	3	3		1812-1462-01	Popnit .....	Pop rivet .....			
606	1	1		1812-1336-01	Utkastplatta .....	Chute rotate collar .....			
X 607	4	4		1812-1831-01	Skruv .....	Screw .....			
609	4	4		1812-1760-01	Mutter .....	Nut .....			
610	1	1		1812-1366-01	Utkastring- inre .....	Chute rot. ring- inner .....			
611	1	1		1812-1787-01	Utkastring- yttre .....	Retainer ring- outer .....			